





10 - Printing Test & Configuration Pages

Written By: Eric Sutter

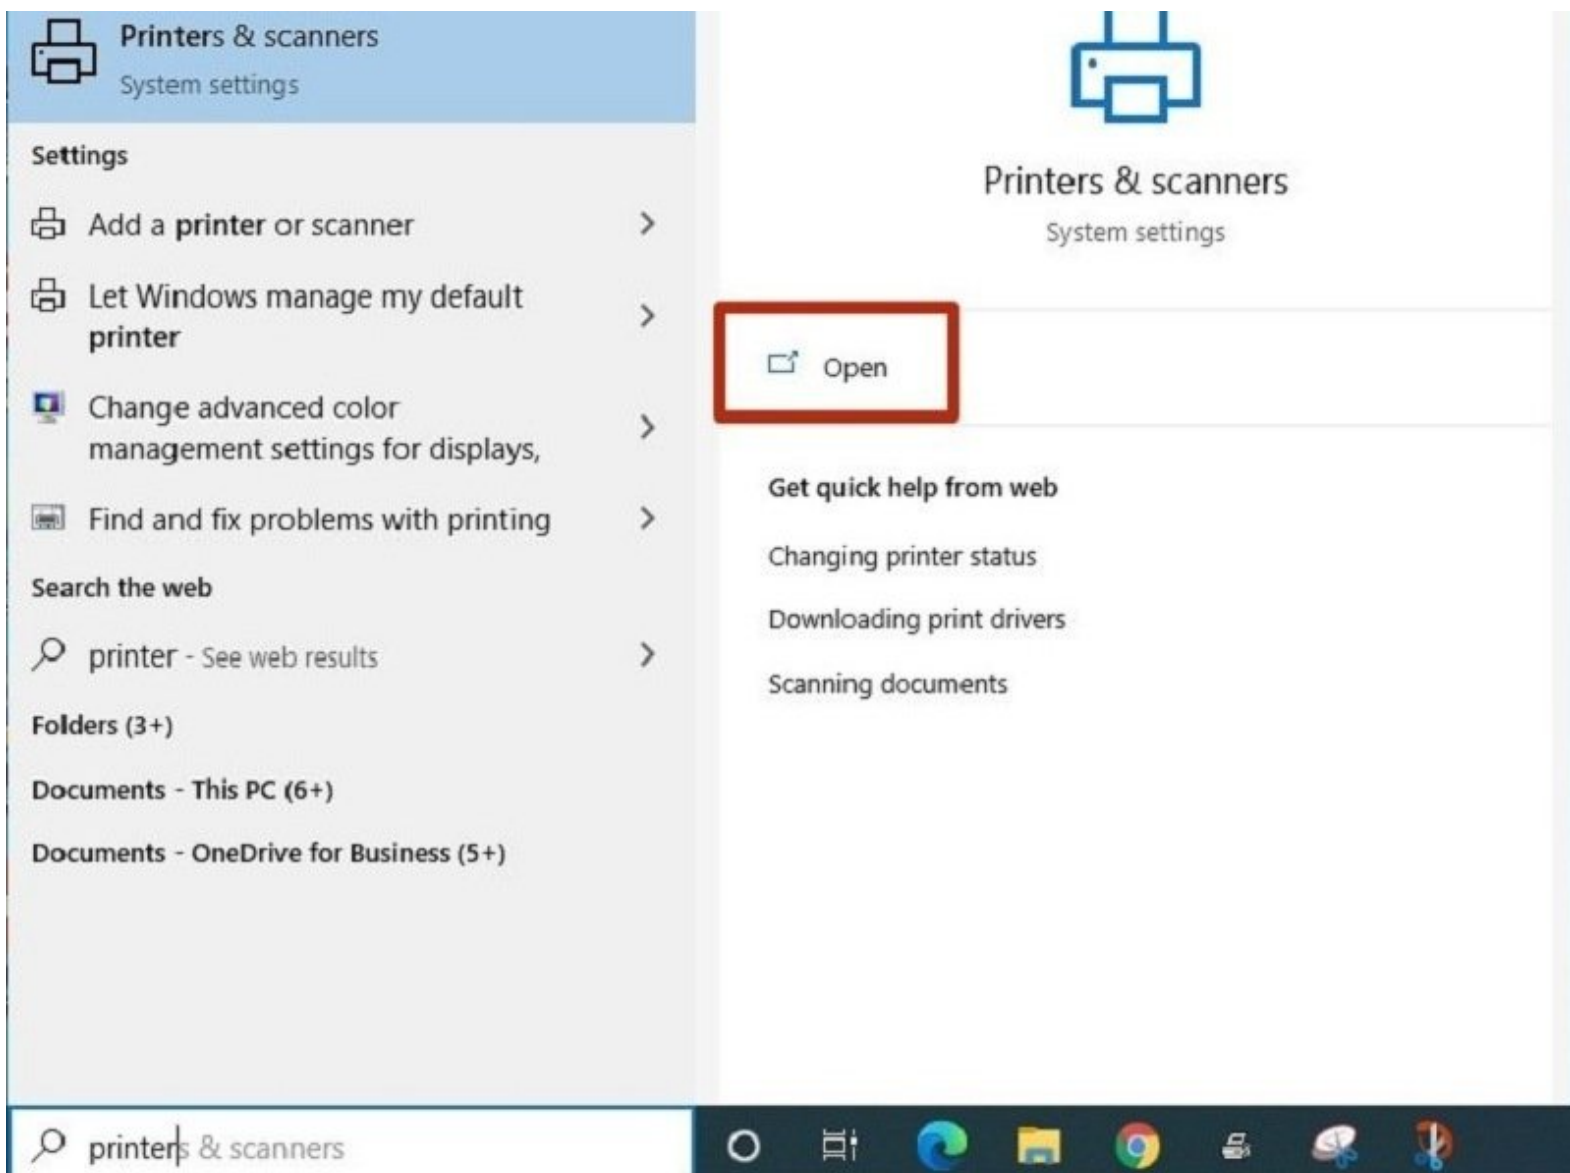


Step 1 — Open driver options for the printer

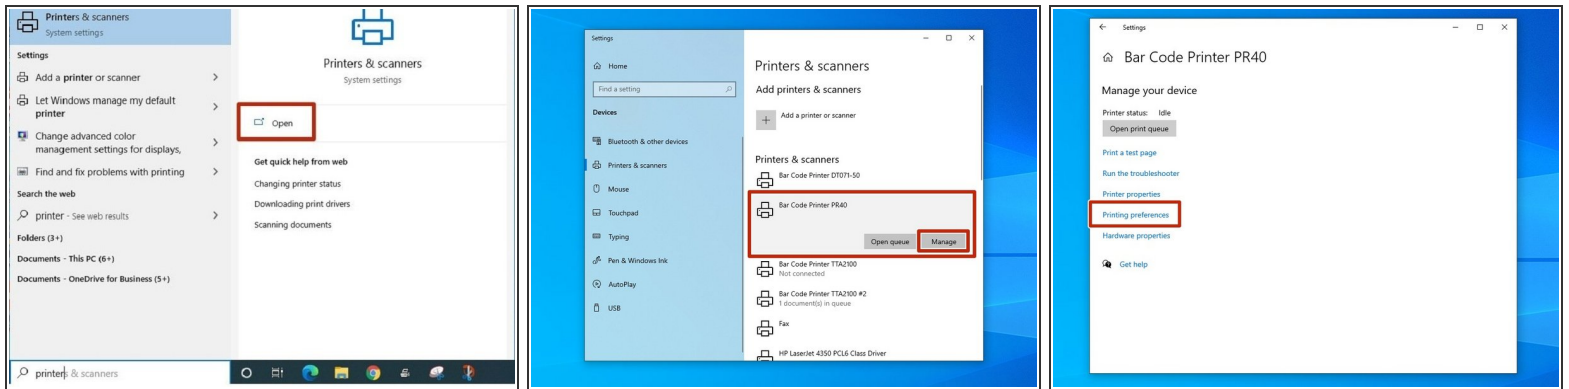

- Search for printers and scanners in the taskbar search bar.
- Confirm that the selection looks like the first picture, and hit "Open."
- Click on the printer you set up in the previous guides.
- In this case, I named the printer "Bar Code Printer PR40."
- Select the "Manage" option.
- Select the "Printer Properties" option.

Step 2 — Print Test Page from Printer Driver

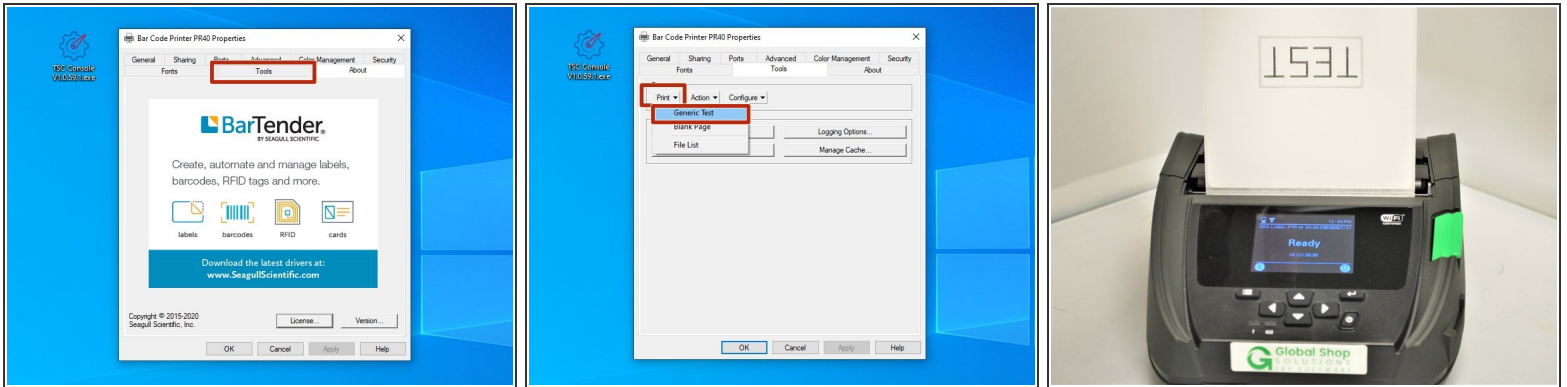

- Select the "Tools" tab at the top of the new window.
 - Click on the drop-down menu labeled "Print" in the "Printer" section.
 - Select "Generic Test" from the list of options.
 - This should print a test label, which should look like the example image.
- ❗ *If no page printed, check that the roll of labels is loaded correctly, and that the correct printing options are selected.*

Step 3 — Printing the Configuration Page for GS Representatives



- Select the 'Menu' on the home screen of the printer
- Choose 'Diagnostic'
- Select 'Print Config'

Step 4 — Checking the Labels



- The printer will begin printing and you will see the screen shown in Image 1.
- Once it is done printing, you will then have the three labels shown in Image 2 from the Test print and the Configuration Print.