



12 - Using the Printer Screen

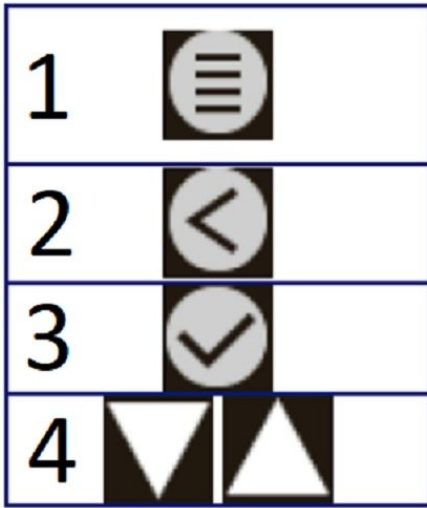
Written By: Eric Sutter



Step 1 — Understanding the Screen and Buttons

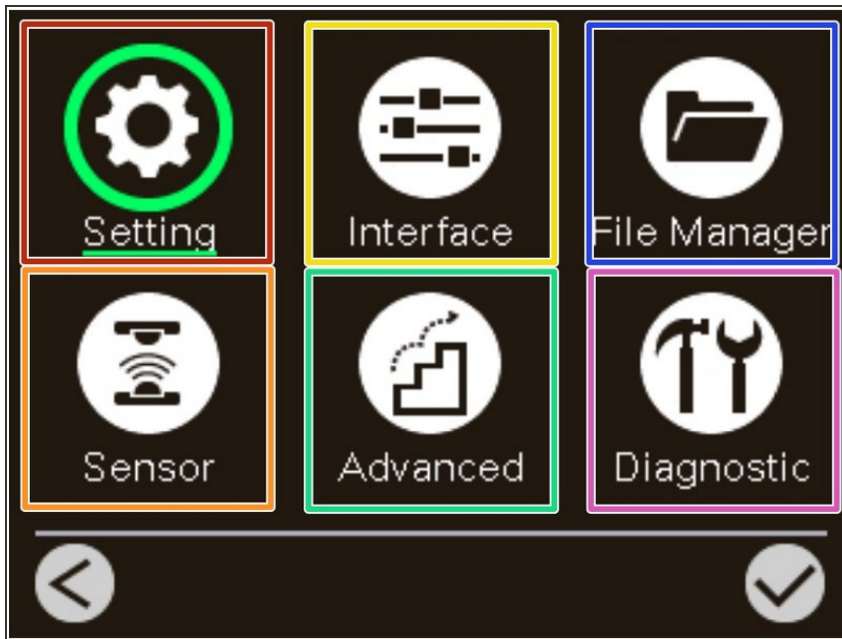


- The buttons can be used to perform numerous printer functions without the use of a separate computer. There is:
 - **Menu Key** which correlates with the menu icon on the home screen;
 - ① *In the Menus, this button correlates with the 'Back' icon;*
 - **Enter Key** which correlates with the feed icon on the home screen;
 - ① *In the Menus, this button correlates with the 'Select' icon*
 - **Navigational Keys** used to select items, menu selection, and navigation in the interface;
 - **Power Button** used to power on and off the printer.

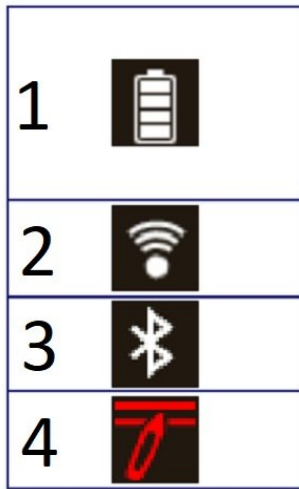
Step 2 — Icons on the LCD

- 1. Enter the menu list
- 2. Back button
- 3. Enter cursor (be marked in green) located option
- 4. Scroll down button/ Scroll up button

Step 3 — Main Menu Overview



- There are 6 categories for the main menu. You can easily set the settings of the printer without connecting the computer.
- **Setting** can set up the printer settings for TSPL & ZPL2.
- **Sensor** is used to calibrate the selected media sensor. We recommend calibrating the sensor before printing when changing the media.
- **Interface** is used to set the printer interface settings.
- **Advanced** is used to set the printer language, initialization, battery information, LCD display setting %...etc.
- **File Manager** is used to check/manager the printer available memory.
- **Diagnostic** is used to review the printer to troubleshoot problems and other issues.

Step 4 — LCD control panel icon indication

- 1. Charging Level;
 - 1 of 4 bars: 0-25%
 - 2 of 4 bars: 25-50%
 - 3 of 4 bars: 50-75%
 - 4 of 4 bars: 75-100%
- 2. Wi-Fi is enabled
- 3. Bluetooth is enabled
- 4. Printhead cleaning notice