




# Enabling Battery Saver Functionality in BIOS

Written By: Iroh

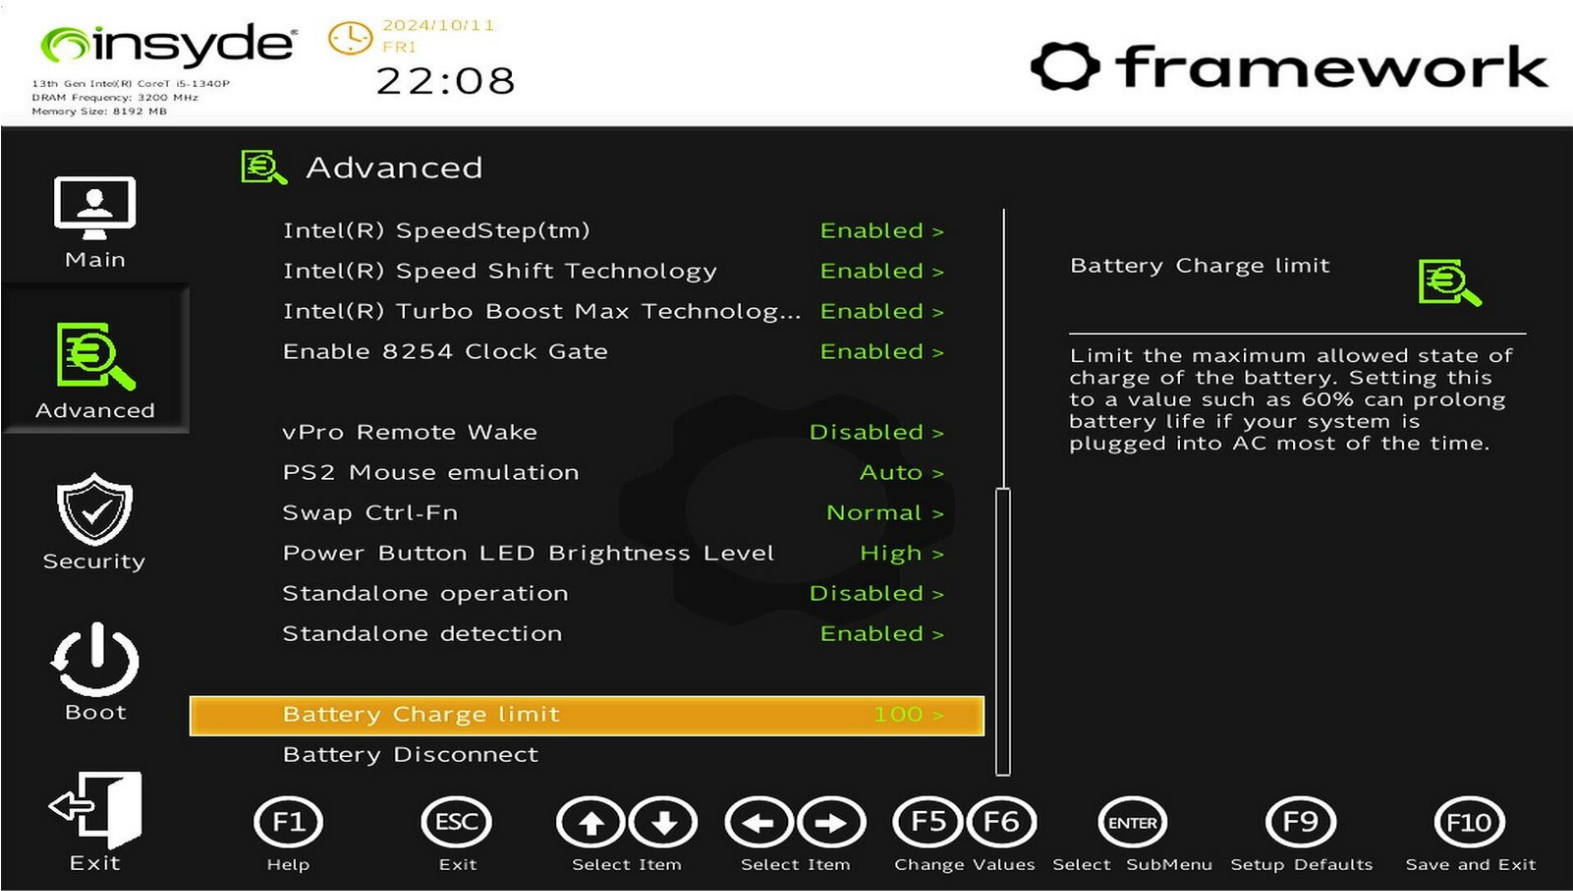

## INTRODUCTION

This guide will assist you in changing your BIOS setting enabling Battery Saver Functionality/ max charge percentage to improve the longevity of your Battery. Please follow the below steps depending on the device you are using.

**Step 1:** Needs to be followed for all devices.

**Step 2:** Intel® 11th & 12 Gen - (Framework 13)

**Step 3:** Intel® 13th Gen - (Framework 13)

**Step 4:** Intel® Core™ Ultra Series 1 - (Framework 13)

**Step 5:** AMD Ryzen™ 7040 Series - (Framework 13)

**Step 6:** AMD Ryzen™ 7040 Series - (Framework 16)


## Step 1 — Enter BIOS Setup Utility



⚠ Start with the device fully powered off (Shut Down).

- Press the power button on your device turning it on.
- Immediately after, press the "F2" key rapidly until you have entered the Setup Utility.
- ① Follow the below steps specific to the device/ Mainboard you are using.

## Step 2 — Intel® 11th & 12 Gen - (Framework 13)

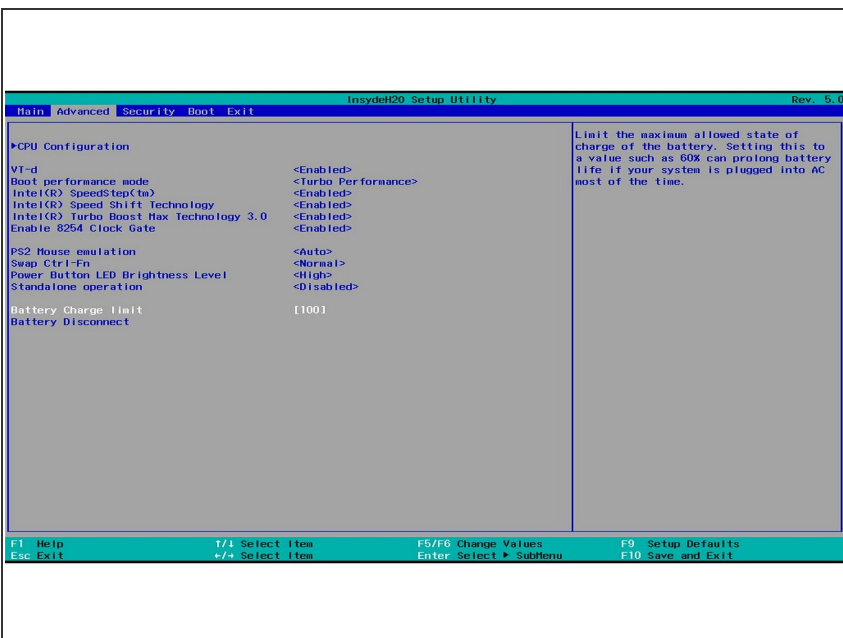

- Use the arrow keys to navigate to the advanced menu, and go to the bottom of the list.
- Go to the line that says "Battery Charge Limit" and change the value to "90" and press "Enter".
- Press F10 to "Save & Exit" and the device will reboot itself.

## Step 3 — Intel® 13th Gen - (Framework 13)



- Using the Arrow Keys, navigate to "Setup Utility" and press "Enter".
- Navigate to the "Advanced" tab on the left and go down to the option that says "Battery Charge Limit".
  - Change this value to "90" and press "Enter".
- Press F10 to "Save & Exit" and the device will reboot itself.

## Step 4 — Intel® Core™ Ultra Series 1 - (Framework 13)



- Make sure you are on BIOS 3.04. Once you are on this BIOS, this is enabled by default.
- Using the Arrow Keys, navigate to "Setup Utility" and press "Enter".
- Navigate to the "Advanced" tab on the left and go down to the option that says "Battery Extender".
  - Change this value to "Enabled" and press "Enter".
- Press F10 to "Save & Exit" and the device will reboot itself.

## Step 5 — AMD Ryzen™ 7040 Series - (Framework 13)



- Using the Arrow Keys, navigate to "Setup Utility" and press "Enter".
- Navigate to the "Advanced" tab on the left and go down to the option that says "Battery Charge Limit".
  - Change this value to "90" and press "Enter".
- Press F10 to "Save & Exit" and the device will reboot itself.

## Step 6 — AMD Ryzen™ 7040 Series - (Framework 16)



- Using the Arrow Keys, navigate to "Setup Utility" and press "Enter".
- Navigate to the "Advanced" tab on the left and go down to the option that says "Battery Charge Limit".
  - Change this value to "90" and press "Enter".
- Press F10 to "Save & Exit" and the device will reboot itself.