



Go Rugged De-Pin & Re-Pin Installation

Written By: Matthew Reilly



— Harness De-pin & Re-Pin Instructions





- ① The steps outlined in this guide are to assist with de-pinning and re-pinning the Geotab GO RUGGED. To learn how to de-pin and re-pin the Connector, follow the steps next

— Remove the wedge lock




- Take Connector 1 and remove the wedge lock
- ① To do this, use needle nose pliers.

— De-Pin connector 1

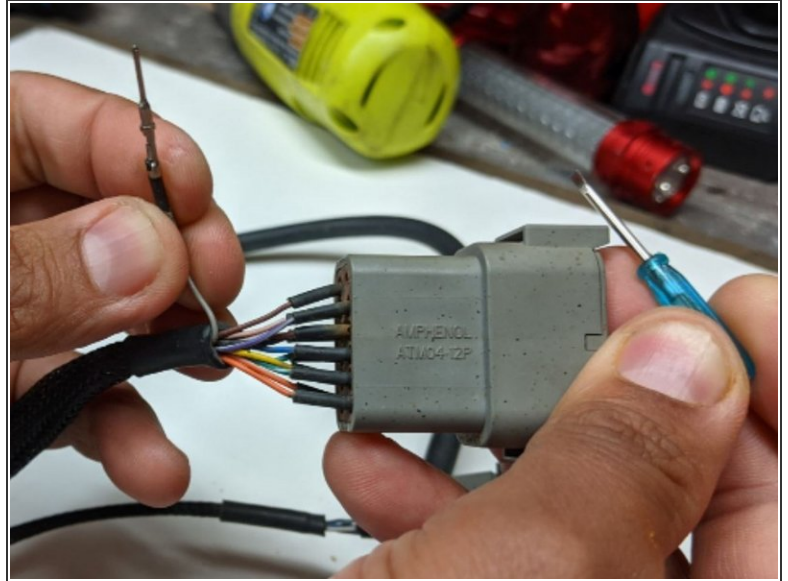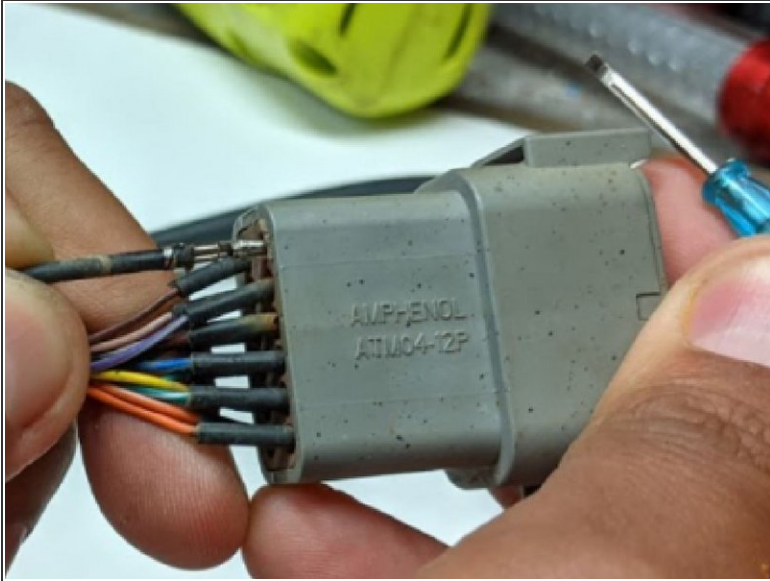


- With the screwdriver provided, push down on each tab inside the Connector. This allows for the pin to unlock and slide out. Repeat this step for all the pins to completely de-pin the Connector

— De-Pin connector 2

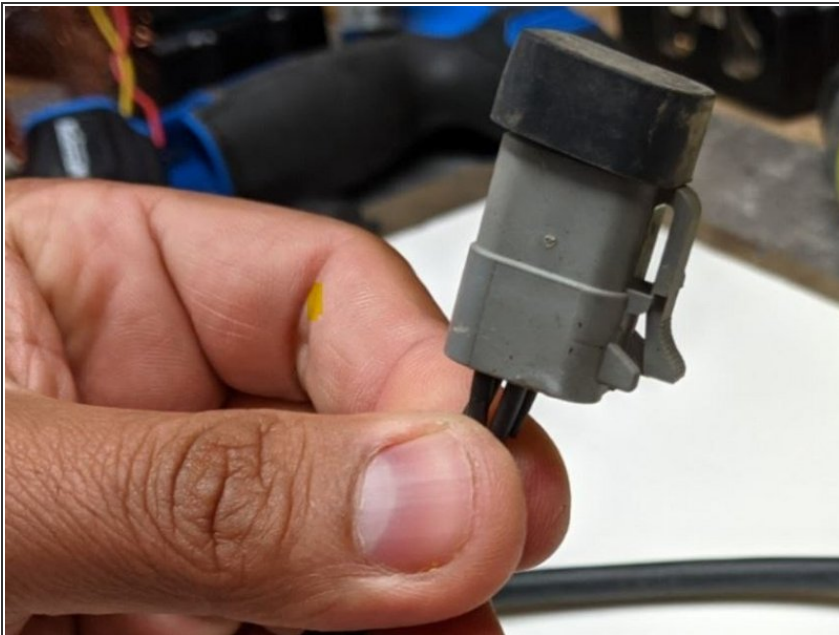

- Repeat previous step for Connector 2 on the GO RUGGED Harness.

— Re-Pin connectors

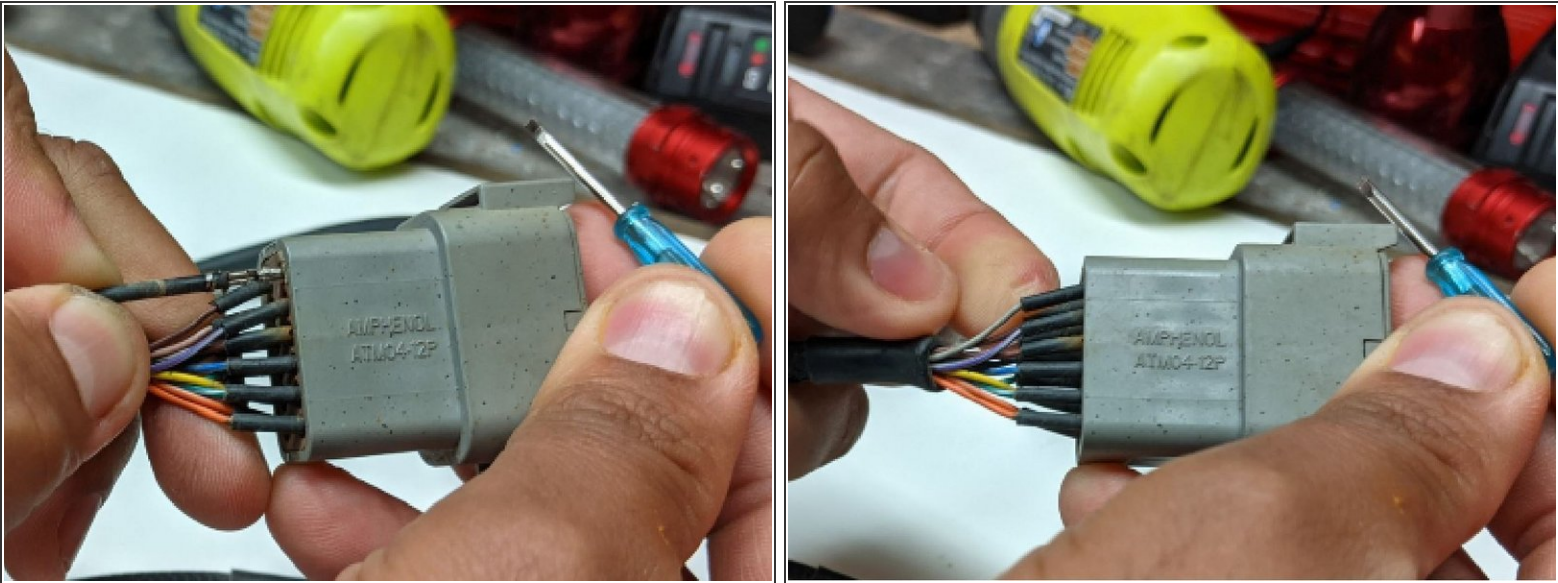


- To re-pin, slide the pins back into their correct slots for both Connectors. Lightly tug on them to confirm they lock back in place
- ⓘ Use the Wiring Legend for reference.

— Wiring Legend

Connector 1	Connector 2	Wire Color
1		Orange
2		Green/White
3		Blue/White
4		Brown/White
5		Purple/White
6		Grey
7		Brown
8		Pink
9		Black
10		Green
11		Yellow
12		Orange/White
	2	Blue
	3	Black/White
	4	White
	5	Purple

ⓘ The pin numbers are labeled on the Connectors.

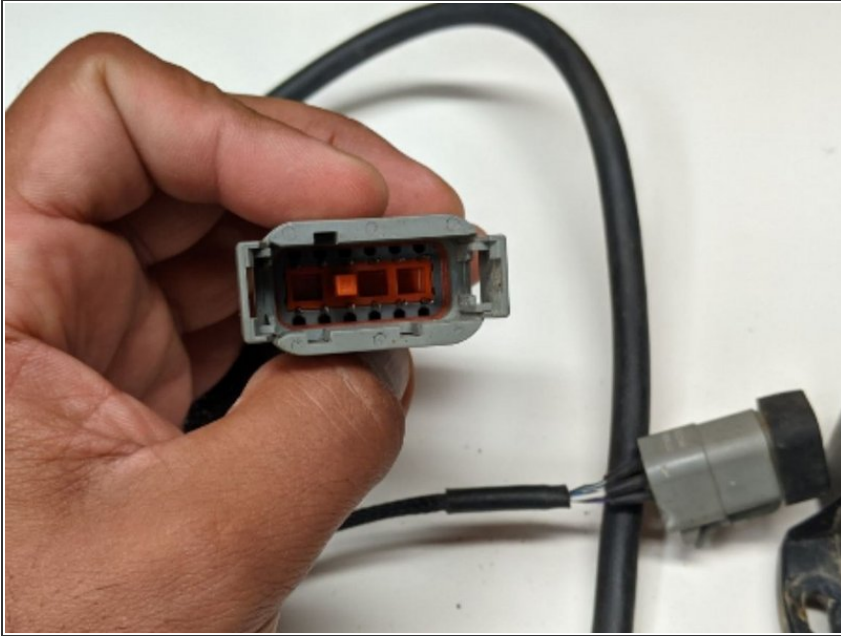

- Take the locking wedge and push it back into place after all wires have been inserted and locked