



GO Anywhere Asset Tracker

This guide will take you step by step through the installation of a GO Anywhere Asset Tracker

Written By: Jason Fox



INTRODUCTION

[video: https://www.youtube.com/watch?v=2w_s4oxGDQE]

This guide describes how to install a GO Anywhere Asset Tracker.



TOOLS:

- [1/4" Metric Socket Set with Ratchet or Driver](#) (1)
- [Multi-Bit Screwdriver with Assorted Bits](#) (1)
- [Cordless Drill](#) (1)
- [Assorted Drill Bits](#) (1)



PARTS:

- [GO Anywhere Asset Tracker](#) (1)

— GO Anywhere Asset Tracker

- ⚠ Do not attempt to install, reconfigure or remove any product from a vehicle while the vehicle is in motion or otherwise in operation. All installation, configuration or removal must be done only in stationary vehicles which are securely parked.
- ⚠ Attempting to service devices while the vehicle is in motion could result in malfunctions or accidents, leading to death or serious personal injury.



- ⓘ Before installation, make note of the following:
 - ★ GO Anywhere device serial number
 - ⓘ The serial number is printed above the barcode on the sticker on the bottom of the GO Anywhere device
 - ★ Odometer/engine hours
 - ★ Fleet alias/number/ID
 - ★ License plate number
 - ★ VIN

— Activating GO Anywhere



- ✦ Activate the device by removing the magnetic strip.
 - ① When performing the activation, ensure the device has a clear line of sight to the sky. The activation process may take up to five minutes.
- **LED state** - Flashing green.
 - **Status** - Activation in progress.
 - **Action** - Do not touch or move the device.
- **LED state** - Solid green.
 - **Status** - Activation successful.
 - **Action** - Success. No action required.

— Activating GO Anywhere



- **LED state** - Flashing red.
 - **Status** - Activation failed.
 - **Action** - Contact support.
 - **LED state** - Solid red.
 - **Status** - Activation failed.
 - **Action** - Check temperature and cell network - then retry.
(operating range -40 to +85 degrees celsius)
- ☒ To attempt another activation, re-apply the magnetic strip below the LED (ensuring that you don't cover the LED). Leave the magnetic strip in place for at least 5 seconds and then remove it.

— Identify Mounting Location



- Find a suitable location to install the device on your asset.
- ⓘ The GO Anywhere must have optimal line of sight to the sky with no metal obstructions that interfere with the signal.

— Mounting GO Anywhere with Self-Tapping Screws



- Secure the device by using 3 self tapping screws.
- ⚠ **Before drilling, check behind the mounting location to ensure the area is clear of any obstructions or electrical wires/components.**

— Mounting GO Anywhere with Magnetic Screws



- Fasten the 3 magnetic feet in place using the magnetic screws and install the magnet covers.
- Once complete, install the device on your asset.

— Serial Number Sticker



- ① Place the serial number sticker in a suitable location for future reference

