

907INTC, 907INTD and 907INTK Mercedes Sprinter W907 Alarm Interface Installation Manual

Installation guide for 2019-2026 Mercedes and Freightliner Sprinter van (907) alarm integration CAN interface.

Written By: Mid City Support



INTRODUCTION

This interface will make adding an alarm to a 2019 - 2026 Mercedes or Freightliner van simple-giving door triggers, parking lights, and OEM key fob control over the vehicles CAN network.

If you purchased the plug & play alarm kit from Mid City Engineering, the alarm will come with universal instructions for the alarm brain. Please refer to the alarm instructions for basic alarm installation information, accessory connections, and wiring schematic, but please note the alarm is a universal alarm and will have many extra wires that are not used for this application. This guide will specify which wires for the alarm brain will need to be connected for basic alarm operation.

Note: If installing a Directed/Viper alarm, **do not** use the 3X10 or 3X05 alarms as they are not supported at this time.

Installation for the interface and alarm requires the following connections to the vehicle (all connections are made on the passenger side):

- 12V constant power (to alarm brain)
- Chassis ground (to alarm brain)
- 12V Ignition power (to alarm brain)
- CAN high/CAN low
- Data cable (connection between alarm module and CAN interface). This cable will supply power and ground to the CAN interface

In addition to the connections above, the Compustar alarm DAS sensor will need to be mounted to the firewall or other suitable location, the siren for the alarm connected and mounted, and whatever alarm accessories are being used (RF remotes, smart phone control, RPS touch, EZ go, indicator LED, thermistor, glass break sensor, etc.)

In addition to the connections above, the Compustar alarm DAS sensor will need to be mounted to the firewall, the siren for the alarm connected and mounted, and whatever alarm accessories are being used (RF remotes, smart phone control, RPS touch, EZ go, indicator LED, thermistor, glass break sensor, etc.)

Note: if installing with a Directed/Viper alarm, refer to Directed manual for accessories and alarm-specific installation instructions.



PARTS:


- [907INTC](#) (1)
- [907INTK](#) (1)
- [907INTD](#) (1)

Step 1 — Access fuse box and wiring harness






- Turn both plastic screws in the middle of passenger kick panel (below knee bolster) counter clockwise
- Remove panel and set aside
- Remove screw on door side of plastic floor cover
- Pull back plastic floor cover and remove emergency tool set and set aside
- Fuse box and wiring harness is below emergency kit

Step 2 — Locate CAN wires

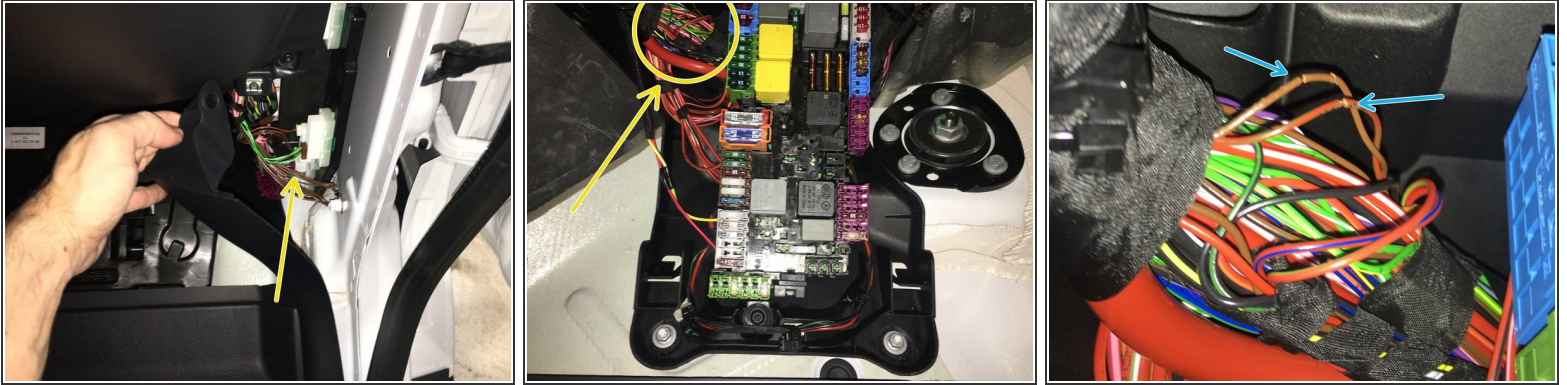


- ① Many 907 Sprinter chassis will have a CAN distribution block with brown and brown/red wires located on the passenger side above the fuse box (pictured). For these vehicles, the CAN plug can be plugged directly into any empty spot on block with brown and brown/red wires.
- ① If there is not a block with brown and brown/red wires, the 907INT CAN wires will need to be repinned into the CAN B plug. [Click here for the pinning instructions.](#)
- If hardwiring is required, locate wiring harness at top left corner of fuse box.
- Locate pair for brown and brown/red wires that are twisted together.

Step 3 — CAN Connections

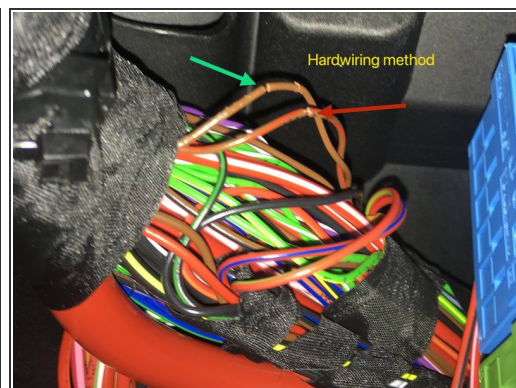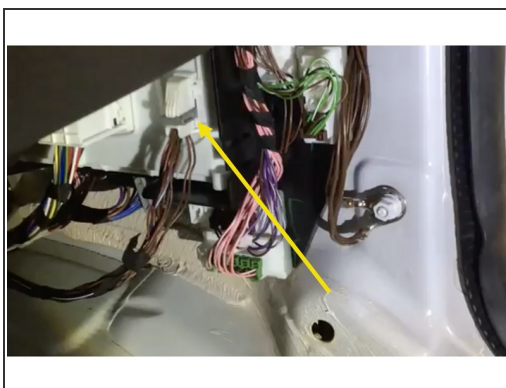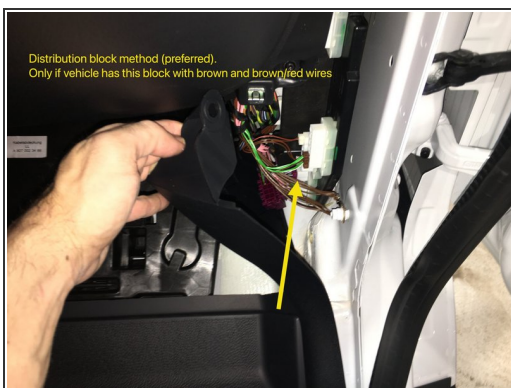

- ✦ If vehicle has the distribution block with brown and brown/red wires, no soldering is required, simply plug the provided connector into any empty spot in the block with OEM brown and brown/red wires (pictured in step 2)
- ⓘ If vehicle does not have the distribution block with brown and brown/red wires, the CAN wires can be pinned into the CAN B plug at the SAM module. [Click here for pinning instructions](#)
- Alternatively, CAN wires can be connected to brown and brown/red wires in harness next to fuse box.
- ⚠ If hardwiring wires, be sure to solder and insulate all connections.


Step 4 — Connect alarm power

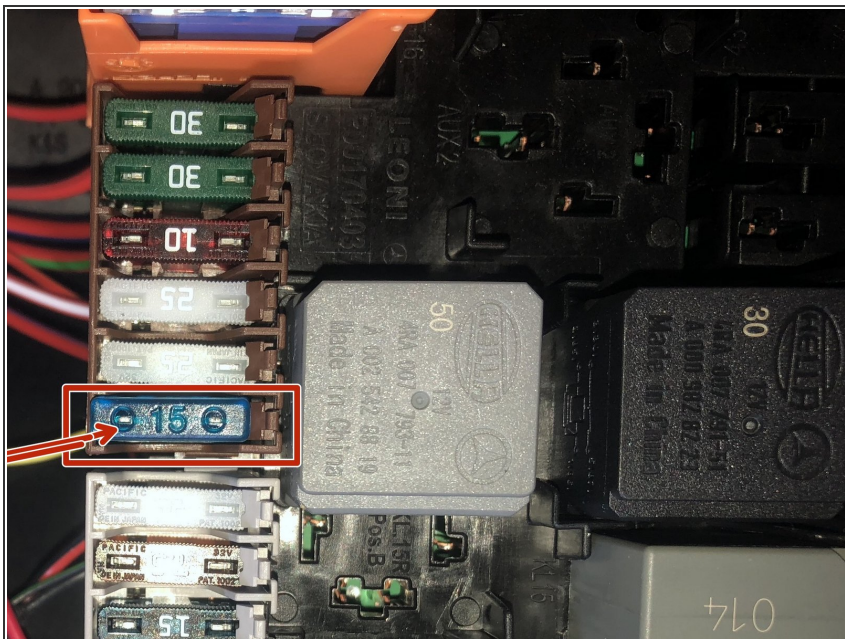

- Using fuse terminal, connect red (12V constant) power wire from alarm brain to constant power at fuse box (pictured). Without the fuse connected, route the fuse terminal through the under-side of the fuse panel and connect the fuse from the top.


⚠ If hardwiring constant power, be sure to add a fuse and solder and insulate all connections.

Step 5 — Connect alarm ground

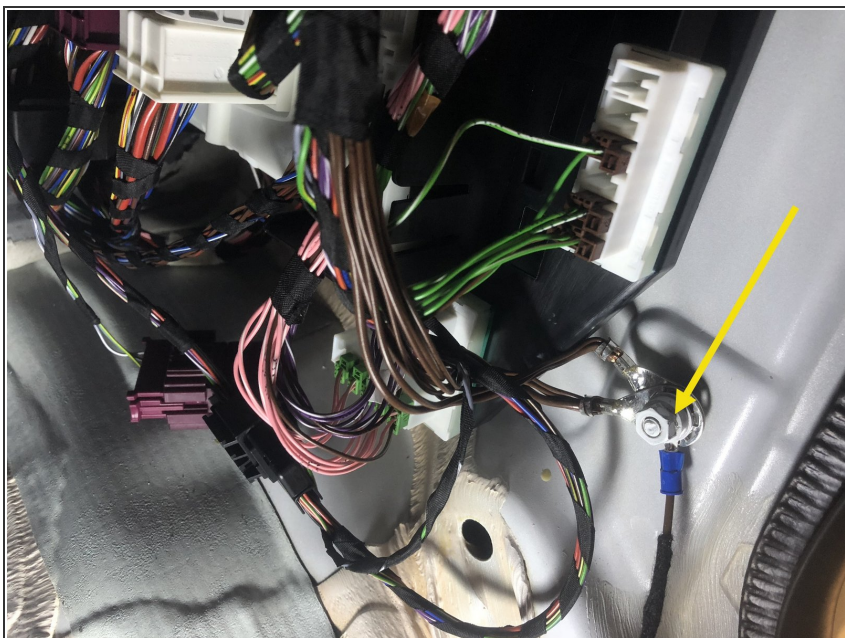

- Connect black wire from alarm (ground) to chassis ground
- ⓘ Plug & play alarm kit from MCE will include a ring terminal for ground connection at grounding bolt

Step 6 — Connect alarm 12V ignition

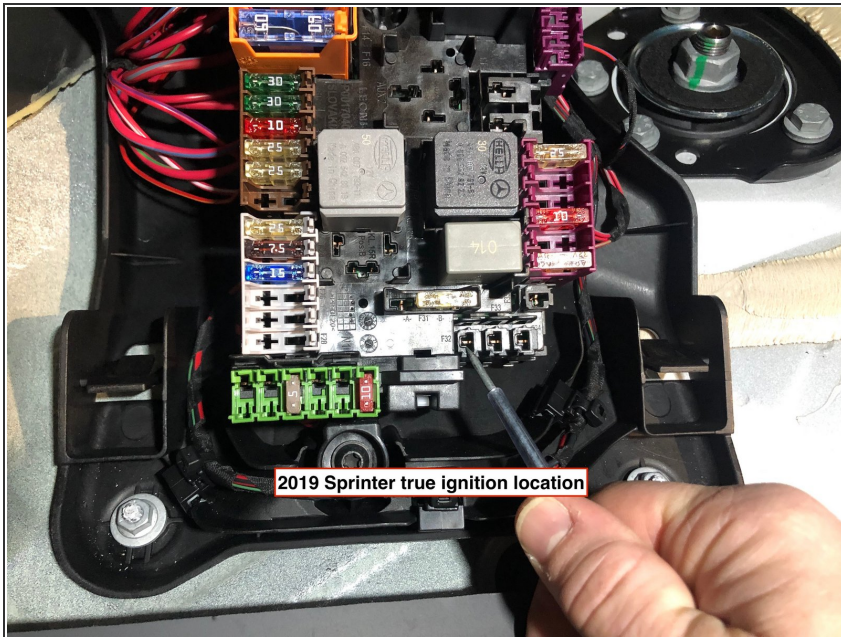

- Connect green ignition wire from alarm from alarm brain to 12V ignition source at fuse box
- ⓘ Plug & play alarm kit purchased from MCE will include a terminal to pin into fuse box location
- ☑ If using an alarm/remote start brain (eg. CMX) wire a diode in-line on the ignition wire with the stripe on the diode facing the alarm brain
- ⚠ **Solder and insulate all hardwired connections**

Step 7 — RS232 / D2D data cable connection



- **Compustar alarm (907INTC):** *Note: 907INTK plug & play alarm kit from MCE always includes 907INTC and Compustar alarm:
 - Connect one end of data cable to 4-pin **BLACK** port on Compustar alarm brain
 - Connect one end of data cable to 4-pin **BLACK** port on 907INTC CAN interface
- **Directed alarm (907INTD):**
 - Connect 4-pin black connector on provided data cable to the **BLACK** port on 907INTD module
 - Connect 4-pin **RED** connector from provided cable to 4-pin **D2D** port on Directed alarm module
 - ☒ If using a Directed DS4, the data wires on one side of the cable need to be swapped (white and blue)
- ⚠ **For Directed or Viper alarms, do not use alarm model 3X10 or 3X05 as it is not supported at this time.**

Step 8 — Connect and mount alarm sensor



- **Compustar:** Mount DAS sensor securely following Compustar alarm instructions
- Connect DAS sensor to **RED** port on Compustar CM module
- Mount DAS sensor securely
- ⓘ It is recommended to mount the sensor to a solid - semi solid surface centrally located in the vehicle for the best results.
- ⚠ **DO NOT** mount any sensors or accessories near any heat sources or moving parts (eg, vents or steering column)
- ☑ Make sure to mount sensor before testing. Close all windows and doors before testing.
- ⓘ The DAS sensors are already programmed to a default sensitivity. The sensitivity of the shock and tilt sensing can be adjusted. [Click here for sensor programming instructions.](#)
- **Directed:** Follow Directed alarm instructions for sensor mounting and programming.

Step 9 — Mount siren and connect siren wires



- Mount siren securely under hood
- Carefully run siren wires through firewall to passenger underdash area

⚠ **Run wires clear from any moving parts or heat sources**

- **Compustar (907INTC or 907INTK):**

- Connect **BROWN** wire (siren output) from Compustar alarm brain to **RED** wire from siren
- Connect **BLACK** wire from siren to **chassis ground**
- **Directed (907INTD):** Refer to Directed alarm instructions for siren connections.

⚠ **Solder and insulate all connections**

Step 10 — Test alarm operation



- ☑ Close all doors, the hood, and trunk. **Alarm will not arm if any doors or the hood/trunk are open**
- Use OEM key fob to lock doors and confirm alarm is armed (siren will chirp 1X). If siren chirps 3X, the vehicle is not fully closed.
- Use OEM key fob to unlock doors and confirm alarm disarms (siren will chirp 2X)
- If OEM key fob arms and disarms the alarm, sit inside vehicle and arm alarm- open door from inside and confirm that alarm triggers
- ⓘ If alarm is triggered, you need to press unlock 2X to fully disarm alarm (first unlock command will silence alarm, but alarm will stay armed- second unlock command will disarm alarm)

Step 11 — OPTIONAL: Accessory connections



- **Compustar Drone:** Connect Drone data cable to **GRAY** port on Compustar alarm brain
 - ⚠ **Do NOT connect Drone to 4-pin gray cable on 907INTC CAN interface module**
 - ❗ If installing Drone, must use Compustar that has two data ports
 - Register and setup Drone using Drone mobile application
- **Compustar RF remotes:** Plug RF antenna into corresponding 4 or 6 pin **BLUE** plug on Compustar alarm module
 - ❗ Program RF remotes using push-to-start remote programming procedure in Compustar alarm instructions
- **Compustar remote programming:** Cycle key from off to ignition 5X- parking lights will flash 1X after the 5th cycle. After the 5th cycle, press the button on the antenna (if antenna has a button) and press LOCK on each Compustar remote. Parking lights will flash when each remote is paired. Parking lights will flash 2X when exiting programming
 - ❗ With ignition on, you will see all warning lights on instrument cluster. Verify that you are in the second positin (ignition) by seeing warning lights appear 5 seperate times on cluster

Step 12 — OPTIONAL: Accessory connections continued



- **Alarm LED:** The Compustar alarm brain includes an LED. Connect LED to 2-pin alarm port on Compustar brain (optional). If using an LED, this is typically mounted somewhere on the dash for visibility when the alarm is armed.
- ⓘ **LED behavior:** when alarm is armed, the LED will turn on solid. After 30 seconds, the LED will flash. The flashing LED indicates that the sensor is fully armed. If the alarm is triggered, the LED will flash in a numerical pattern (number of flashes followed by a pause and repeat) until the next ignition cycle.
 - The number of flashes indicates the reason for the alarm trigger (door open, shock/tilt sensor, etc) Refer to the Compustar alarm manual for alarm codes.
- ★ **For all other Compustar accessories:** Refer to the Compustar guides for each accessory
- **Directed accessories:** Refer to your Directed alarm and accessory specific manuals

Step 13 — Mount modules and accessories and reassemble vehicle



- Locate a place to secure all modules and accessories
- ⚠ **DO NOT** mount any modules or accessories near any heat sources or moving parts (eg, vents or steering column)
- Reassemble vehicle