




Replacing the HEPA Filter

How to replace Element's HEPA filter

Written By: Mosaic Support

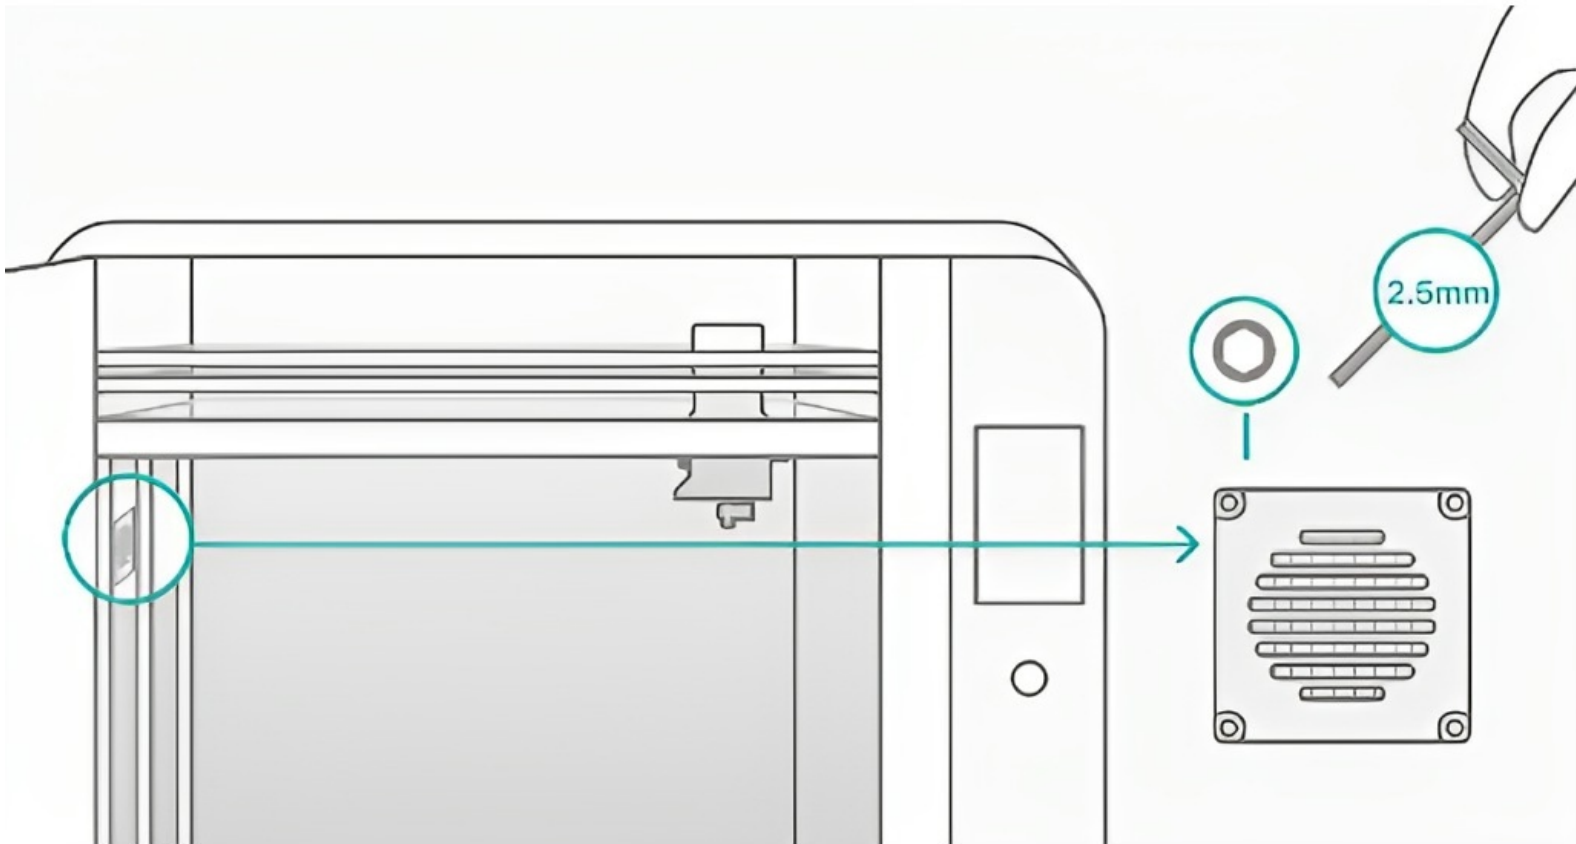




TOOLS:


- [2.5 mm Hex Key](#) (1)
 - [HEPA Filter Cartridge](#) (1)
-

Step 1 — Remove HEPA Filter

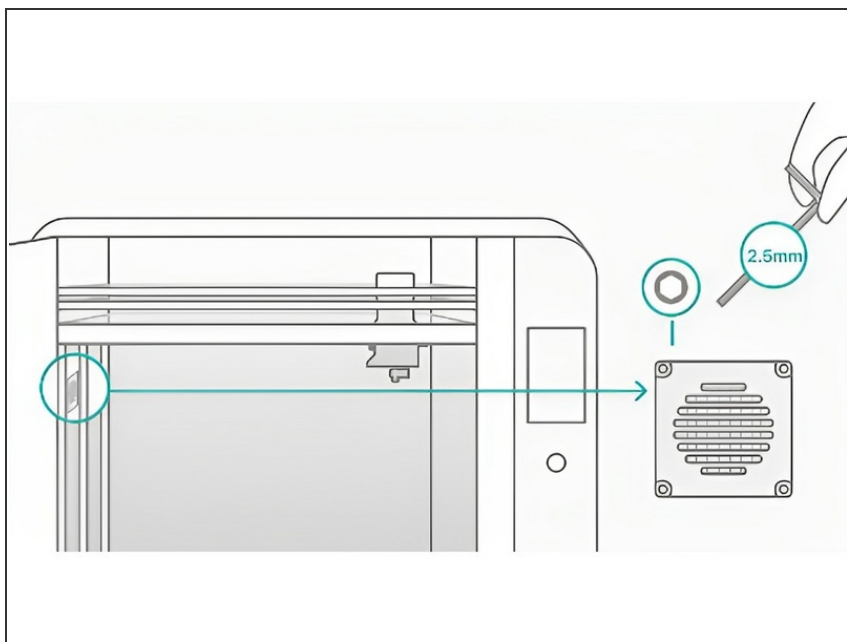

- The HEPA filter is accessible on the inside left of the bed chamber, and can be removed by unscrewing 4 screws holding its cover in place
- Remove the old HEPA filter cartridge

Step 2 — Install New HEPA Filter

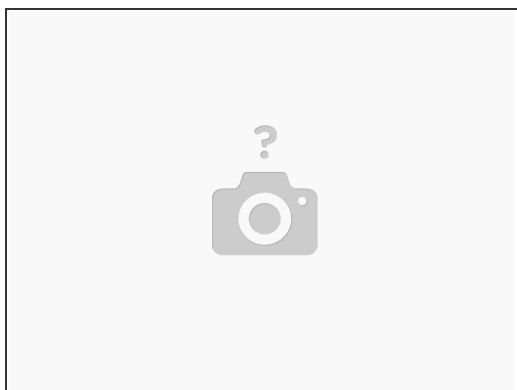

- Insert the new HEPA filter cartridge into the same slot
- Re-mount the 4 screws holding the filter in place

If you have any questions, please don't hesitate to contact us at support@mosaicmfg.com.