




Locate and change a fuse - Citroën C2

The Citroën C2 is equipped with fuse boxes located in the engine compartment and the passenger compartment.

Written By: hemissi-nizar

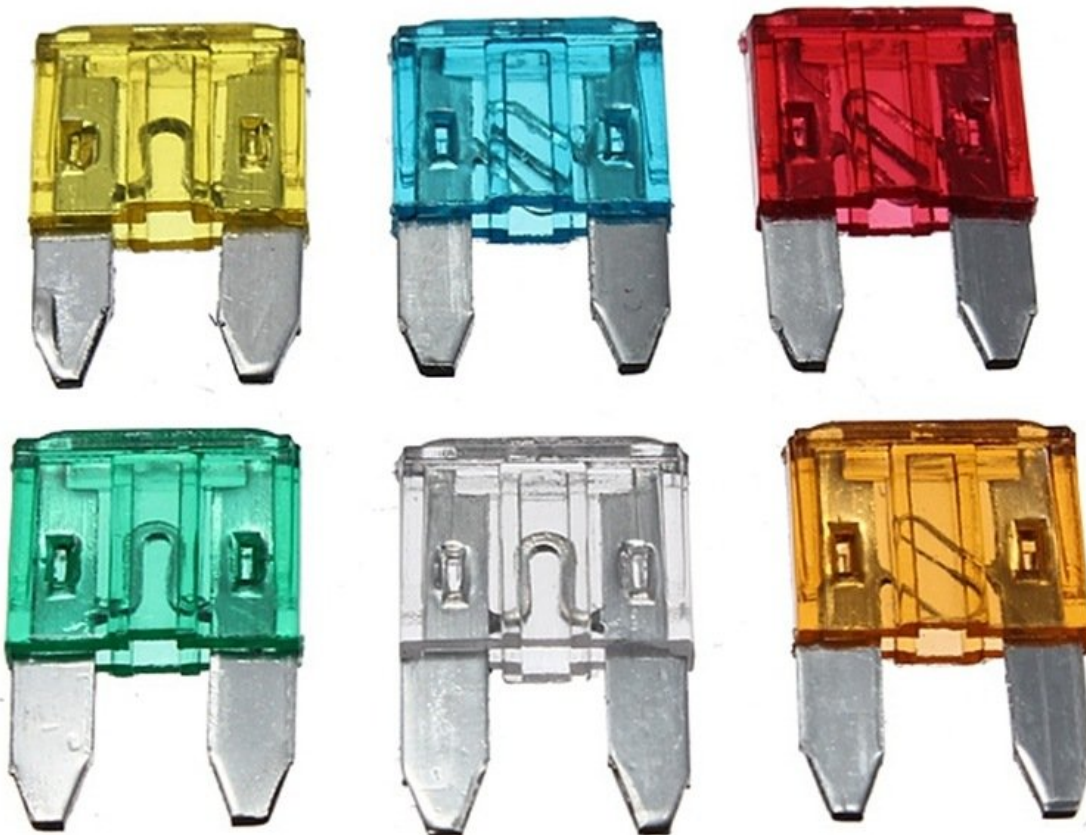

INTRODUCTION

Vehicle engine 1.4 HDi 70 hp



TOOLS:

- [Flat screwdriver](#) (1)



PARTS:


- [Fuse set](#) (1)

Step 1 — Access passenger compartment fuses 1/2



- Under the steering wheel, pull the cover, passing your fingers through the opening under the steering column lock lever.
- Retrieve the small red pliers attached to the trim for handling [the fuses](#)
- **Platinum 1**

Step 2 — Access passenger compartment fuses 2/2

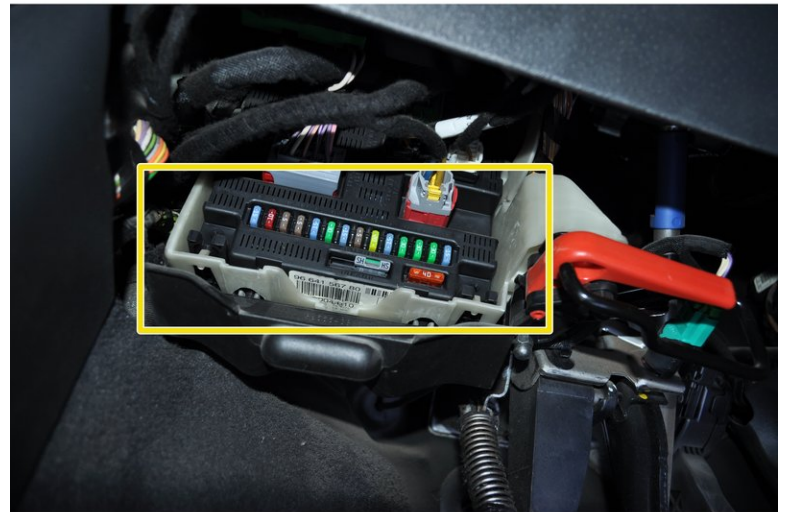

- Still under the steering wheel but lower, to the left of the red handle allowing the hood to be opened.
- Pull the cover handle to access **Plate 2**.

Step 3 — Access engine compartment fuses 1/2



- To access **Plate 3**, turn the air duct cover fixing clip 1/4 turn and pull the cover to remove it.
- Remove the front [battery](#) cover by pulling on it by its handle.
- Similarly, pull the rear cover.

Step 4 — Access engine compartment fuses 2/2



- Unclip the cover from the case by pinching the tabs, by hand and using a small flat screwdriver.
- Remove the cover by pulling it.
- ⚠ When replacing, make sure to reposition the cover correctly to ensure it is watertight.