



Prusa i3 MK3S: Changing the Nozzle

How to change the nozzle on a Prusa i3 MK3S

Written By: Brandon Bennett Young



Step 1 — Gather Tools




- Gather pliers and a 7mm socket

Step 2 — Unload Filament



- Select 'Unload Filament'
- Select appropriate filament

Step 3 — Raise extruder assembly in the z-axis

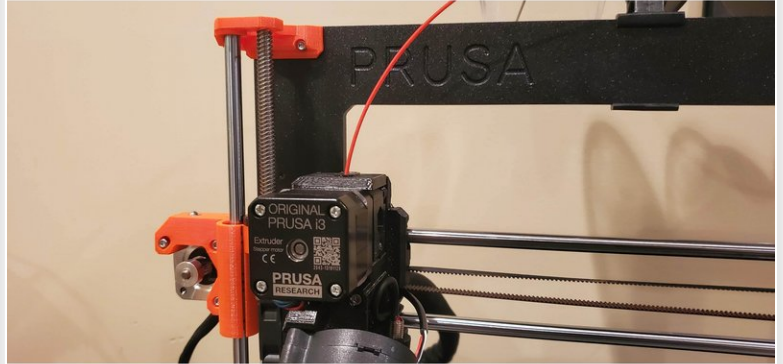

- Hold down the dial until it comes to this Z screen
- Rotate the dial until the extruder assembly is a good distance from the build plate

Step 4 — Unscrewing the Nozzle



- Hold the heatblock using the pliers/wrench
- Use the 7mm wrench to unscrew the nozzle from the heatblock
- Attach new nozzle, then prepare for next print

