



Replacing Agents

Explains how to replace agent cartridges.

Written By: Richard Leo Lempicki



Introduction

The HP Jet Fusion 580 uses fusing, detailing, and colored ink agent cartridges throughout every print. After a while they will get used up and need to be replaced.



TOOLS:

- [Nitrile Gloves](#) (1)
-

Step 1 — Initiating Replacement



i Wear gloves and a mask

- On the touchpad click the maintenance tab
- Go to Agents > Replace

Step 2 — Locating the Cartridge



- Open the agent door
- Locate the agent to be replaced.
- i** You can see which agent needs to be replaced on the front panel; it is also indicated by a white LED above the cartridge

Step 3 — Taking Out a Cartridge



- Press the agent to release and remove it.
- ① You should hear a click as you remove it.
- ☑ Old agent cartridges can be recycled through HP's Planet Partners Program, where available. Visit <http://www.hp.com/recycle/> for more information.

Step 4 — Replacing a Cartridge



- Acquire a new cartridge from the HP cabinet

 **Do not touch the metal contacts on the cartridge. Fingerprints on the contacts can cause connection errors.**

- Insert the new agent cartridge until you hear a click
- Close the agent door
- Tap **Finish** and **Check** on the touchpad