



Replacing Print-Area Filter

Explains the process to replace the Print-Area Filter

Written By: Richard Leo Lempicki



Introduction

Replacing the filter on the left side inside of the print area



TOOLS:

- [Nitrile Gloves](#) (1)
-

Step 1 — The Filter



- The filter is located inside the HP cabinet (SKU 8WA28A - Print Area Filter)

Step 2 — Initiating Replacement



- Tap **Replace print area filter** on the touchpad
- Open the top cover and pull the fusing carriage to the right side
- Lift up the front panel and locate the print-area filter on the left

Step 3 — Replacing the Filter



- Disengage the latch on top of the filter
- Remove the old filter and insert the new one
- ⓘ Make sure the blue line on the filter is facing the interior of the print area
- Close the cover and reengage the latch
- Lower the front panel, move the fusing carriage back, and close the cover
- Tap **Finish and Check** on the touchpad