



Replacing Material Reclamation Filter

Explains the process of replacing the Material Reclamation Filter

Written By: Richard Leo Lempicki



Introduction

Replacing the filter located in the drawer B1

Step 1 — The Filter



- The filter found in the HP cabinet (SKU 8WA29A - Air Exhaust Filter)

Step 2 — Initiating Replacement



- The touchpad will notify you when this needs to be replaced
- Open the agent door
- Open door B1 by pushing the top corner in and releasing
- ⓘ There will be an LED lit up next to the door

Step 3 — Replacing the Filter



- Unlock the latch, pull it up, then take out the old filter
- Take the new filter out of its wrapping and place it into the slot
- Close the lid and latch it in place
- Once the access door is closed the LED should turn off
- Close the agent door and tap **Finish and Check** and then **OK** on the front panel