



Replacing Air Exhaust Filter

Explains the process of replacing the Air Exhaust Filter

Written By: Richard Leo Lempicki



Introduction

After many uses the Air Exhaust Filter will need to be replaced. The printer will let you know when this needs to be done.



TOOLS:

- [Nitrile Gloves](#) (1)
-

Step 1 — The Filter



- The filter can be found in the HP cabinet (SKU 8WA29A - Air Exhaust Filter)

Step 2 — Replacing the Filter



- Complete the steps of the [Cleaning Air Filters](#) guide first
- Instead of putting the old filter back in put the new filter in instead
- Close and latch the lid
- Close the drawer and ensuring the LED is now off
- Close the agent door and tap **Finish and Check** on the front panel