
Connect Ranger to Wi-Fi

Connect the instrument to Wi-Fi to synchronize logged data to Ranger Cloud.

Written By: Margaret Grattan

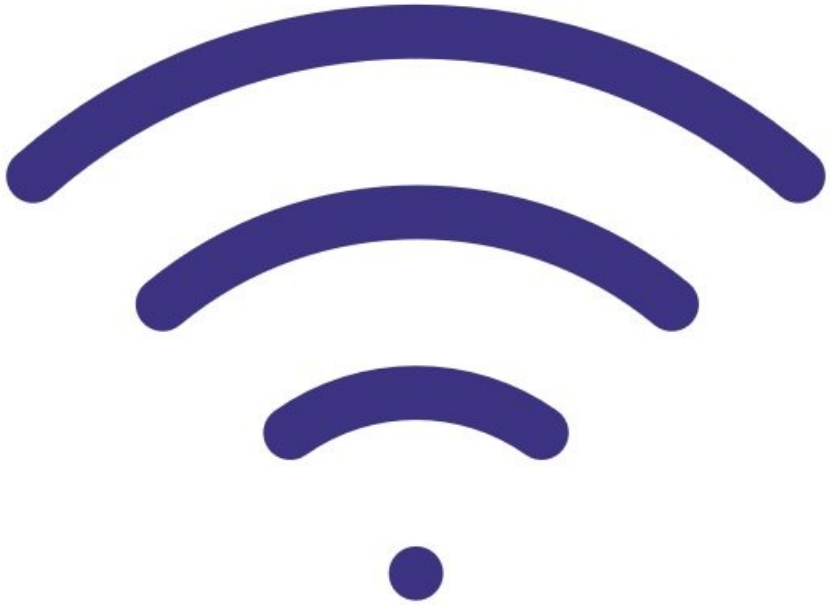

© 2026

INTRODUCTION

Connect Ranger to Wi-Fi to synchronize its logged data to Aeroqual Cloud.

You can also connect Ranger to Aeroqual Cloud using your mobile phone as a hotspot by following the instructions on the video below

[video: https://www.youtube.com/watch?v=63_dnp3u7p0]


RF Exposure Note
This device includes a Wi-Fi transmitter and is intended for use in occupational/controlled environments only. It must be operated in accordance with the instructions in this manual by trained personnel. Wi-Fi by default is off, and can be turned off to reduce operator exposure.

TOOLS:

- Wi-Fi network (1)
- Wi-Fi network credentials (1)


© 2026


Step 1 — Go to Settings

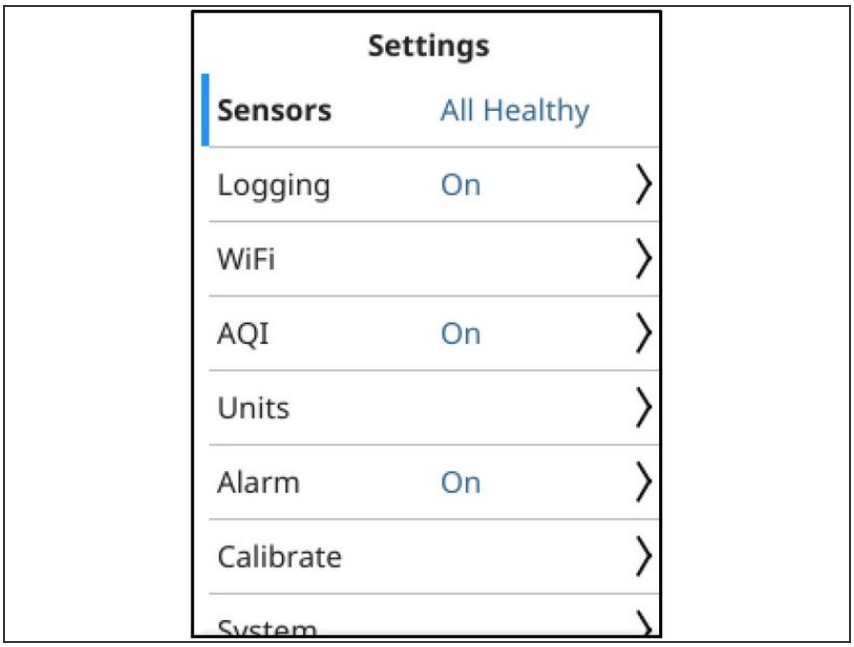

- From the main screen, enter the Settings menu by pressing and holding the **LEFT ARROW**


Step 2 — Configure Wi-Fi

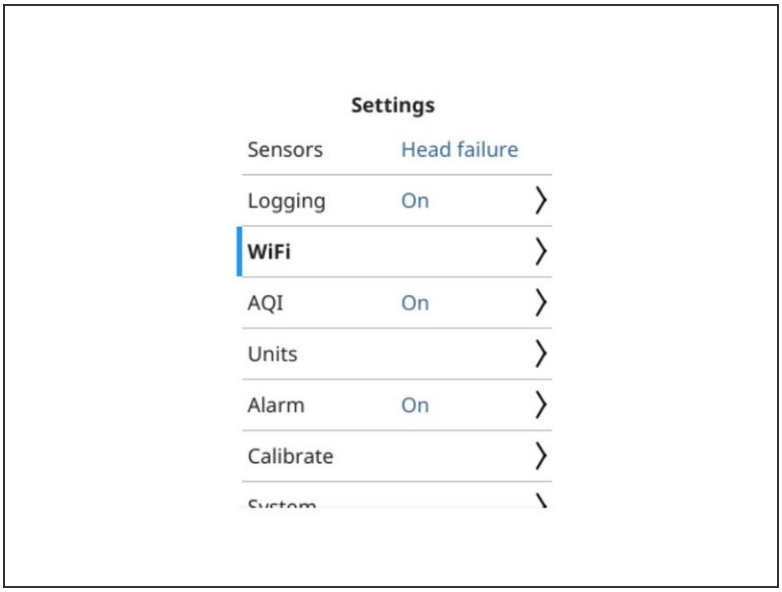

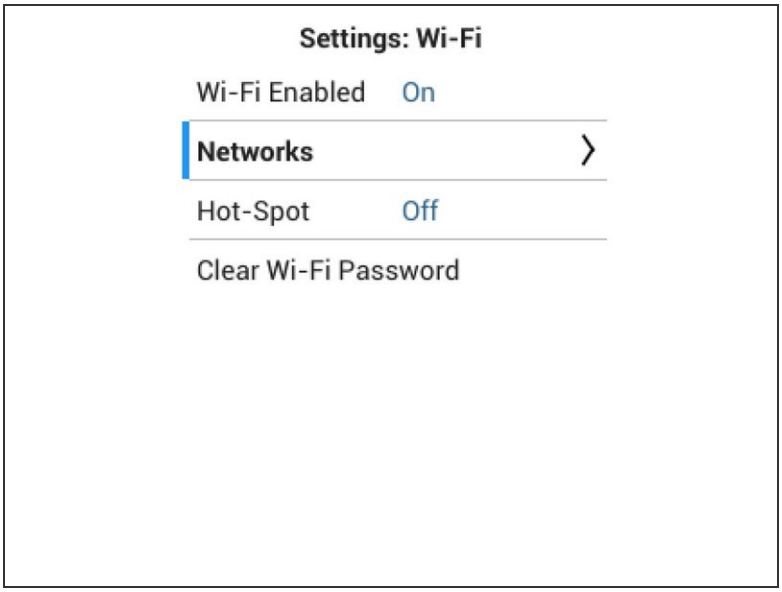

- Navigate to the Wi-Fi submenu
- Then, navigate to the Networks submenu

Step 3 — Select your Network

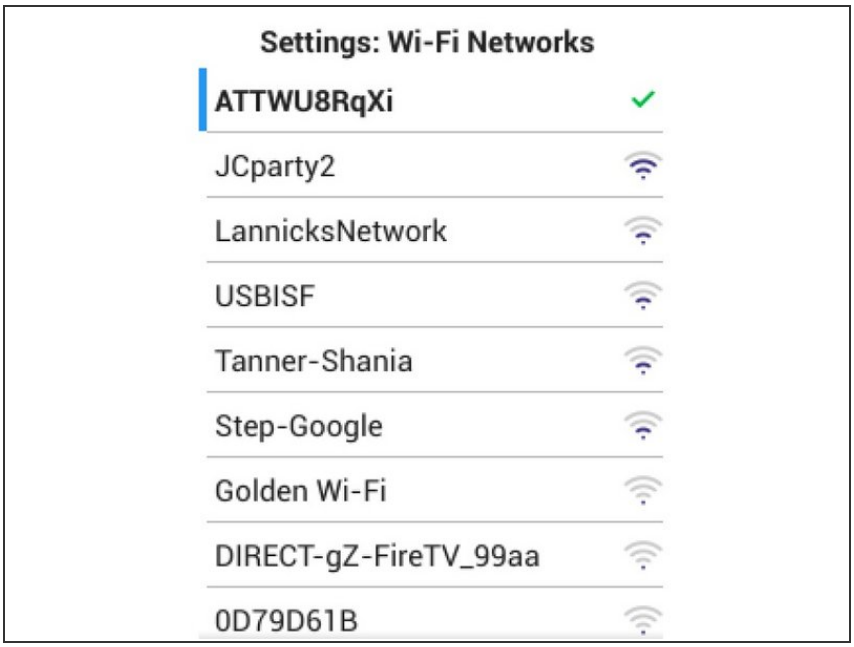



- Next will appear a list of available Wi-Fi networks
- Select the network you'd like to connect to.


ⓘ To refresh the list of available networks, exit and re-enter the current menu.

⚠ Please note that the Ranger may *not* connect to an Open network.

Step 4 — Enter password

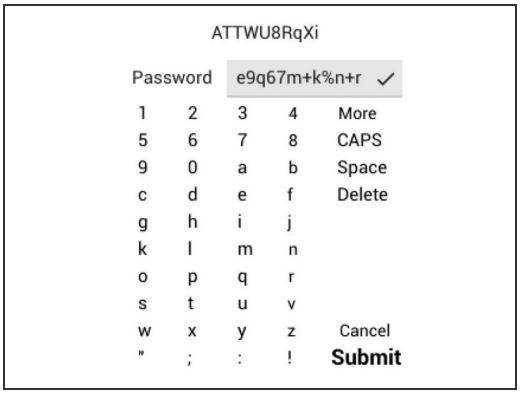


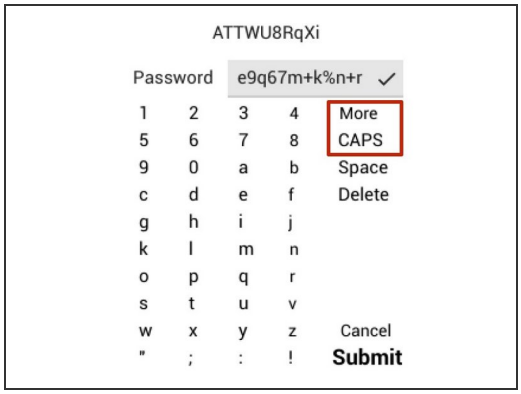

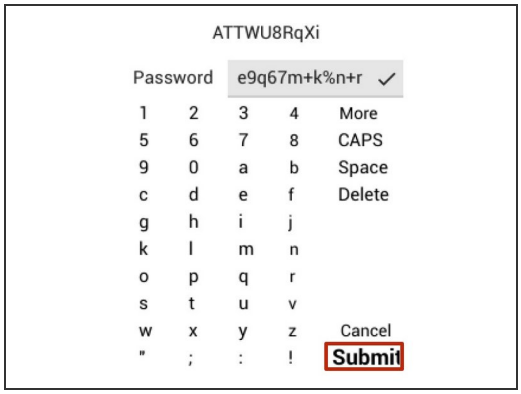


- Enter the Wi-Fi password
- To select a capital letter, select "CAPS"
- To select from a list of special characters, select "More"
- Finally, select "Submit"

Step 5 — Verify connection

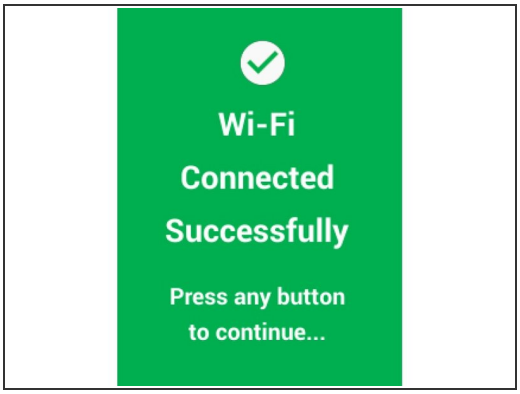



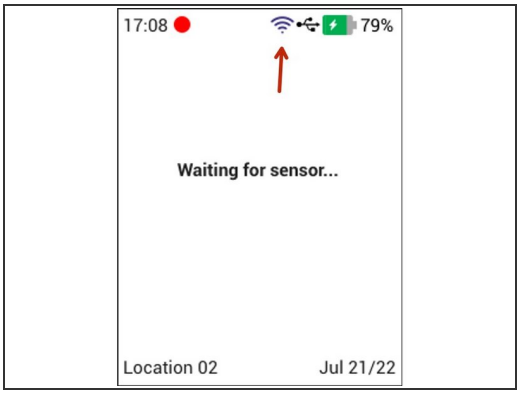

- A message will appear, confirming a successful or failed connection to Wi-Fi.
- To exit the Settings menu and return to the Main screen, press and hold the **LEFT ARROW**
- Confirm that the Wi-Fi icon now appears on the Main screen

ⓘ Ranger can remember multiple Wi-Fi networks

For further support, contact Aeroqual Support.