
Aeroqual Cloud API

This Guide is to help you begin your API data retrieval journey.

Written By: Connor Porter

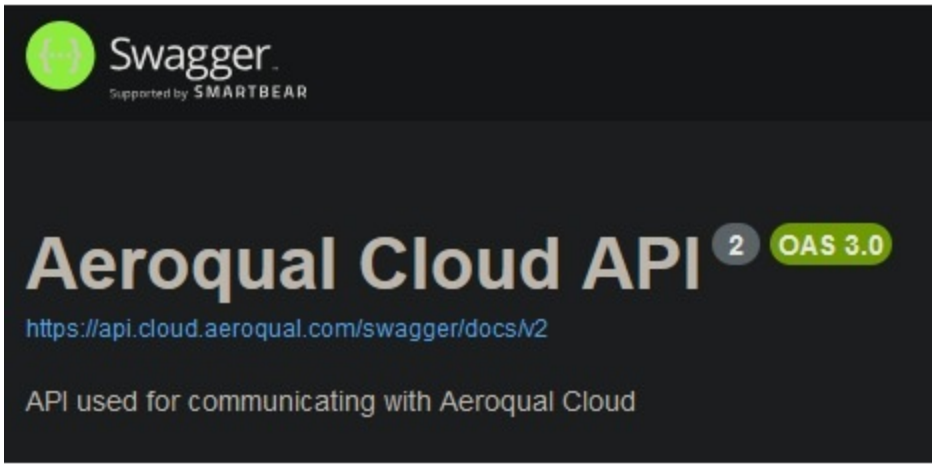

This document was generated on 2024-10-13 02:32:49 PM (MST).

INTRODUCTION

This guide is meant to help anyone access and utilize the Aeroqual Cloud API Documentation that's available at [api.cloud.aeroqual.com.](api.cloud.aeroqual.com)


© 2024


Step 1 — Navigate to Swagger




- Navigate to https://api.cloud.aeroqual.com/swagger/i...

Step 2 — Choose Login "POST"

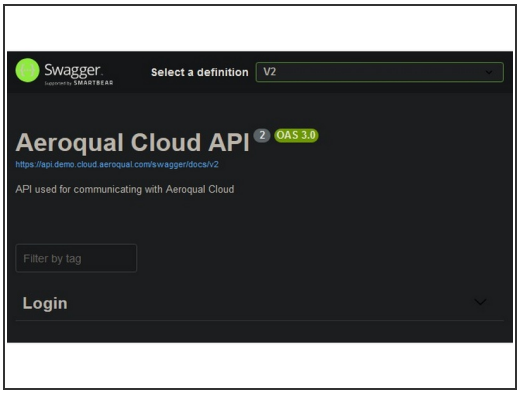


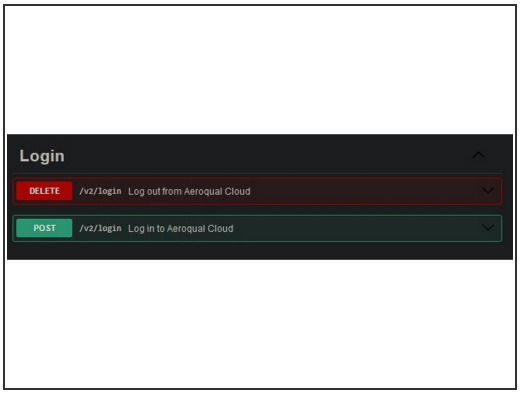


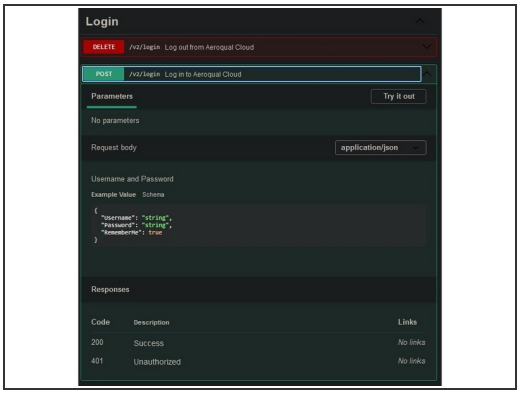


- Expand the "Post" /v2/Login command, and click "Try It Out"

Step 3 — Execute

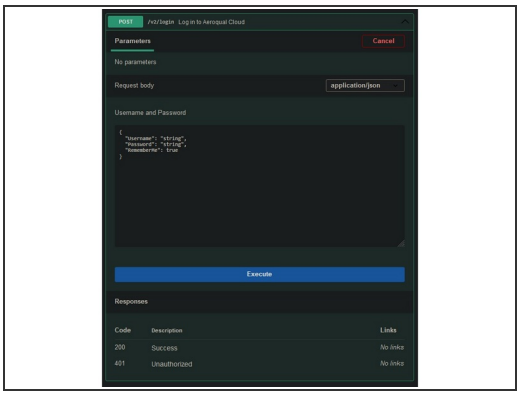

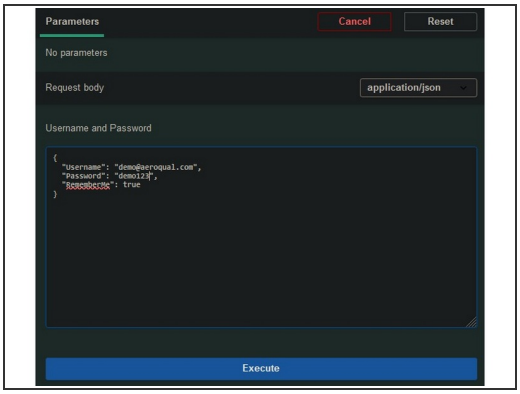

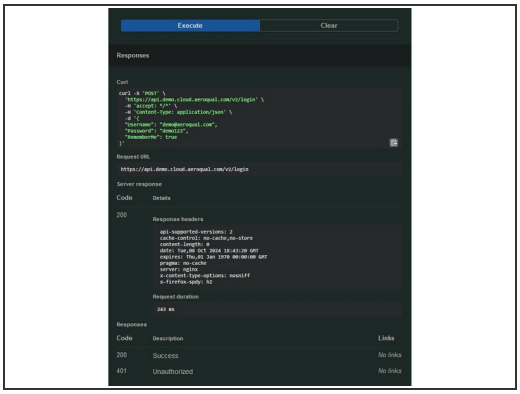

- Exchange the default information with your username and password.
- For Example in the second image, notice that "string" has been replaced with "demo@aeroqual.com"
- Click on the Big Blue Execute Button. If your login credentials are correct, you'll see that you've received a Code 200 response, indicating that your login was successful

---

For further support, contact Aeroqual Support.