IOX-OUTPUTM Prerequisite Installation Guide

The IOX-OUTPUTM allows a GO device to control a relay from the vehicle in real-time.

Written By: Ezequiel Montalvo



© 2024 - Uncontrolled If Printed

TOOLS:

- Flush cutter (1)
- Cable Ties (1)
- Cordless Drill (1)
- Multi Bit Screwdriver with Assorted Bits (1)

PARTS:


- IOX-OUTPUTM (1)

This document was generated on 2024-01-30 03:54:06 PM (MST).

© 2024 - Uncontrolled If Printed

— IOX-OUTPUTM

⚠ Before starting the installation, ensure the Geotab GO device is unplugged from the vehicle.

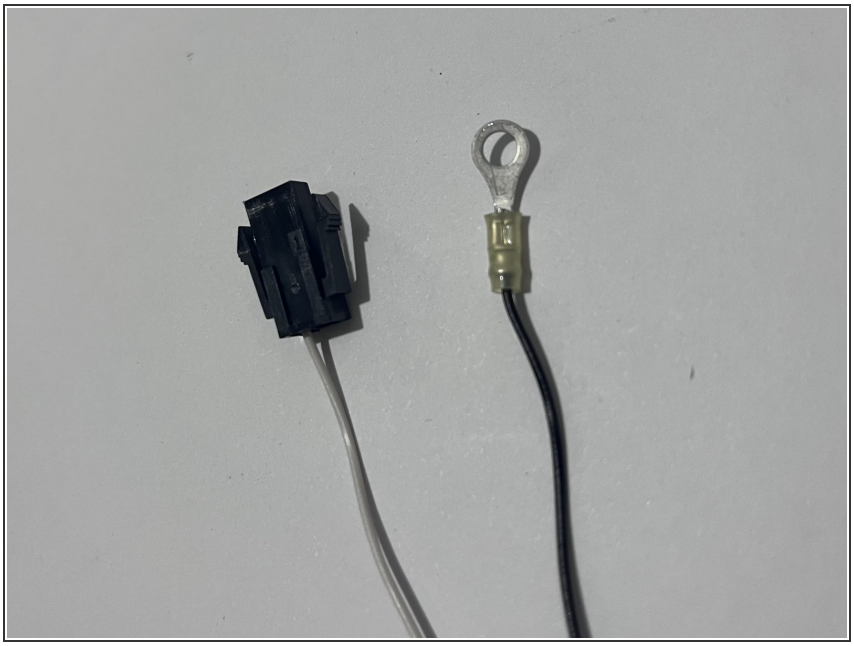


- The IOX-OUTPUTM has two wires: a relay driver output wire (white) and a ground wire (black).



- Connect the black wire from the IOX-OUTPUTM to a chassis ground. A self-tapping screw can be used to secure the ring terminal to a part of the metal dash frame.


© 2024 - Uncontrolled If Printed

— Connection

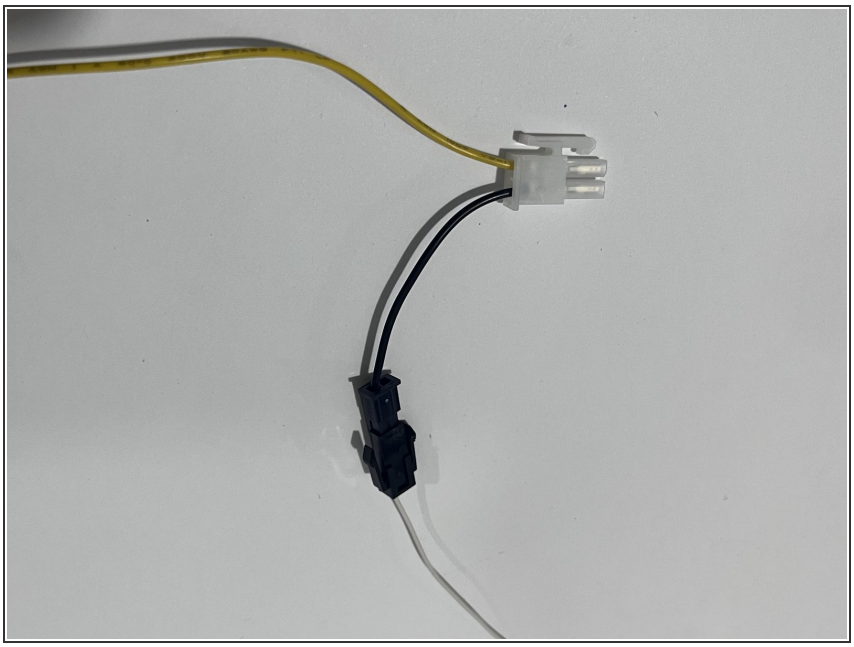

- Connect the white wire with the Molex connector to the black wire with the Molex connector on the SPR-IOXREL harness.

— Connection diagram

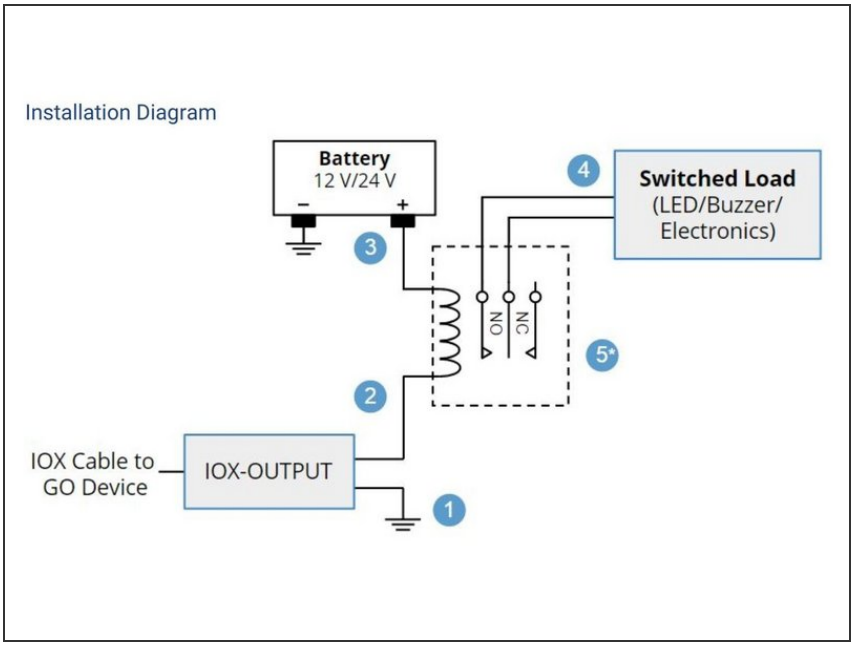

- Installation diagram

© 2024 - Uncontrolled If Printed