Certified Power / Cirus ATS

Written By: Alkesh Dhak





© 2024 - Uncontrolled If Printed


— Requirements

ⓘ Prior to installation, contact your Certified Power representative for instructions on how to enter the menu system as an administrator.

— Installation

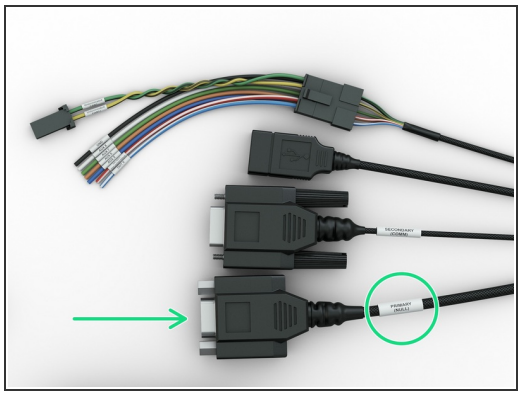

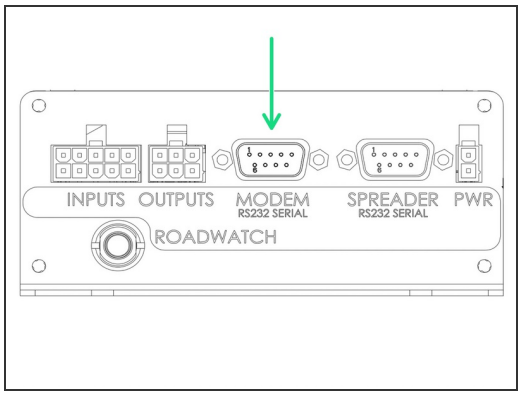

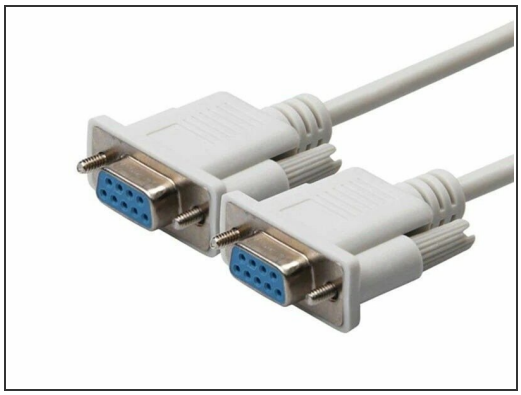

- The IOX-WRKS primary port connects to the MODEM RS232 SERIAL port on the Certified Power / Cirus ATS using the standard null cable HRN-DB9NM.

— Controller Configuration

- Remove the “GPS installed” checkmark.
- Remove the “Include MAC address” checkmark.
- Set ACK Timeout = 0
- Set Physical interface = Serial
- Set Secondary = None
- Set Auto Server Selection = 10
- Set Logical Interface = String format 1
- Set Data Transmission Rate = 0

© 2024 - Uncontrolled If Printed

- Breadcrumbs = 10
- Record Spreader Status Changes = Checked
- Baudrate = 9600
- Clear SD card contents (Holding.bin)
- Restart ATS

— The Certified Power / Cirus ATS may be connected to one of the following controllers.



ⓘ Certified Power Freedom 2



Certified Power GL400



Certified Power ACS

Ensure the IOX-WRKS has the correct controller configuration loaded before proceeding to verification / simulation mode.

© 2024 - Uncontrolled If Printed