Certified Power / Cirus SpreadSmart Rx

Written By: Alkesh Dhak




© 2024 - Uncontrolled If Printed


INTRODUCTION


[video: https://youtu.be/e4lVeTRdi8E]

© 2024 - Uncontrolled If Printed

— Installation

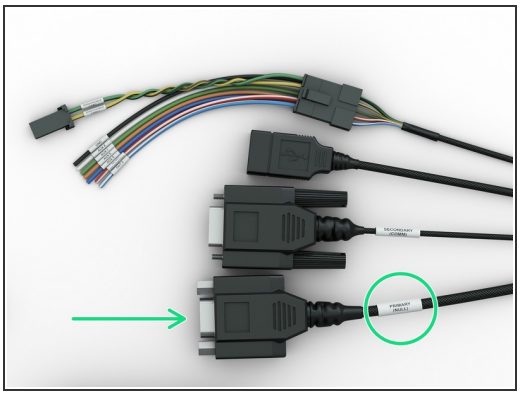

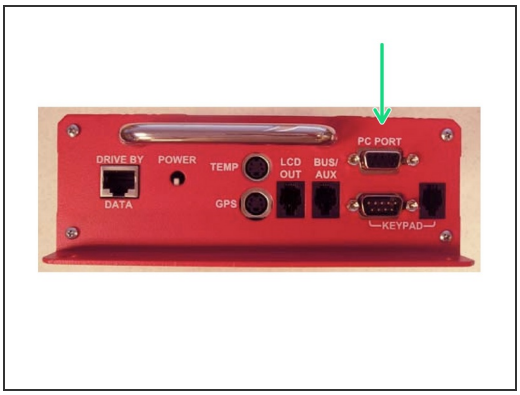


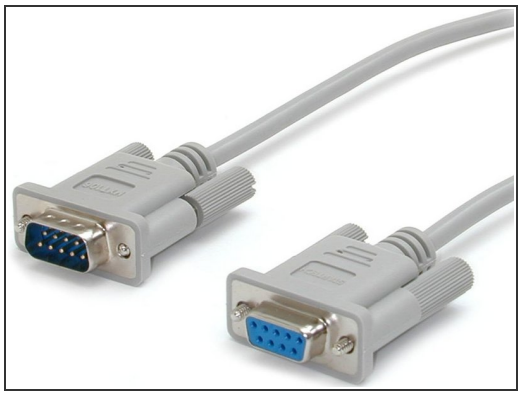

- The IOX-WRKS primary port connects to the PC port on the Certified Power / Cirus SpreadSmart Rx Electronics Backpack using the standard DB9 Straight Through cable HRN-DB9SI15.

Ensure the IOX-WRKS has the correct controller configuration loaded before proceeding to verification / simulation mode.

— Simulation Mode

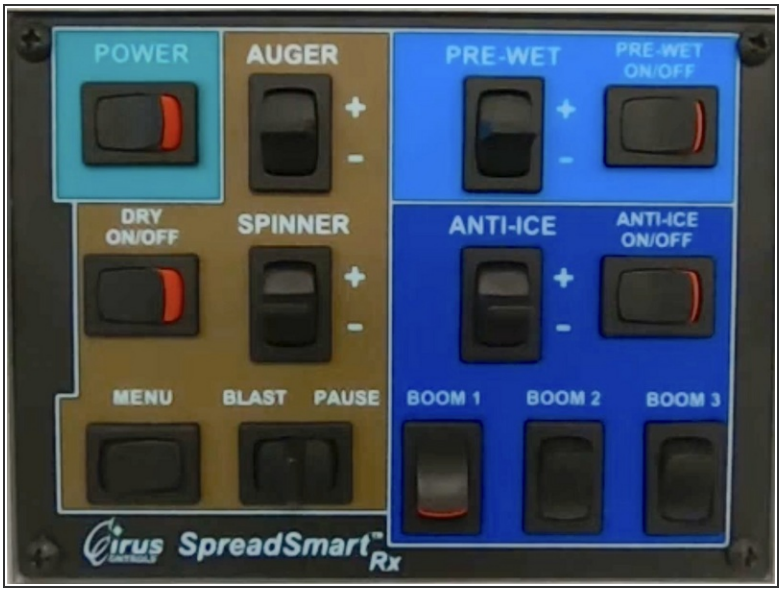



- Using the Switch Panel and the LCD screen, follow the instructions below to place the Certified Power / Cirus SpreadSmart Rx into Simulation Mode for verification.

This document was generated on 2024-04-13 05:45:43 PM (MST).

- Turn the controller on using the "POWER" toggle switch.
- At the operator screen, press “AUX/MENU” to enter [Menu] screen.
- Use the “SPINNER” toggle switch to move the cursor to “No Speedo Mode”.
- Use the “PASS” toggle switch to accept.
- If a password is required, enter it using the “SPINNER” toggle switch.
- Use the “PASS” toggle switch to accept the password.

The Certified Cirus SpreadSmart Rx controller sends data on state changes only.

— Troubleshooting

A computer can be used to confirm data is flowing from the PC PORT on the Certified Power / Cirus SpreadSmart Rx controller.

- Connect your computer's COM port using a DB9 Straight Through cable to the PC PORT on the Electronics Backpack.
- Open up a Terminal application, select the correct COM port on your computer and set the baud rate to "9600".
- Each time the controller sends data you will be able to see it in the Terminal application.

© 2024 - Uncontrolled If Printed