Roadwatch BLE temperature

Written By: Jason Fox




© 2024 - Uncontrolled If Printed

INTRODUCTION

[video: https://www.youtube.com/watch?v=B8UvK8Q_meM]

© 2024 - Uncontrolled If Printed

— Requirements

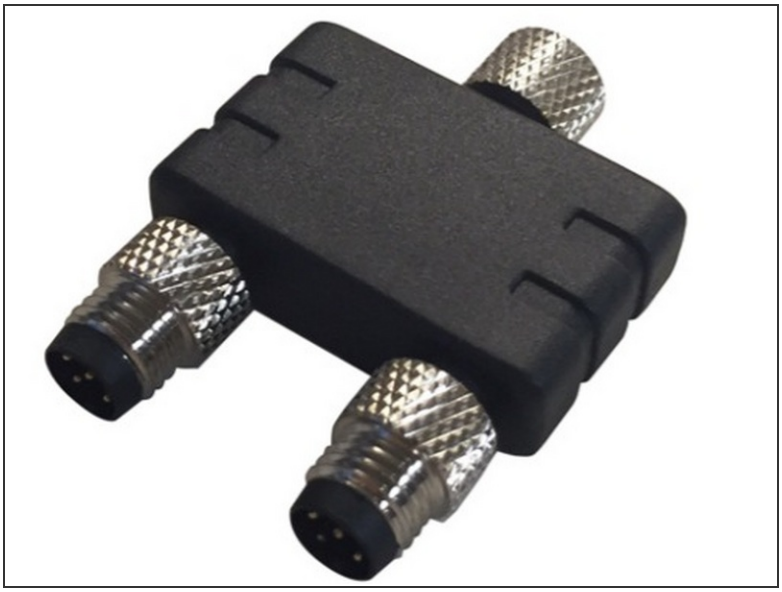




⚠ The Roadwatch RS232 BLE requires the optional accessory “Y” splitter, part number 434-0114-000 to connect an additional device such as the digital readout

- Roadwatch RS-232 adapter box should be powered on ignition.


— Installation

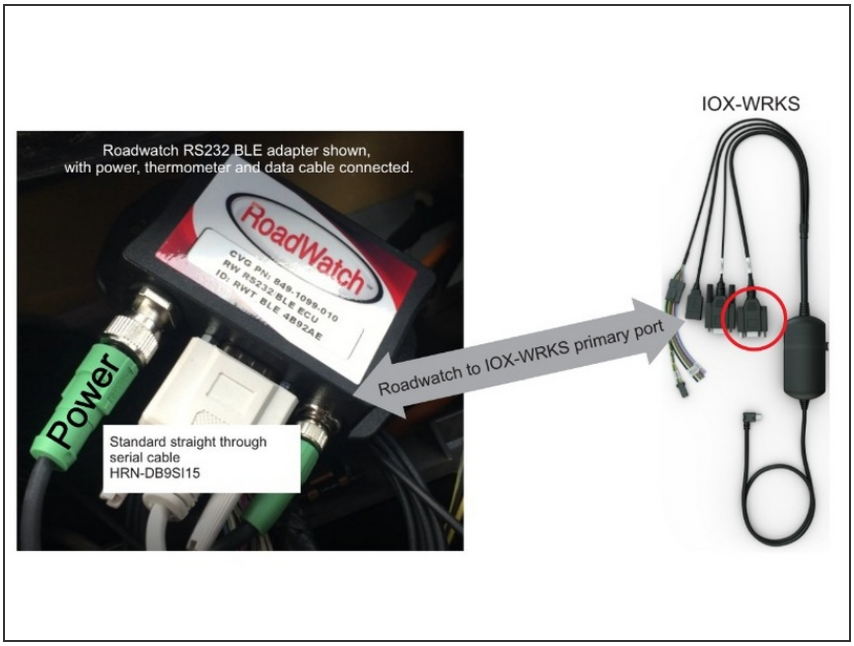

- Plug IOX-WRKS primary port into Roadwatch as shown.

This document was generated on 2024-07-12 09:38:21 AM (MST).

— Secondary Port Connection

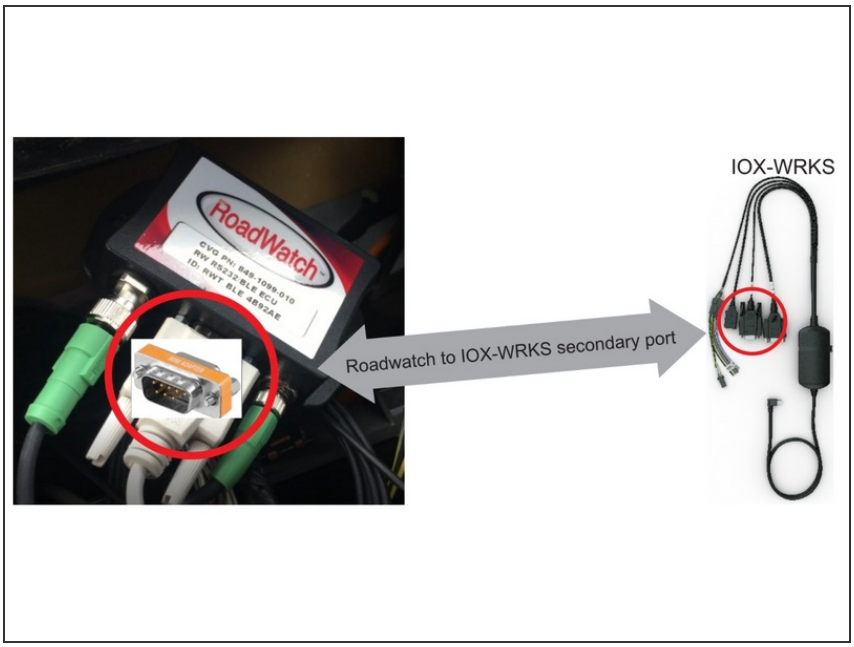

- Use ONLY if the primary port is occupied for spreader integration.

ⓘ A “DB9 M/M Null” Modem adapter or cable must be used when connecting to the secondary port.

— Configuration

The Roadwatch BLE is factory shipped requiring broadcast mode to be activated. This will be done when the configuration is loaded to the IOX-WRKS. If manual config is needed please refer to video above.

© 2024 - Uncontrolled If Printed