Roadwatch Temperature Sensor

Written By: Jason Fox




© 2024 - Uncontrolled If Printed

— Requirements


- Roadwatch RS232 Adapter is required and needs to be powered on ignition.
- Roadwatch data will not stream if a digital display or input device is not attached.

— Installation

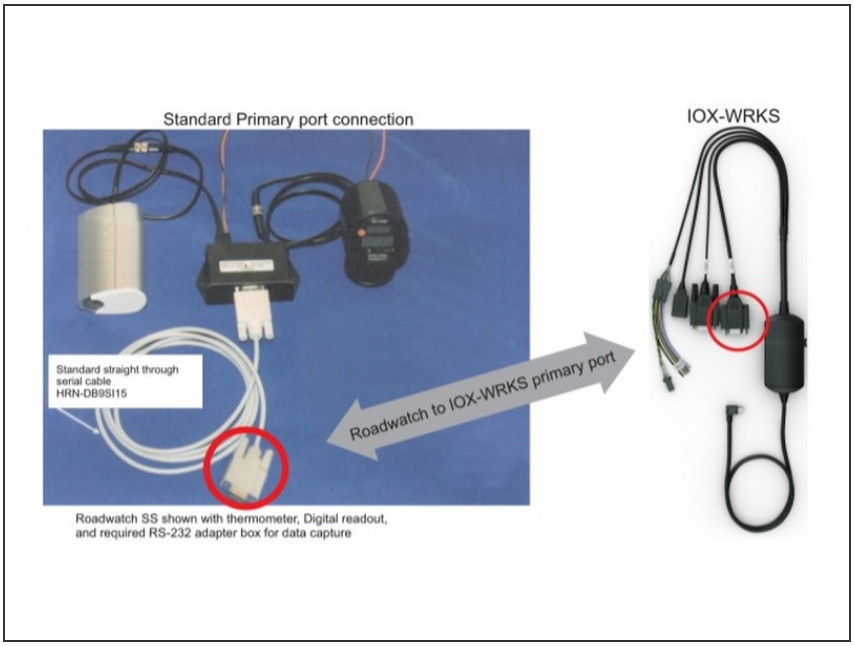


- Standard Primary Port connection using straight through serial cable HRN-DB9SI15

— Secondary Port Connection

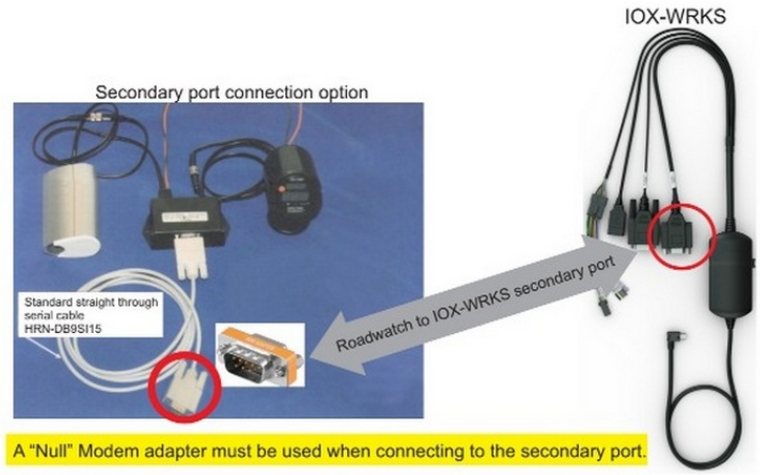

- Use the secondary port “Only” If the primary port is occupied for spreader integration.
- A “Null” Modem adapter must be used when connecting to the secondary port.

— Simulation

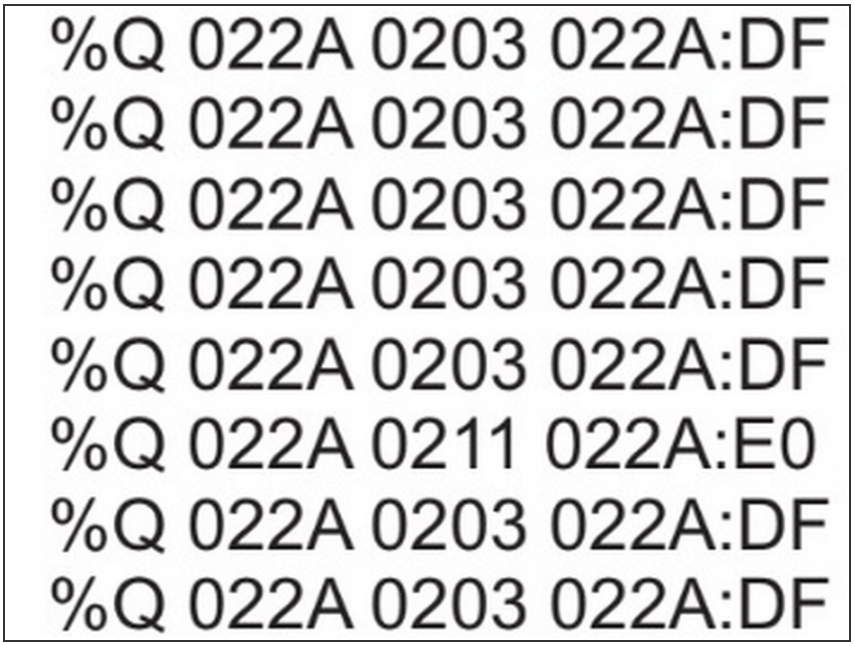

- A computer can be used to confirm data is flowing from the serial port on Roadwatch Controller.
- Connect your computer com port into com cable from the RS-232 adapter.
- Open up a Terminal application, select the correct COM port on your computer and set the baud rate to 9600.
- 3. Each time the Upper case “T” is typed in the terminal program Roadwatch sends a data stream as can be seen and confirmed.

© 2024 - Uncontrolled If Printed