Rasco EP010

Written By: Jason Fox



© 2024 - Uncontrolled If Printed

INTRODUCTION

[video: https://www.youtube.com/watch?v=uMt7eAdEUoU]

© 2024 - Uncontrolled If Printed


— Requirements



- IOX-WRKS primary port connects to the serial port on the Rasco EPO10 with a standard straight cable HRN-DB9SI15.

— Installation



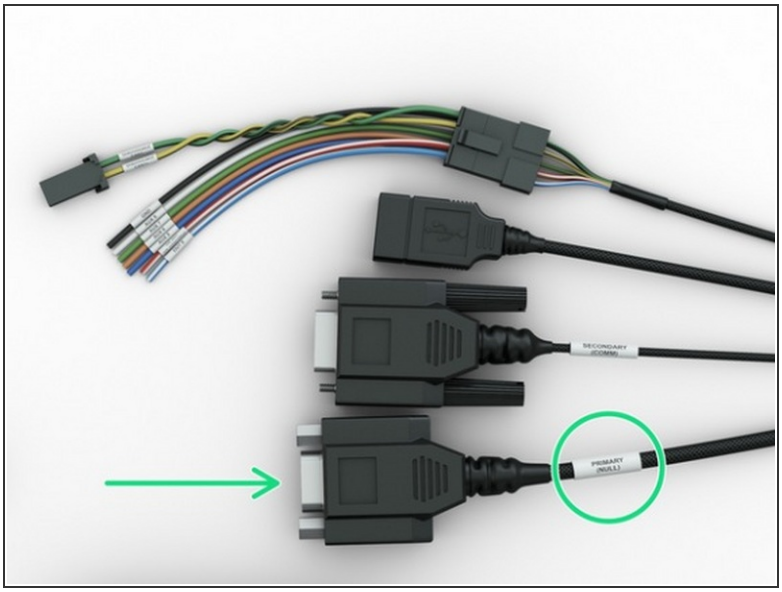

- Connect one end of the HRN-DB9SI15 cable to the serial port on the EPO10 controller.
- Connect the other end to the IOX-WRKS primary port.

© 2024 - Uncontrolled If Printed

Ensure the IOX-WRKS has the correct controller configuration loaded before proceeding to verification / simulation mode.

— Controller Configuration

Rasco EPO 10 requires protocol EN 15430-1

- Rotate center dial to the right to obtain “Rasco” selection. Press “check” button, enter passcode (727) using the three dials, press checkmark again.
- Select the menu button, then Executive settings, Option settings, then Mobile box. Ensure baud rate is set to 115200
- Exit to main operator screen.

— Simulation Mode

- Press “test” to enter SIM mode.
  - Use up/down arrows to increase / decrease speed.
  - Verify data flow.
  - Exit SIM mode when complete.

Never leave a controller in simulation mode!

© 2024 - Uncontrolled If Printed