
Giletta Ecosat

Written By: Jason Fox




© 2024 - Uncontrolled If Printed


— Requirements

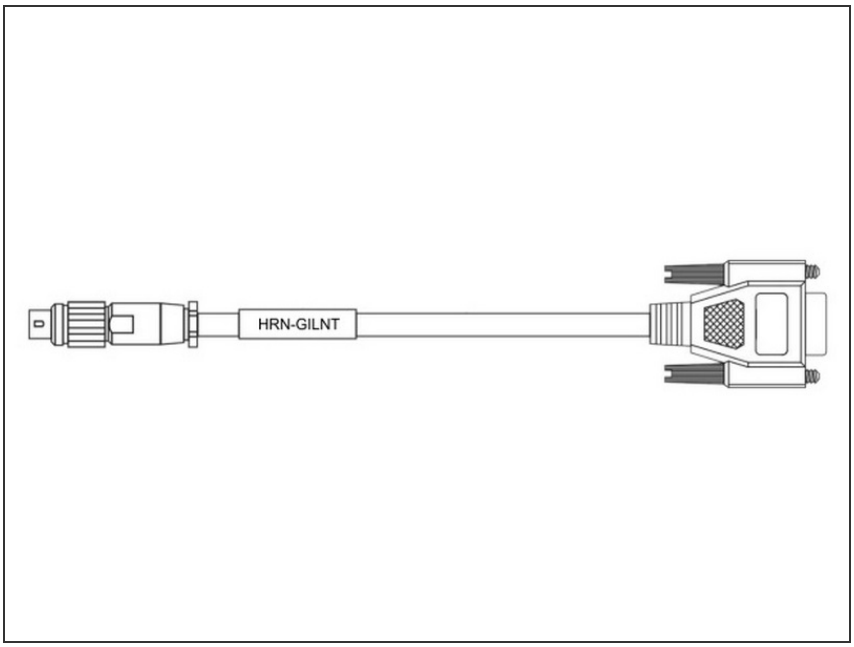

ⓘ Giletta integration requires Giletta proprietary cable to connected to the control head.

— Installation

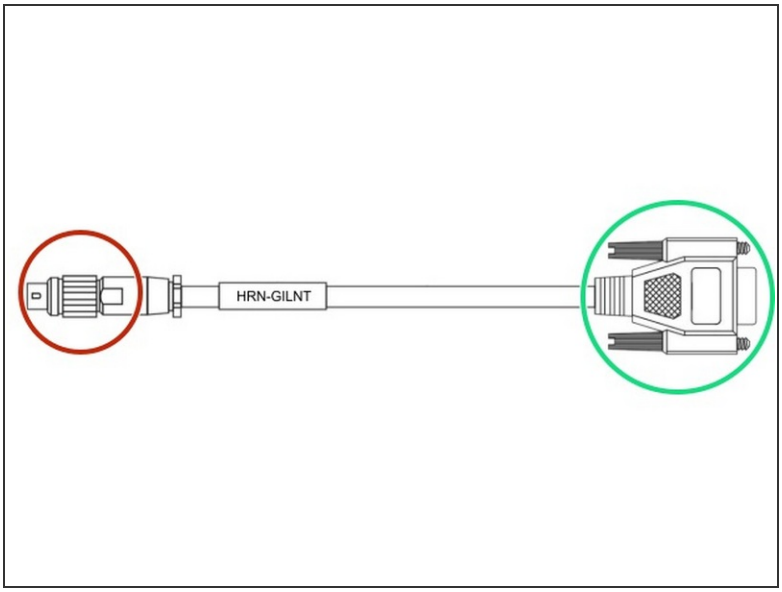

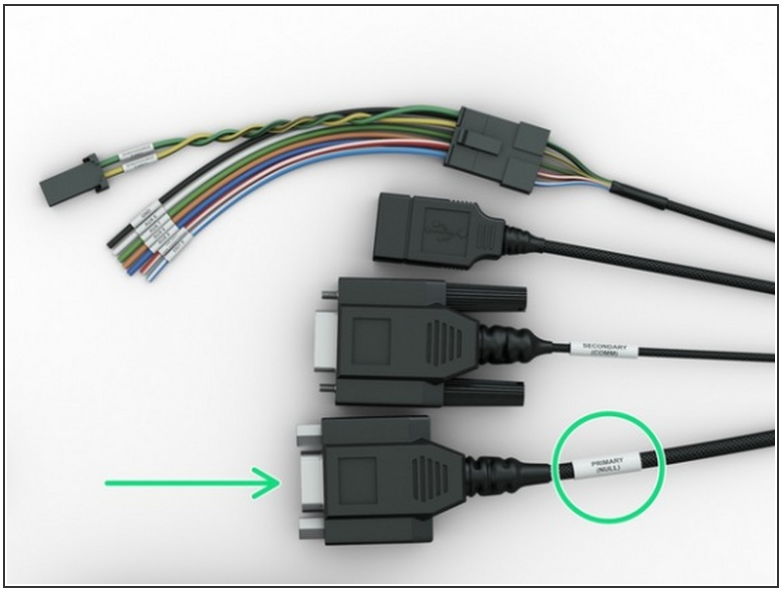

- Connect one end of Giletta cable to the Giletta Ecostat.
- The other end connects to the IOX-WRKS primary port.

Use HRN-DB9SI15 if additional length is required.

© 2024 - Uncontrolled If Printed

— Controller Configuration



- From “Main Menu”, select “Communications” and “Serial Data”.
  - Protocol = CEN
  - Baud =9600
  - COM = 1

ⓘ **Ensure the IOX-WRKS has the correct controller configuration loaded before proceeding to verification / simulation mode.**

© 2024 - Uncontrolled If Printed

— Simulation Mode



- Place the controller in Ground speed simulation, set the rates, and confirm data is being captured.

⚠ **Never leave a controller in simulation mode!**

© 2024 - Uncontrolled If Printed