
D4T Key Box Installation for SKSNG166D4T, SKSNG204D4T, SKSNG447D4T

Written By: Mid City Support

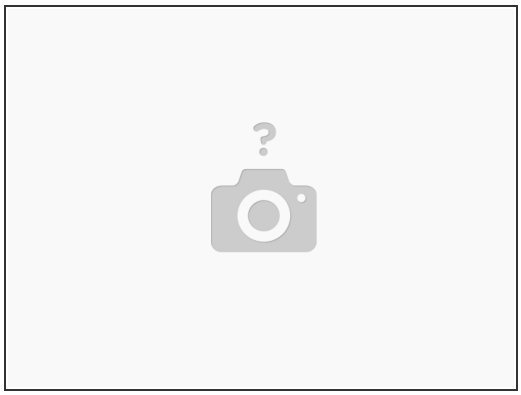

Step 1 — Remove battery from key




- Remove battery from OEM key

Step 2 — Insert key in key box coil bracket




- Insert key in bracket as shown in picture
- Make sure that the key is inserted far enough forward through the bracket

Step 3 — Close key box

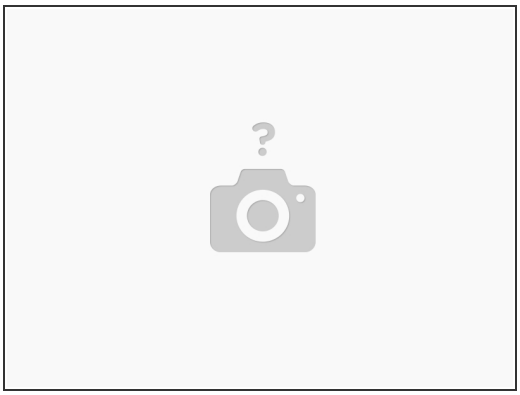


- Close key box lid and use four (4) included screws to secure lid
- Note for testing: remote starter will not work if light is getting in box (lid open).

Step 4 — Plug in RJ cable from EIS

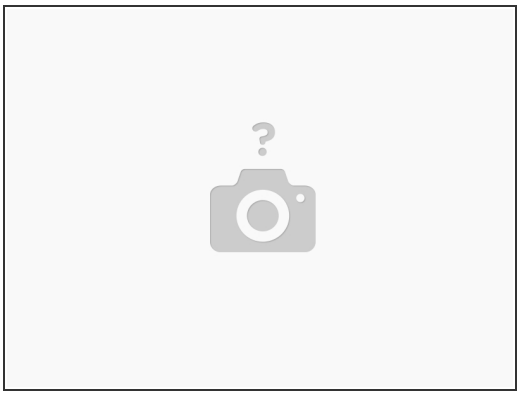

- This step assumes that the EIS modification has already been completed. Click here for EIS modification instructions
- Connect RJ cable from EIS modification into mating plug on key box.

Step 5 — Connect key box to SmartKey Starter module

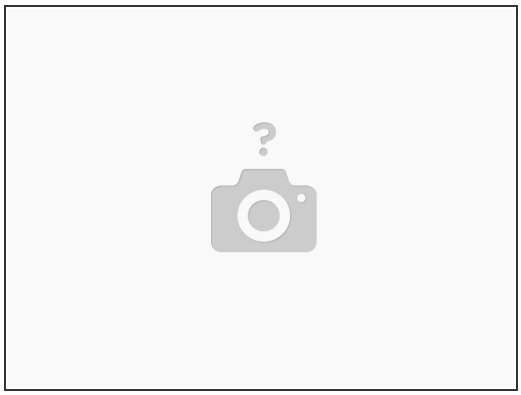

- Connect two (2) pin white plug from key box into the mating two (2) pin white plug labeled **KEY** or SmartKey Starter module