Changing the air filter on a Honda Civic

Written By: david defrance



© 2024

INTRODUCTION

Changing the air filter on a 2008 Honda Civic SPORT NAVI 2L2 ICDTI diesel.

TOOLS:


- A pair of gloves (1)

PARTS:

- Air filter (1)


© 2024

Step 1 — Air Filter Location

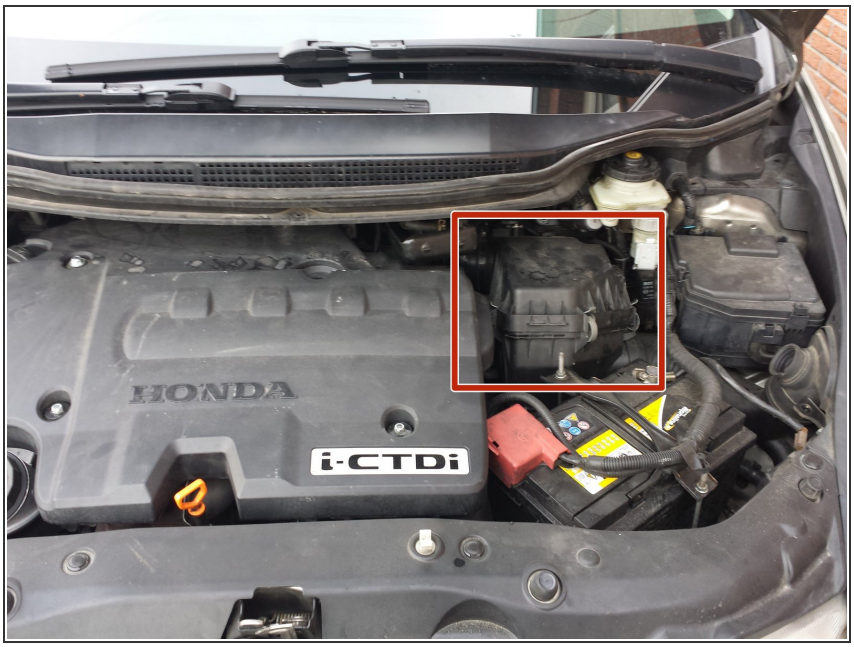

- Open the hood and locate the air box (it is in the red box).

Step 2 — Access the filter

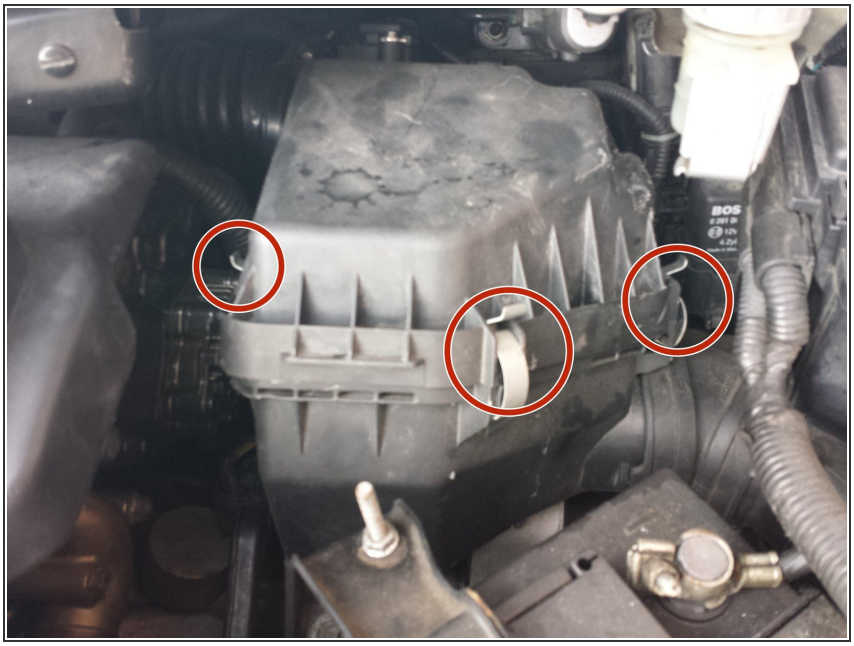

- Unclip the 3 fasteners

Step 3 — Access the filter



- Open the lid upwards.

Step 4 — Remove filter



- While keeping the lid up, remove the old filter by pulling towards yourself.

© 2024

Step 5 — Replacing the filter



- Compare the old and new filters. Check the condition of the new filter and its seal.
- Clean the air box using a blower
- Place the new filter in the air box by pushing it inwards, taking care not to damage it with the clip

Step 6 — Removing the filter



- Once the filter is correctly placed in the box, clip the clips onto the latter.
- Close the hood
- Start, and check for abnormal noise or vibration.

Remember to change your air filter every 20,000 km under normal conditions.