Replacing Deionized Water

Explain the process to retrieve and replace Deionized Water

Written By: Richard Leo Lempicki

© 2022

Introduction

The HP Jet Fusion 580 uses deionized water every print and must be refilled afterwards.

© 2022

Step 1 — Retrieving Deionized Water

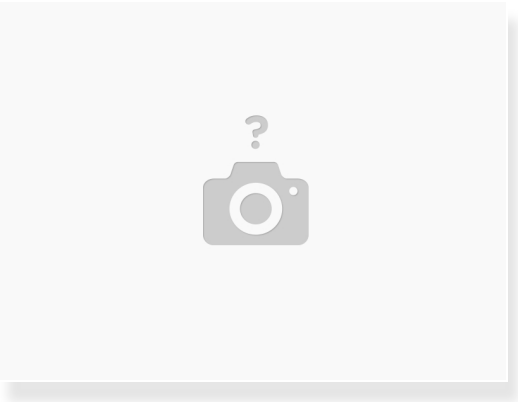

- Deionized (DI) water can be found in the HP cabinet
- If all of the DI water containers are empty ask Nate or Andy to let you into the lab next to the IFL to get more

© 2022

Step 2 — Filling the Tank

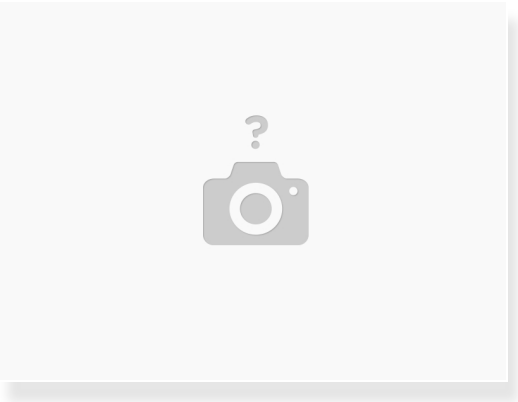

⚠ Never use Tap Water

- Open the agent door.
- Open the drawer B3
- Open the tank cover and add water until it reaches the max fill line

ⓘ The water filters through very slowly so it will have to be filled multiple times to reach the max line

- Wipe away any excess water
- Close the tank cover, the drawer, and agent door

© 2022