Plastic Washer, Z29-1464

A flat plastic washer used in the fastening of the front and back wipe arms, which extend to the contact rollers.

Written By: Wexxar WISE Admin




TOOLS:


- 5/32" Hex Key (1)
- 1/8" Hex Key (1)
- 3/32" Hex Key (1)
- 3/16" Hex Key (1)

PARTS:

- Z29-1464 (2)
  Plastic Washer

Step 1 — Remove the Side Plate

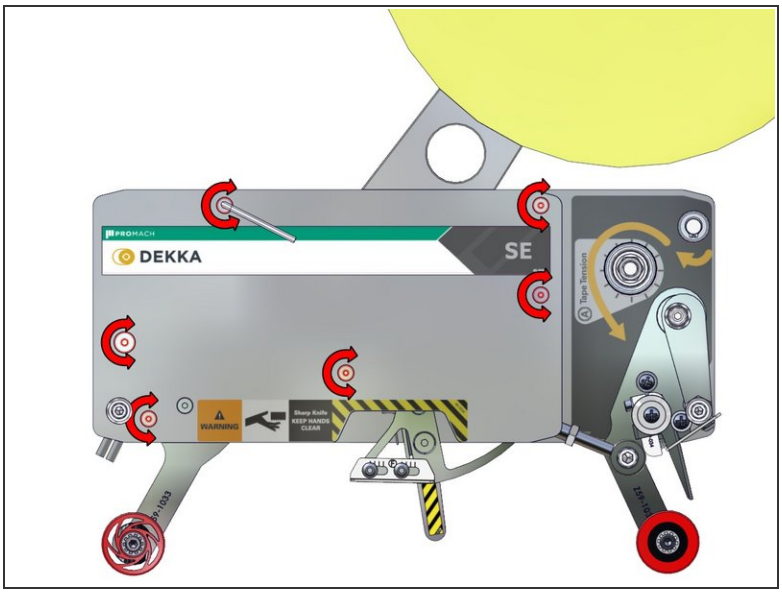


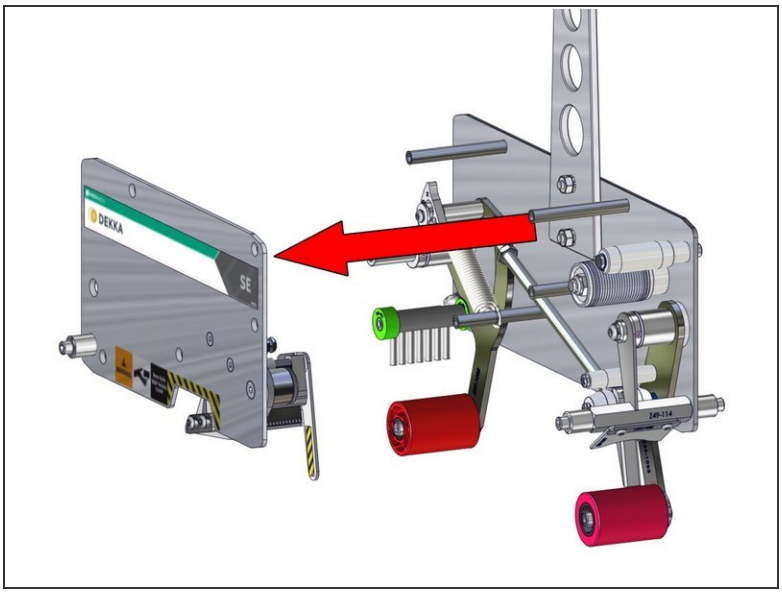


⚠ **Warning! Sharp Blade!**

- Using a 1/8” and 5/32” hex key, remove the six screws that secure the Side Plate.
- Remove the Side Plate.


Step 2 — Remove the Front Mount Assembly

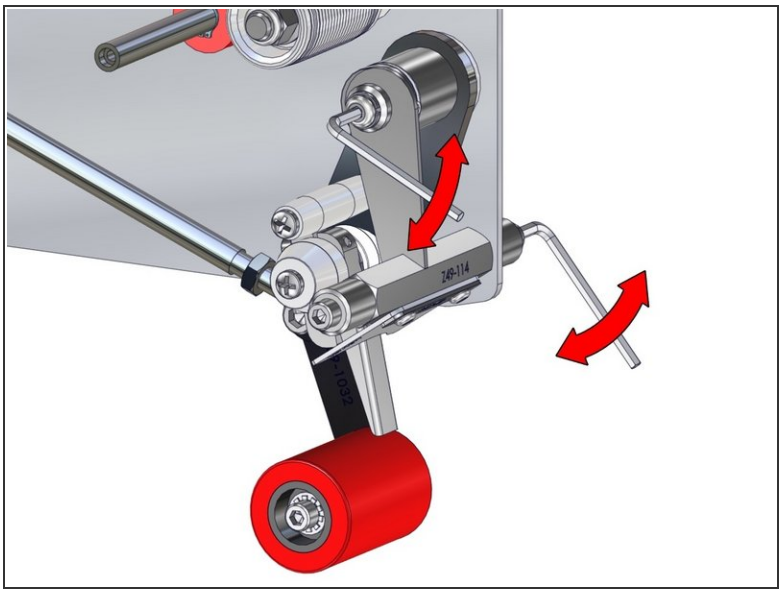


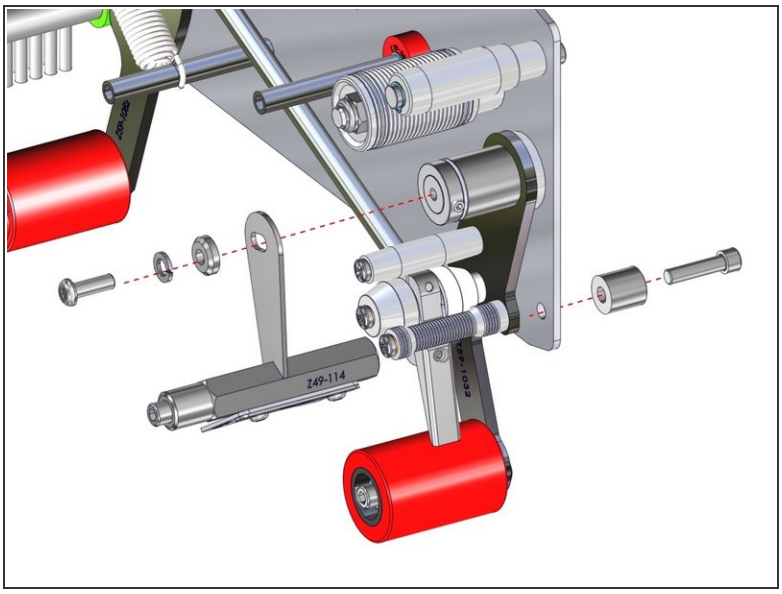


- Using a 3/16" hex key, remove the two screws that secure the Front Mount Assembly.
- Set aside components in a safe place.

Step 3 — Remove the Locking Spacers

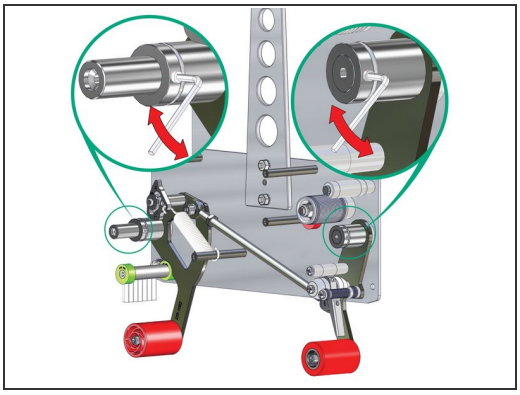

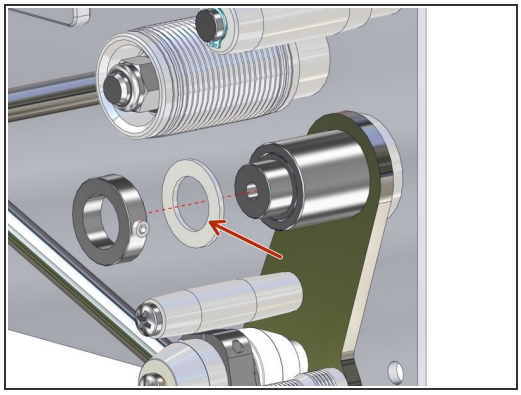


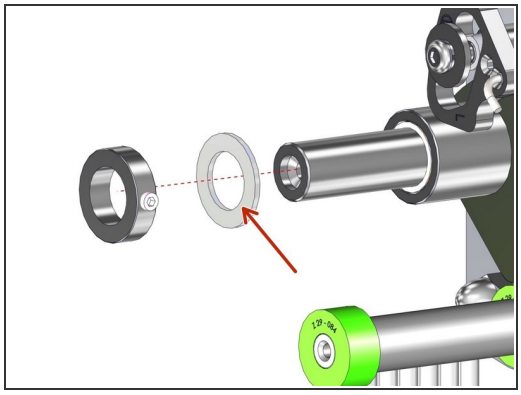


- Using a 3/32" hex key, loosen the set screw on the locking spacers.
- Slide off the locking spacers.
- Replace the Plastic Washers (Z29-1464) as needed.

© 2024

Step 4 — Reassemble components

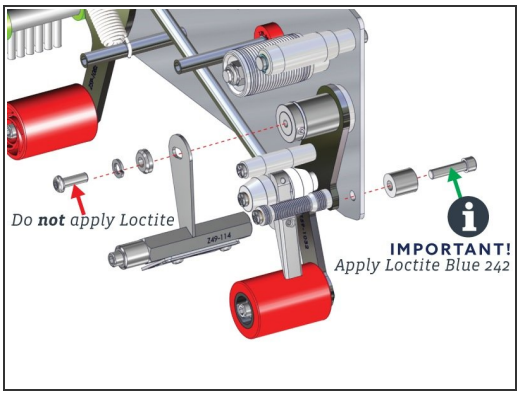

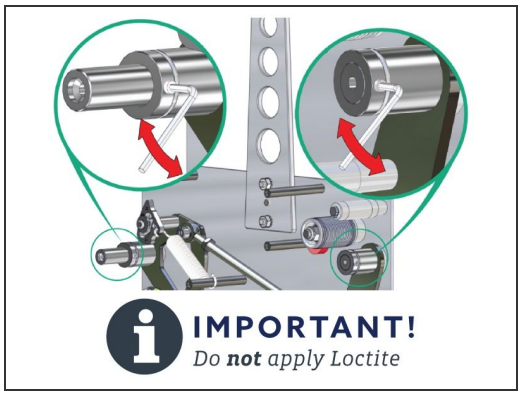



- Reverse steps to reassemble the tape head.

ⓘ **Only** apply Loctite Blue 242 on the Front Mount Assembly's exterior mounting screw and the Side Plate's screws.

⚠ Do **not** apply Loctite on other screws.

Thank you for contacting us. For us to better assist you, please reach out to our technical support by phone at 1.888.565.3219 or 604.930.9300 or by email at Wexxar.Service@promachbuilt.com or Wexxar.Parts@promachbuilt.com along with your machine model and serial number. One of our tech support reps will be glad to answer any questions you may have.