
How to Maintain Your Dekka SE V3.1 Tape Head

Written By: Wexxar WISE Admin

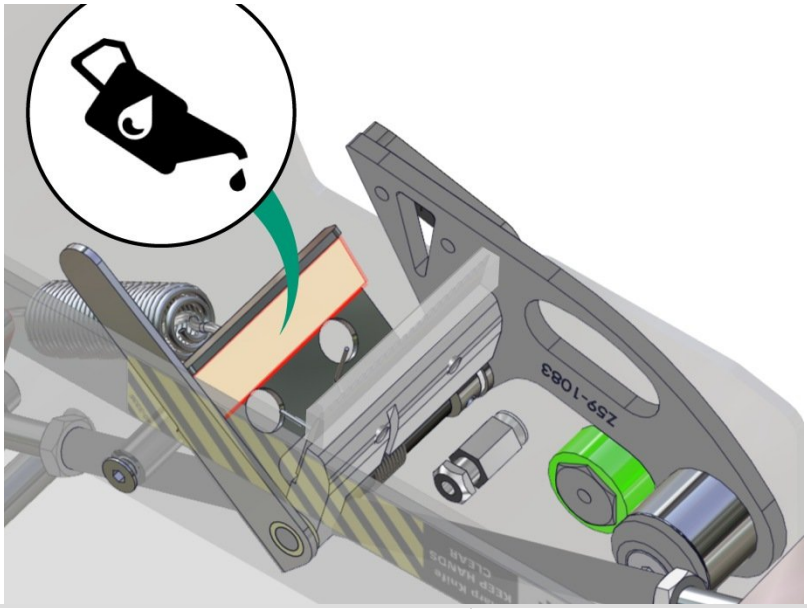


TOOLS:

- 9/16" wrench (1)

PARTS:


- Lubricating Oil (1)
- Solvent (1)


Step 1 — Oil the lubricating pad (every few days)

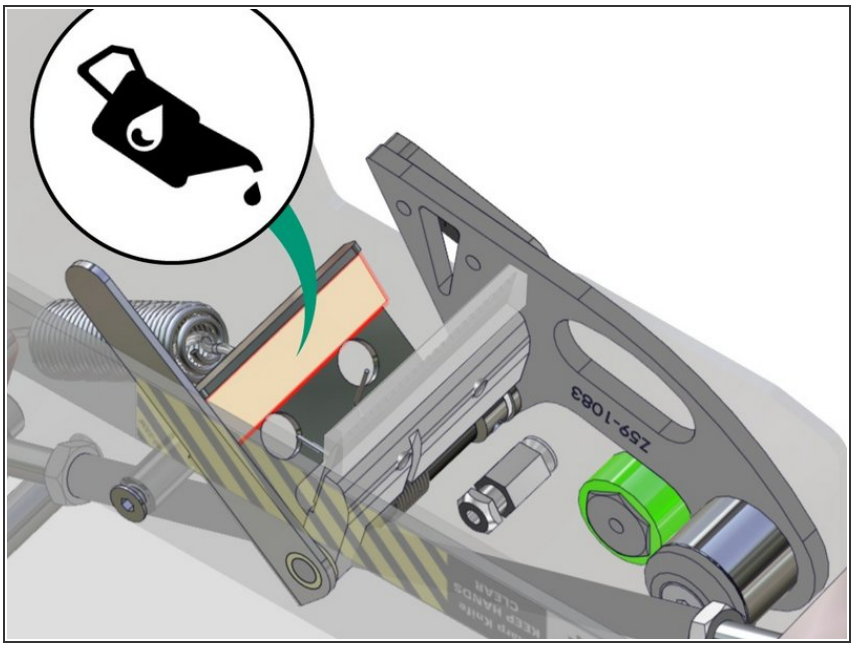

- **Every few days:** add lubricating oil to the Blade Lubricating Pad.
- This will prevent build-up and extend the service life of the blade.

Step 2 — Lubricate the Clutch Roller Bearing (every 3 months)

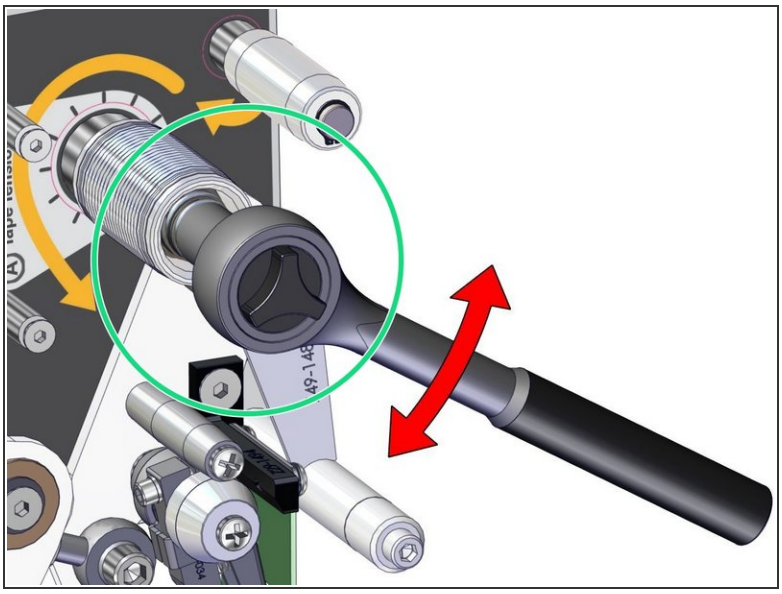

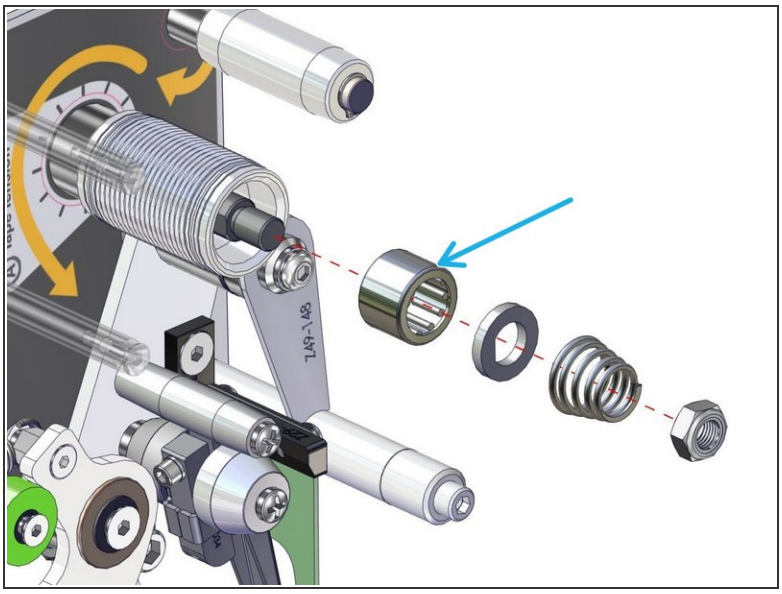

- **Every three months:** clean and lubricate the Clutch Roller Bearing.
- Lubricating the Clutch Roller ensures it rotates smoothly and provides proper tape tension during sealing.
- Use a 9/16” Socket Wrench to remove the nut.
- Disassemble the Clutch Roller and retrieve the bearing.
- Use solvent to clean the bearing. Blow with air to dry.
- Lubricate the bearing.
- Reverse steps to reassemble the Clutch Roller.

Thank you for contacting us. For us to better assist you, please reach out to our technical support by phone at 1.888.565.3219 or 604.930.9300 or by email at Wexxar.Service@promachbuilt.com or Wexxar.Parts@promachbuilt.com along with your machine model and serial number. One of our tech support reps will be glad to answer any questions you may have.

© 2024