Honda Civic EJ9 fuel filter change

Written By: alexis pedro



This document was generated on 2024-12-28 01:14:39 PM (MST).

INTRODUCTION

How to change the FUEL filter on a Honda Civic EJ9

TOOLS:

- Flat key (1)

14

- Pawl (1)
- Sockets (1)

10

PARTS:


- Fuel filter (1)

Step 1 — Filter location



- Open the hood to access the engine compartment and locate the filter to be changed. It is located next to the battery on the left.


Step 2 — Preparation around the filter

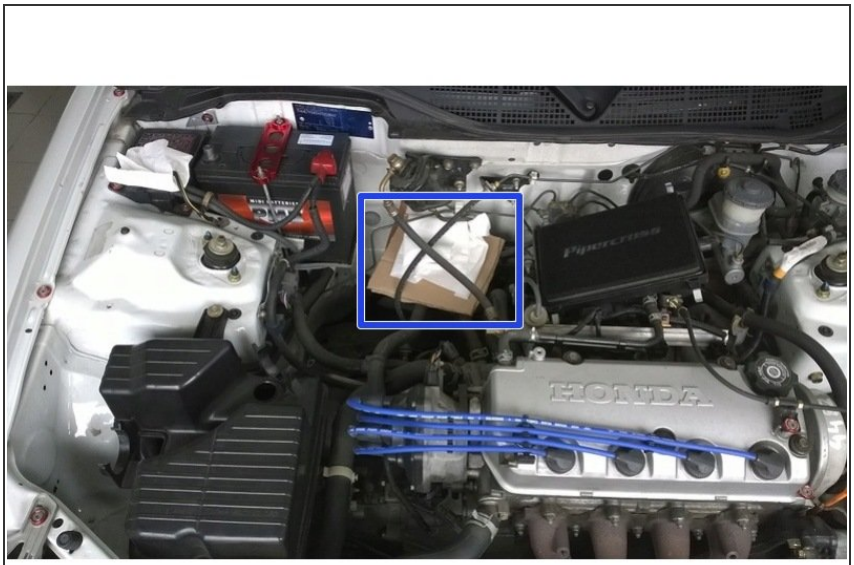

- Place a piece of cardboard with paper towels on top to avoid getting gasoline everywhere.

Step 3 — Removing the filter



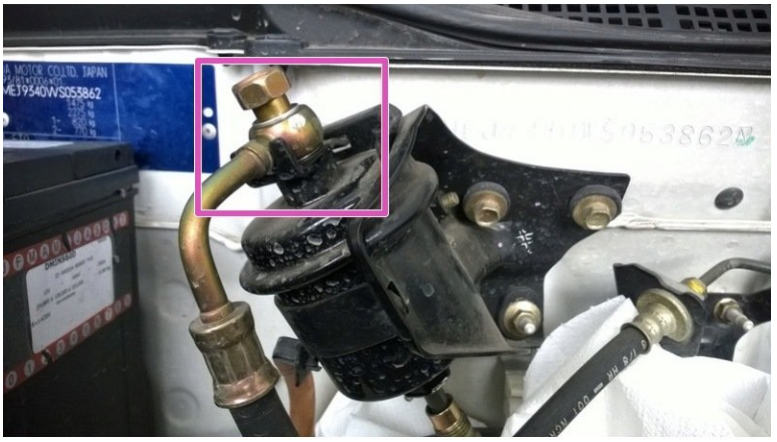

- Start by unscrewing the nut located below the filter using the 14 mm hose wrench. Then slide the nut to release it from its hole.
  - Then unscrew the nut at the top of the filter using the ratchet and the 16 socket. Then remove the nut with the pipe

Step 4 — Removing the filter (continued)






- Then remove the filter retaining ring using the 10 socket and the ratchet. This is located behind the filter.
- Remove the retaining ring, the filter is only held by a sort of tab. Pull the filter towards the front of the vehicle to release the tab from its housing and pull upwards to remove the fuel supply hose.

Step 5 — Installing the new fuel filter



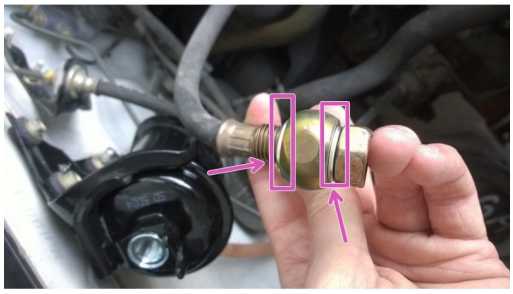



- Then replace the new filter, taking care to compare them beforehand. Screw the nut under the filter and the nut on the filter fixing ring back on.
- Replace the nut gaskets at the top of the filter (provided with the new one) and screw the nut back into its housing

⚠ That's it, before starting, turn on the ignition 2 or 3 times so that the new filter fills with gasoline.

© 2024