



Attach particle inlet (PCX)

For AQS 1 fitted for PCX module.

Written By: Kyle Alberti




 TOOLS:

- [Small Phillips head screwdriver](#) (1)

 PARTS:

- [PM inlet o-ring](#) (1)

Step 1 — Turn off monitor

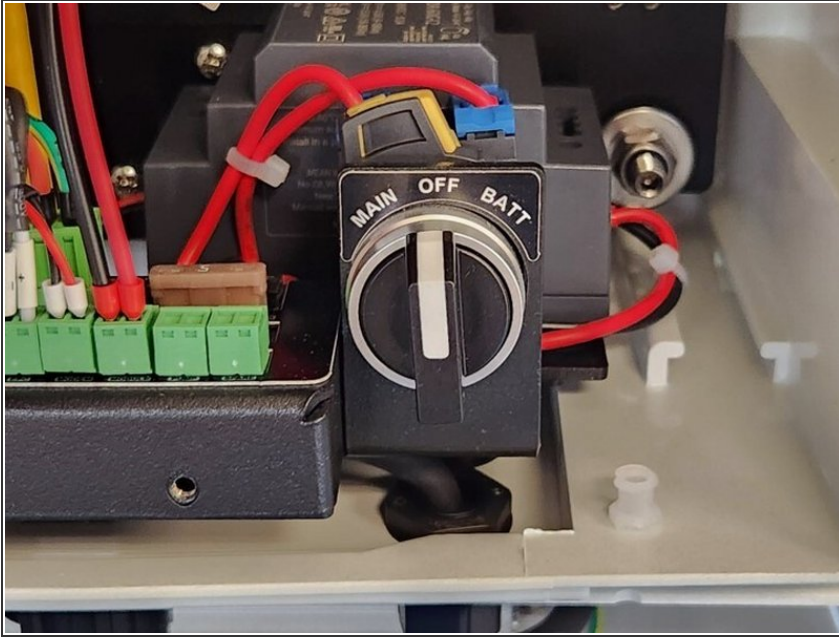


- Turn off the monitor by rotating the switch in the lower right corner to the OFF position.

Step 2 — Assemble and attach inlet



- The PM inlet is held by a 1/2" Swagelok compression fitting and ships with a cap fitted to prevent debris ingress
- Remove the cap from Swagelok fitting
- Press the TSP inlet on to the inlet tube ensuring the o-rings remain in the groove.
- Insert the PM inlet into the Swagelok fitting and carefully tighten. Thread tape is NOT required.

Step 3 — Turn on monitor

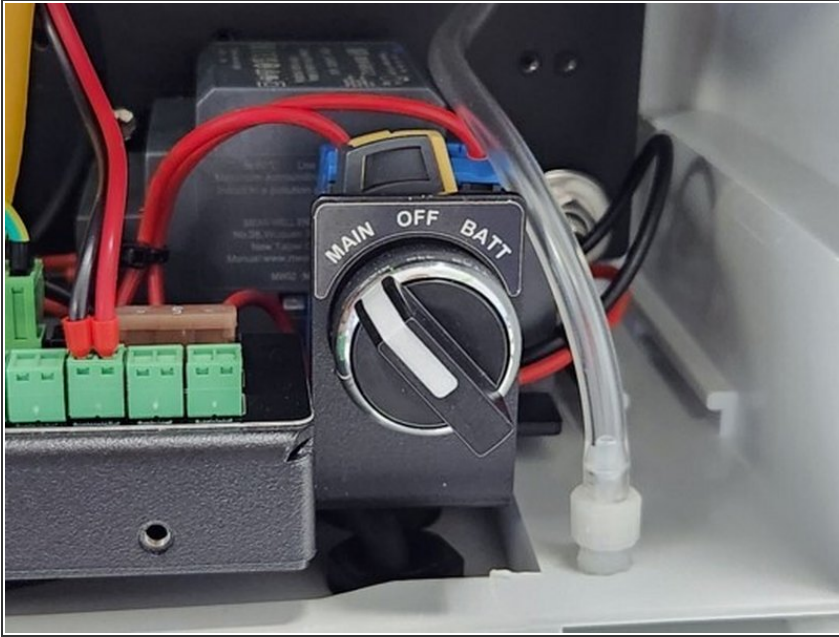

- When you're satisfied the inlet is secure, turn on the monitor by changing the switch back to the MAIN position.

For further support, contact [Technical Support](#).