





CH43-B - Thumbstick 7 Segment Map

Connect a Thumbstick to a Bit Board and view the output using a 7 Segment Display.

Written By: Pete Prodoehl

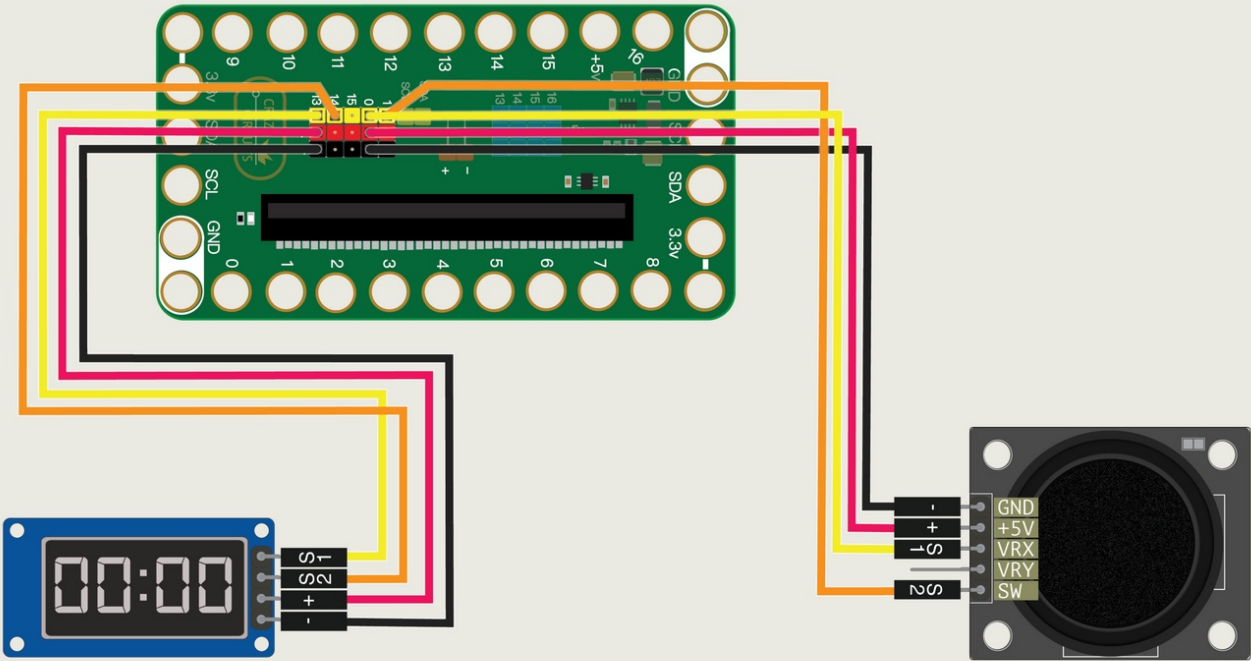

TSTK	Bit Board
GND	-> - (Negative) Pin
+5V	-> + (Positive) Pin
VRX	-> PIN 0 (S1)
VRY	-> (not used)
SW	-> PIN 1 (S2)

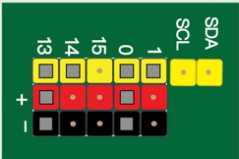

7SEG	Bit Board
CLK	-> Pin 13 (S1)
DI0	-> Pin 14 (S2)
VCC	-> + (Positive) Pin
GND	-> - (Negative) Pin

INTRODUCTION

Connect a Thumbstick to a Bit Board and view the output using a 7 Segment Display.



TOOLS:


- [Computer](#) (1)



PARTS:




- [Crazy Circuits Bit Board](#) (1)
- [micro:bit](#) (1)
- [Crazy Circuits Ribbon Cable](#) (2)
- [Thumbstick](#) (1)
- [7 Segment Display](#) (1)

Step 1 — Connect the Thumbstick

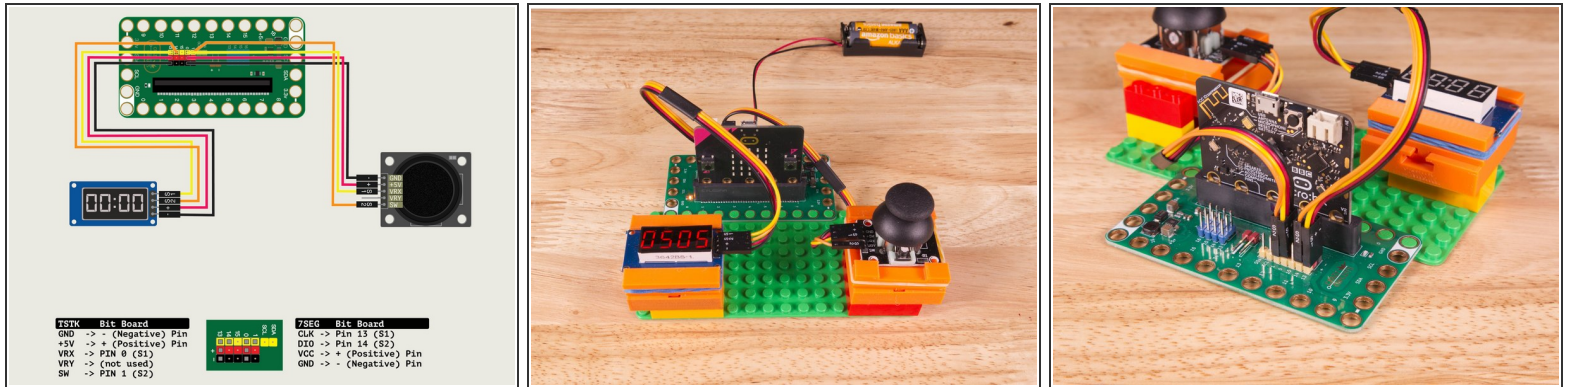


- We'll connect the **Thumbstick** with a **Crazy Circuits Ribbon Cable** using all four wires.
 - Plug the three-wire connector of the **Crazy Circuits Ribbon Cable** into the row with **Pin 0** on the Bit Board. The wire colors should match the pin header colors, with **S1** (yellow) going to the yellow pin.
 - Next, plug **S2** (orange) into **Pin 1**. *(S2 is separated from the three-wire connector to allow you to plug it into another row.)*
 - To the Thumbstick plug - (black) into **GND**, + (red) into **+5V**; **S1** (yellow) into **VRx**; **S2** (orange) into **SW**.
- ☑ We won't plug anything into **VRy** pin for this example.

Step 2 — Connect the 7 Segment Display

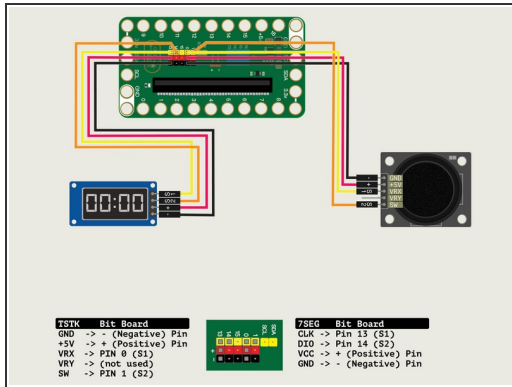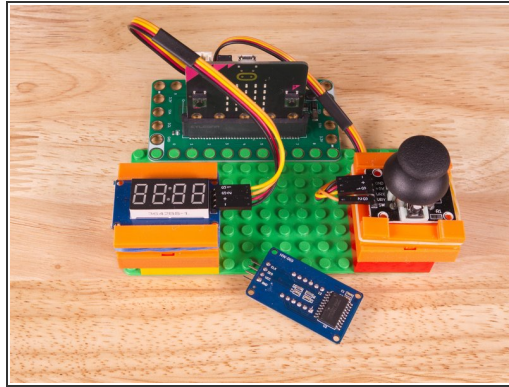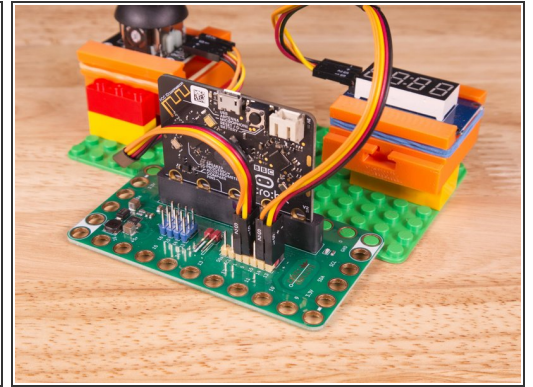


- We'll connect the **7 Segment Display** with a **Crazy Circuits Ribbon Cable** using all four wires.
 - Start by plugging the connector with the three wires in it (Black, Red, Yellow) into the **Pin 13** row of the Bit Board. (Make sure the Black wire is in - and the Yellow wire labeled **S1** is closest to the number **13** on the Bit Board.)
 - We can then plug the Orange wire labeled **S2** into **Pin 14** on the Bit Board.
 - Now we'll connect the other end of the Ribbon Cable to the **7 Segment Display**.
 - The pin labels are on the back of the 7 Segment Display PCB. From top to bottom it's **CLK**, **DIO**, **VCC**, **GND**.
 - **CLK** stands for **Clock** and **DIO** stands for **Data Input/Output**. **VCC** is the **Positive (+)** and **GND** is the **Ground (-)** or **Negative**.
 - **S1** (Yellow) goes to **CLK**, **S2** (Orange) goes to **DIO**, and then **+** (Positive) goes to **VCC** and **-** (Ground or Negative) goes to **GND**.
- ☑ Make sure every wire is connected in the correct place, or our display will not work!

Step 3 — Mounting the Thumbstick and 7 Segment Display

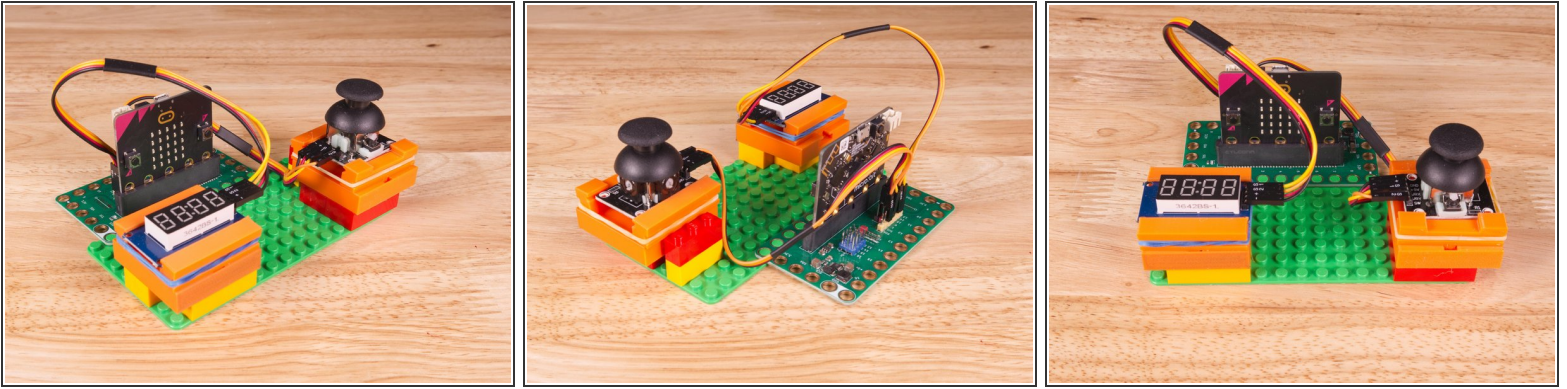


- We used some 3D printed parts we designed to hold the Thumbstick and 7 Segment Display in place on a LEGO baseplate.
- We attached two 2x4 LEGO Bricks to the bottom of the 3D printed holders to allow it to snap onto the LEGO Baseplate a bit easier.
- Alternately you can try to use some LEGO bricks and some rubber bands/tape to hold the sensors in place.
- You can always 3D print your own [Thumbstick Sensor Holder](#) and [7 Segment Display Holder](#) if you need them.

Step 4 — Load the Code

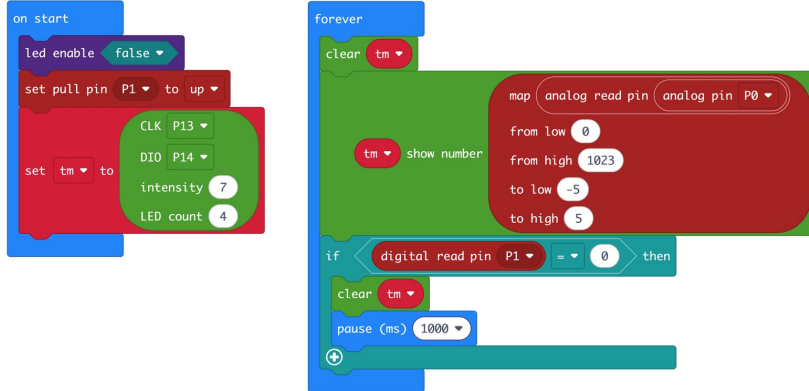


- If you've never used a micro:bit before you'll want to check out this guide: [Bit Board V2 Setup and Use](#)
- We're going to load the following code for our **Thumbstick 7 Segment Map** program: https://makecode.microbit.org/_MHuMpFL7o...
- In the on start block we'll disable the LED matrix and set **Pin 1** to **pull up**, as we'll attach this to the button on the Thumbstick.
- We'll also set up our 7 Segment Display by setting **CLK** to use **Pin 13** and **DIO** to use **Pin 14**. (We assign the display to a variable named **tm**.)
- In the forever loop we'll first clear the display, and then show number, with the value we get from an analog read on **Pin 0**, but this time we'll map the values from the input (**0 to 1023**) to an output ranging from **-5 to +5**.

Step 5 — Test it Out!

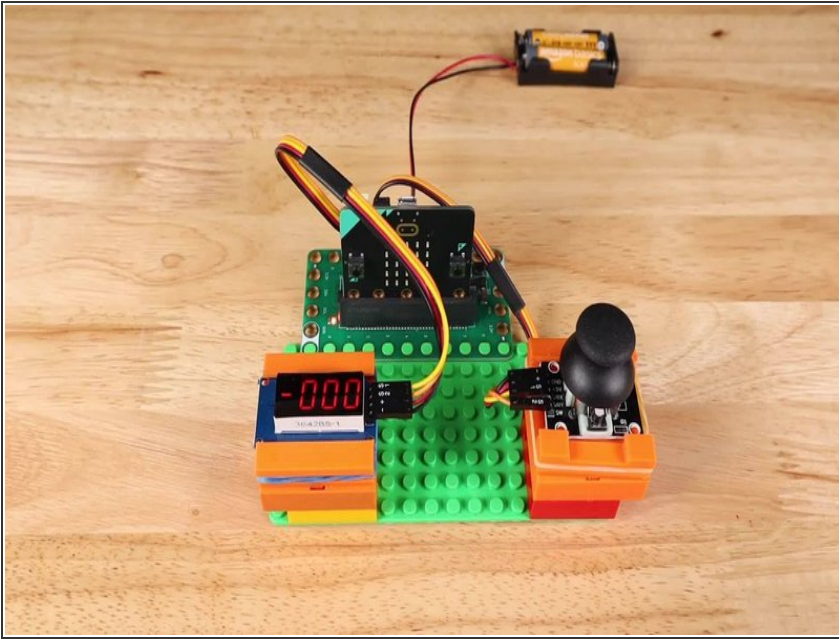

- Once the code is loaded it should start running immediately.
- ❗ You can power the micro:bit via the USB cable you used to load the code or you can use a battery pack plugged into the Bit Board.
- Move the Thumbstick left and right and you should see the value shown on the 7 Segment Display change.
- Press the Thumbstick (button) down and the display will clear for 1 second.

Step 6 — Follow Along

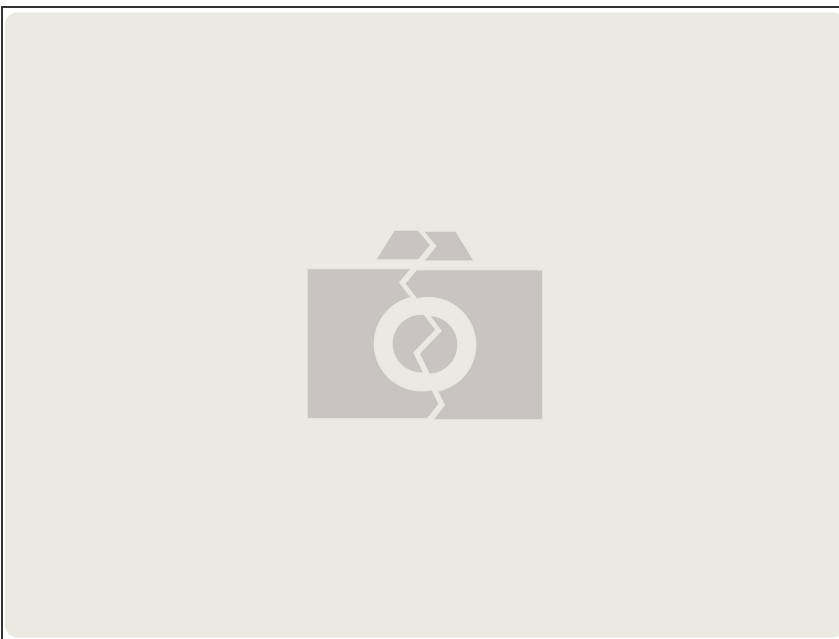

- Follow along with our recorded Live Stream!
- ❗ (We'll add the video to this step after we do the stream!)