Arctic Cat M8000 Sno Pro 2016-18

FLS-78023

Written By: Nicolas



© 2026


Step 1 — Arctic Cat M8000 Sno Pro 2016-18





- Lift the front of the snowmobile in such a way that the skis are off the ground.
- Remove the stock shocks according to the procedures recommended by the manufacturer.
- Install the Elka front shocks with the piggyback reservoir at the top and pointing fowards of the snowmobile as shown


Step 2

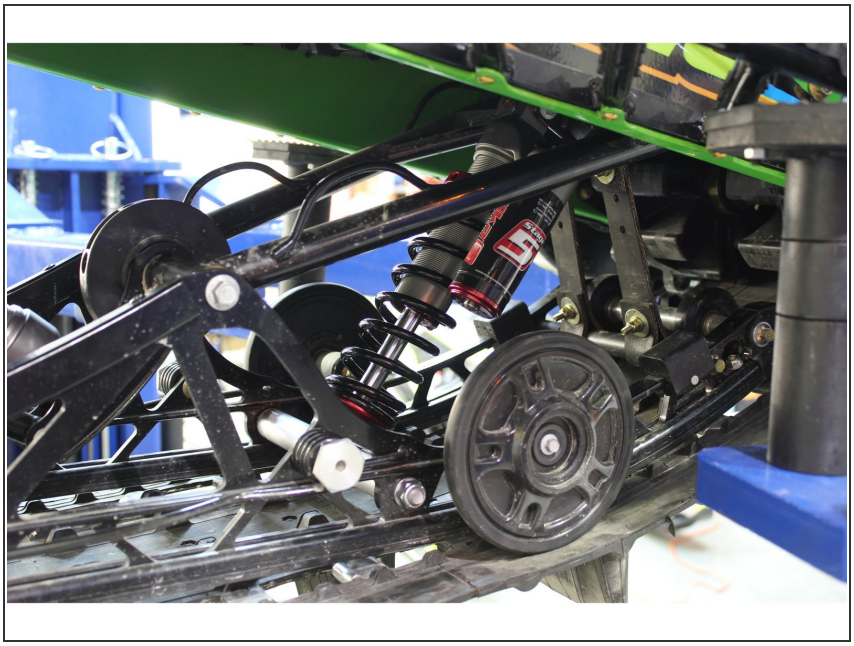

- Remove the limiter strap.
- Lift the rear of the snowmobile in such a way that the track is not touching the ground.
- Remove the stock suspension.
- Install the Elka center shock with piggyback reservoir at the top and pointing towards the right side of the snowmobile as show on the photo.

Step 3



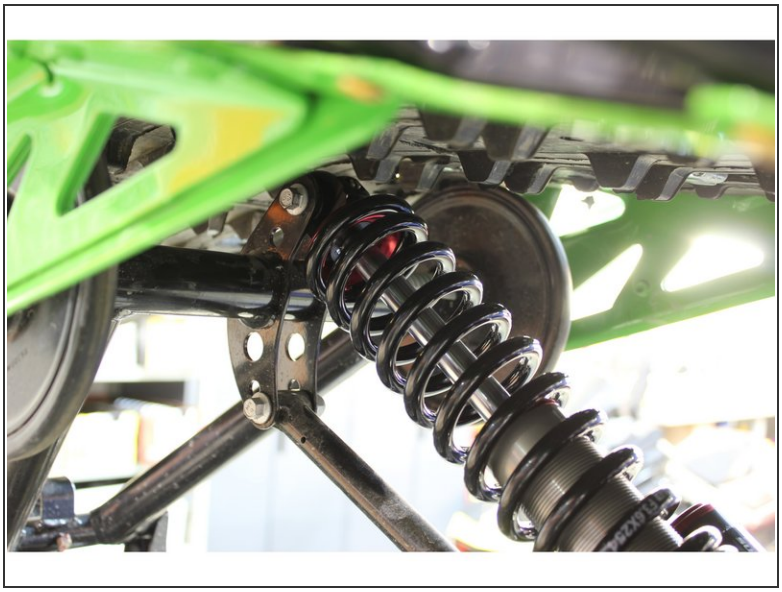

- Install the Elka rear shock with the piggyback reservoir install on the left side with the rebound facing upwards as shown on the photo.
- Lower the snowmobile completely and re-install the limiter strap.