Polaris switch back Pro-S / Adventure 2017

FLS-78034

Written By: Nicolas



Step 1 — Polaris switch back Pro-S / Adventure 2017



- Lift the front of the snowmobile in such a way that the skis are off the ground.
- Remove the stock shocks according to the procedures recommended by the manufacturer.
- Install the Elka front shocks with the piggyback reservoir at the top and pointing outside of the snowmobile as shown.
- The lower shock eyelets should be installed with the rebound adjuster oriented towards the outside of the vehicle as shown.

Step 2



- Remove the limiter strap.
- Remove the bottom idler wheel.
- Lift the rear of the snowmobile in such a way that the track is not touching the ground.
- Remove the stock suspension.

Step 3



- Install the sleeve through the bottom eye with the plastic spacer on both side of the eyelet.

Step 4





- Install the Elka center shock with piggyback reservoir at the top and pointing towards the right side of the snowmobile as show on the photo.
- The lower shock eyelet rebound adjuster screw must be oriented toward the rear of vehicle,
- Tighten the bolts at manufacturer's specifications .
- Re-install the limiting strap. You may need to add load on vehicle to perform installation.

Step 5





- Remove the seat and the aluminium rack.
- Remove the 10mm bolt gaz tank.
- Remove the stock rear shock bolt by lifting the gaz tank upward until the bolt can be remove

Step 6






- Only on **ADVENTURE** model
- Remove the Oem air filling device as shown.

Step 7

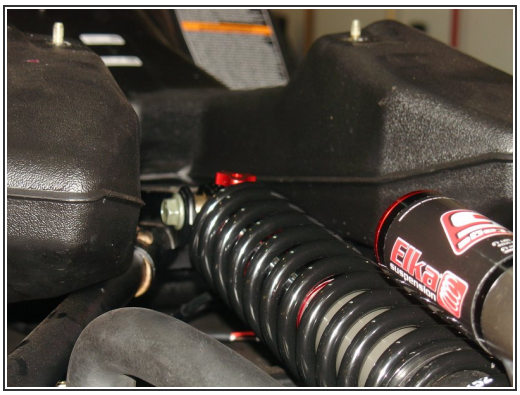

- Install the Elka rear shock with the piggyback and rebound facing upwards as shown on the photo.
- re-install all the the aluminium rack and seat.