Can-Am DS 250 2006+

FLS-251018_revA

Written By: Sebastien Blain



Step 1 — Installing FRONT Elka shocks






- Remove OEM shocks.
- Stage 3-4-5: Install front Elka shocks with the reservoir upside, facing outside the atv.
- Stage 1-2 : Install front Elka shocks with the head of shock upside and the nitrogen valve facing outside of atv
- The rebound adjuster screw must face the outside of atv. Lower eyelet can be turned if needed.

Step 2 — Installing REAR Elka shock





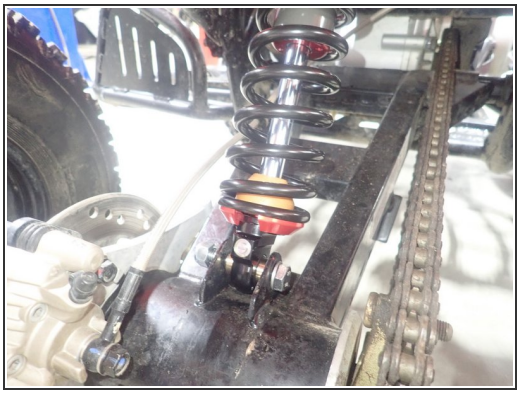

- Stage 4-5: Install Elka rear shock with the reservoir upside, and facing right of atv as shown.
- Stage 2: Install Elka rear shock with head of shock upside and the nitrogen valve facing front of atv.
- The rebound adjuster screw must face the rear of atv. Lower eyelet can be turned if needed.

© 2026