



Fasteners

Written By: Iroh



INTRODUCTION

Did you lose a screw in your Framework Laptop 16? Fear not! Follow this guide to replace your missing screws with the Framework Laptop 16 Fastener Kit.

The Fastener Kit only replaces the non-captive screws in your laptop.

Use the links below to jump to the part and find which screw to use:


- [Webcam and Mainboard](#)
- [Input Connector Board and Input Module](#)
- [Fingerprint Reader and Touchpad](#)
- [Storage](#)
- [Expansion Bay Shell](#)
- [Graphics Module](#)
- [Hinge](#)
- [Bottom Cover](#)
- [Display](#)



TOOLS:

- [Framework Screwdriver](#) (1)
-

Step 1 — Fasteners information

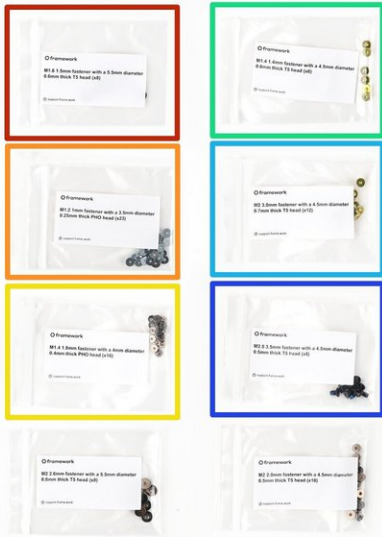


① The Fastener Kit contains the following:

- Grey screws labeled **"M1.6 1.5mm fastener with a 5.5mm diameter 0.6mm thick T5 head"**
- Silver screws labeled **"M1.2 1.0mm fastener with a 3.5mm diameter 0.25mm thick PH0 head"**
- Grey screws labeled **"M1.4 1.8mm fastener with a 4.0mm diameter 0.4mm thick PH0 head"**
- Gold screws labeled **"M1.4 1.4mm fastener with a 4.5mm diameter 0.6mm thick T5 head"**
- Gold screws labeled **"M2 3.0mm fastener with a 4.5mm diameter 0.7mm thick T5 head"**
- Black screws labeled **"M2.5 3.5mm fastener with a 4.5mm diameter 0.5mm thick T5 head"**

① Your Framework Laptop comes with a spare screw of each size, attached to the chassis under the ventilation plate. You can use the Fastener Kit to replenish any screws you used there.

Step 2

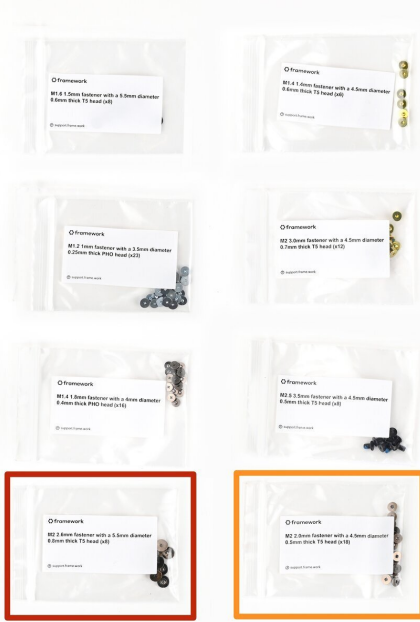

i The Fastener Kit also comes with two additional sets of screws that aren't included with the spares:


- Grey screws labeled **"M2 2.6mm fastener with a 5.5mm diameter 0.8mm thick T5 head"**
- Grey screws labeled **"M2 2.0mm fastener with a 4.5mm diameter 0.5mm thick T5 head"**

Step 3 — Webcam and Mainboard screws




- Use the grey screws labeled **"M1.6 1.5mm fastener with a 5.5mm diameter 0.6mm thick T5 head"** to secure the Webcam and Mainboard.

Step 4 — Input Connector Board and Input Module screws

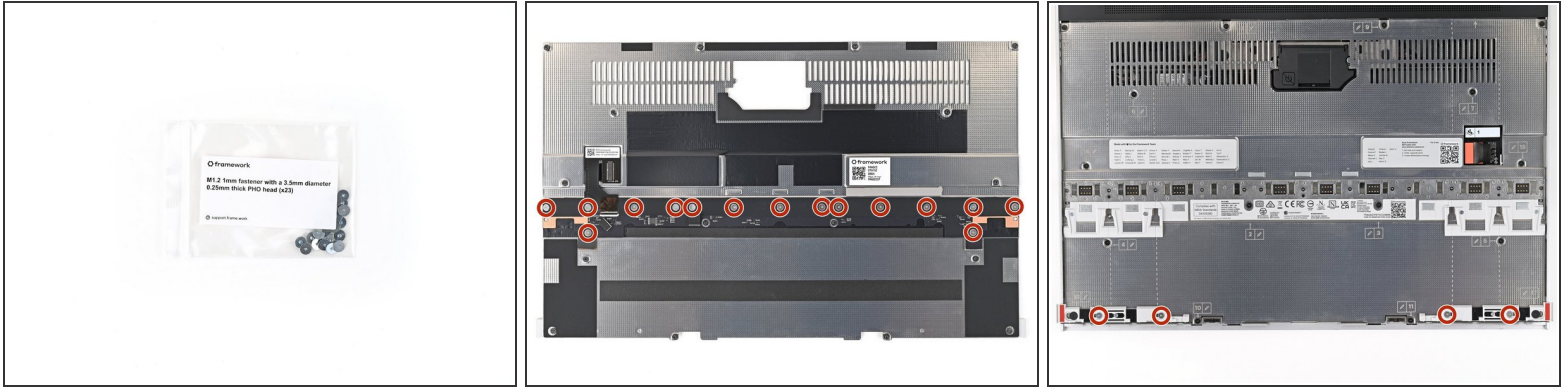


- Use the silver screws labeled **"M1.2 1.0mm fastener with a 3.5mm diameter 0.25mm thick PH0 head"** to secure the Input Connector Board and Input Module.

Step 5 — Fingerprint Reader and Touchpad screws

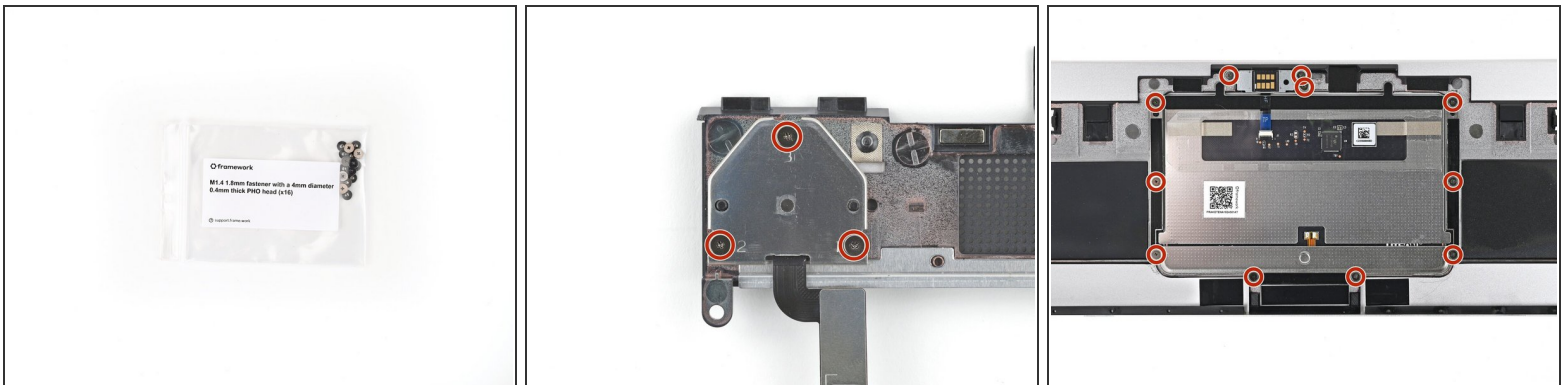

- Use the grey screws labeled **"M1.4 1.8mm fastener with a 4.0mm diameter 0.4mm thick PH0 head"** to secure the Fingerprint Reader and the bottom of the Touchpad.

Step 6 — Storage screws

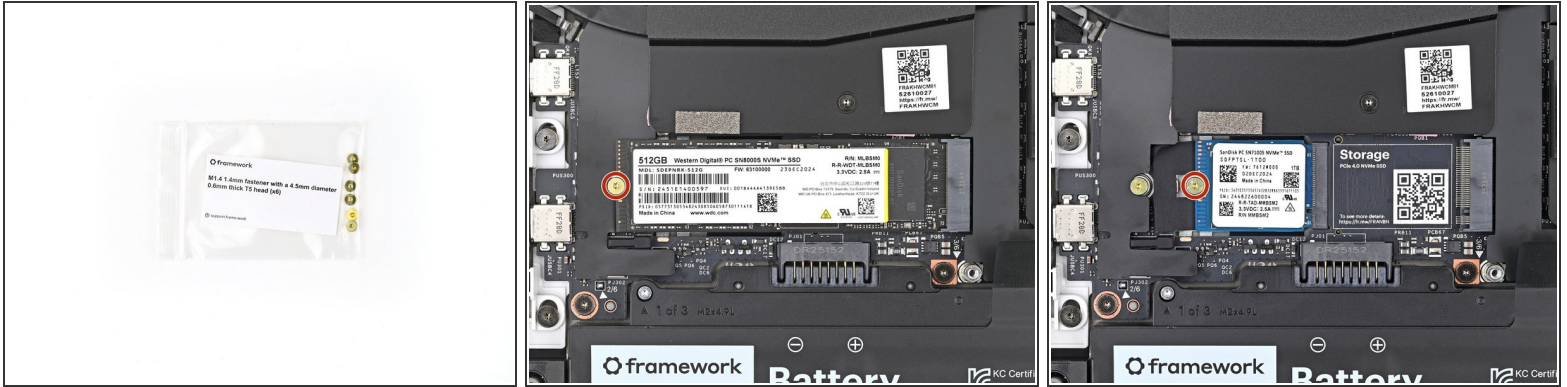


- Use the gold screws labeled **"M1.4 1.4mm fastener with a 4.5mm diameter 0.6mm thick T5 head"** to secure the Primary and Secondary Storage.

Step 7 — Expansion Bay Shell screws





- Use the gold screws labeled **"M2 3.0mm fastener with a 4.5mm diameter 0.7mm thick T5 head"** to secure the Expansion Bay Shell components.

Step 8 — Graphics Module screws

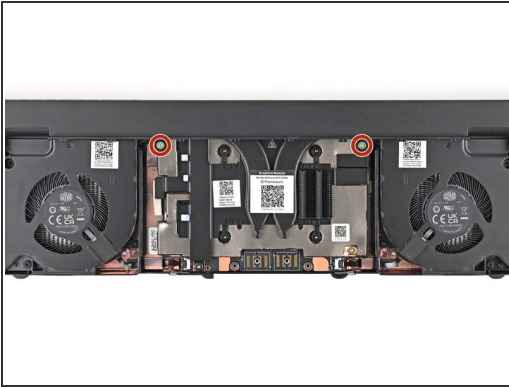


- Use the gold screws labeled **"M2 3.0mm fastener with a 4.5mm diameter 0.7mm thick T5 head"** to secure the Graphics Module cover.

Step 9 — Hinge screws

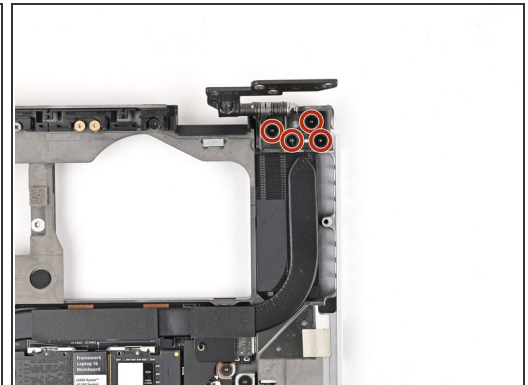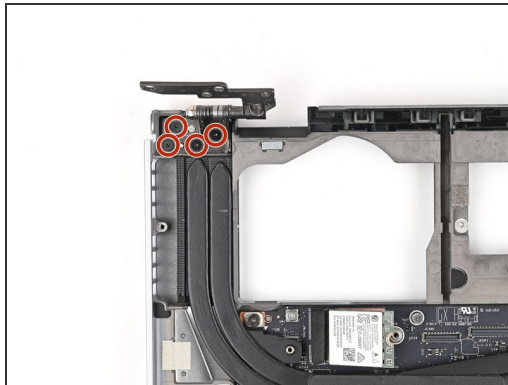


- Use the black screws labeled **"M2.5 2.0mm fastener with a 4.5mm diameter 0.5mm thick T5 head"** to secure the hinges to the bottom cover.

Step 10 — Bottom Cover screws

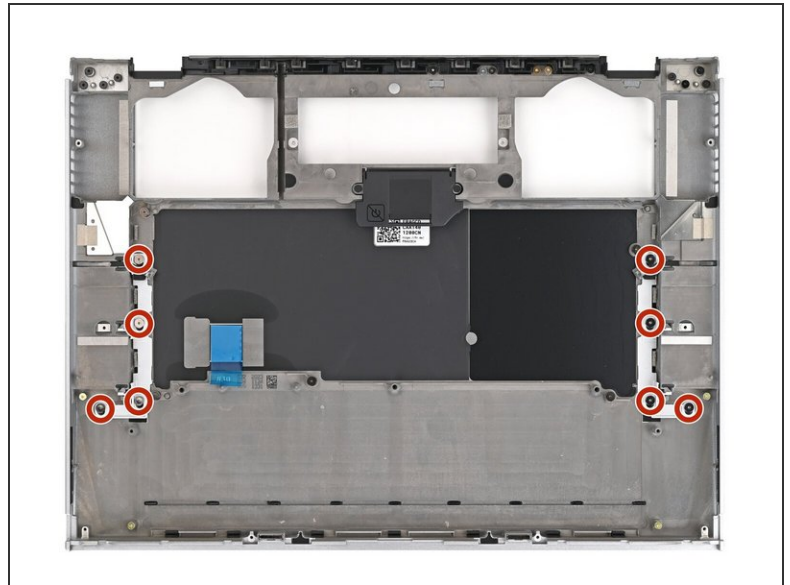

- Use the grey screws labeled **"M2 2.6mm fastener with a 5.5mm diameter 0.8mm thick T5 head"** to secure the Bottom Cover screws.

Step 11 — Display screws

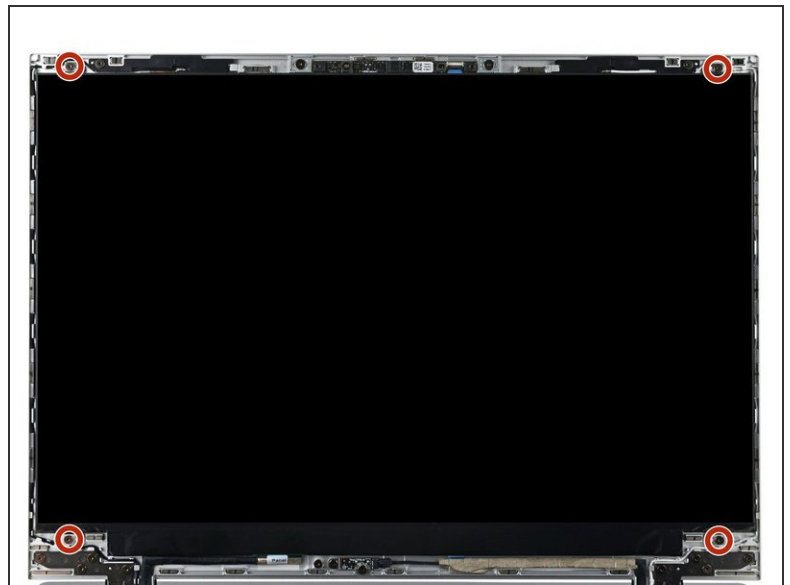

- Use the grey screws labeled **"M2 2.0mm fastener with a 4.5mm diameter 0.5mm thick T5 head"** to secure the display.

If you need help, [contact Framework support](#).