HRN-CT26T1 : Tesla Model Y

This guide will provide instruction for installing a Go 9 device into a HRN-CT26T1 : Tesla Model Y.

Written By: Jason Fox



© 2024 - Uncontrolled If Printed

TOOLS:

- Flush cutter (1)
- Panel Removal Tool (1)
- Multi Bit Screwdriver with Assorted Bits (1)
- Cable Ties (1)
- Double Sided Tape (1)

PARTS:

- GO9 (1)
- HRN-CT26T1 - Custom Tesla Model Y harness. (1)


© 2024 - Uncontrolled If Printed

— Installation





- The Tesla connector is located behind the lower center console panel which is held in with clips.
  - ⓘ For ease of installation, move both driver and passenger seats to their most forward position.
- Slide the end of a panel removal tool under the right side of the panel, twist slightly to release the clips, and then remove the panel.

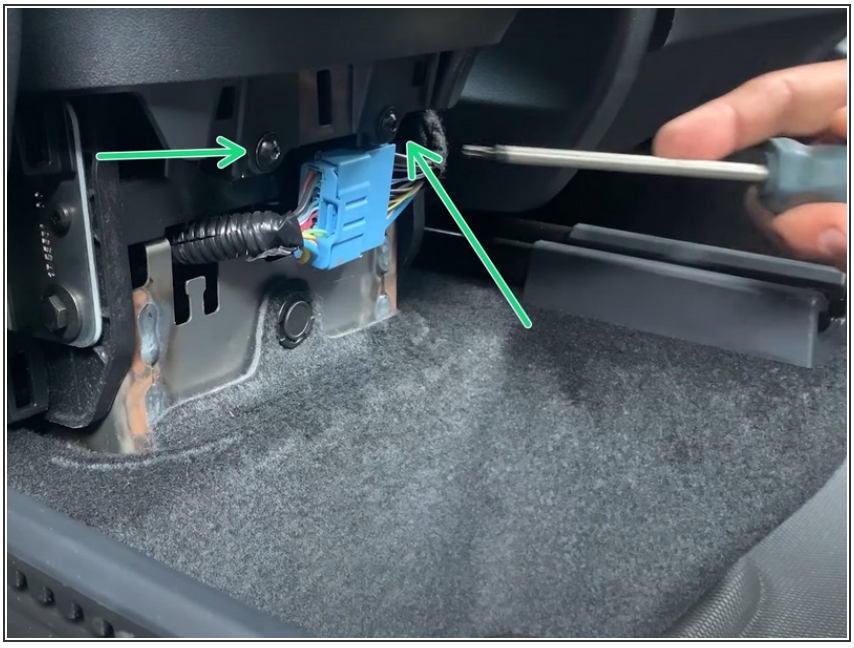

- Use a T20 TORX screwdriver to remove the two screws, as shown.

© 2024 - Uncontrolled If Printed





- Carefully pull the air vent panel outwards to release the clip and remove the panel.
- Place the panel on top of the center console.





- Remove the panel under the air vent using the same method.

© 2024 - Uncontrolled If Printed





- Unplug the Tesla connector and then plug in the HRN-CT26T1 Geotab harness.

! IMPORTANT: Ensure the harness and the Tesla connector are securely attached.



- Plug the GO device into the Geotab harness.
  - You should hear 6 beeps, and the Red, Blue and Green LEDs on the GO device should blink.

© 2024 - Uncontrolled If Printed




- Secure the connection with a cable tie, and trim any excess.





- Using an alcohol-based wipe, clean the bottom of the air vent.
  - ⓘ Make sure the surface is completely dry before proceeding.
- Apply double-sided tape to the bottom of the vent as shown.

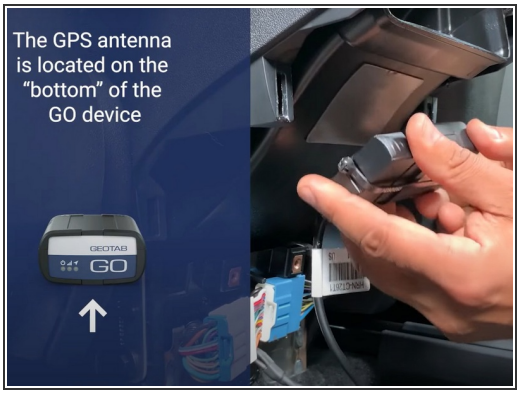


- Peel off the protective film from the exposed side of the double-sided tape.
- Attach the antenna side of the GO device the double-sided tape.
  - ⓘ The GPS antenna is located on the "bottom" of the GO device.
- Apply firm pressure for 30 seconds.





- Reinstall the removed panels in reverse order, starting with the center panel.
  - Line up the clips and press firmly, locking the panel into place.
  - Take the air vent panel and push the wiring down to prevent it from being pinched by the panel.
  - Line up the clips and firmly press the panel into place.

© 2024 - Uncontrolled If Printed

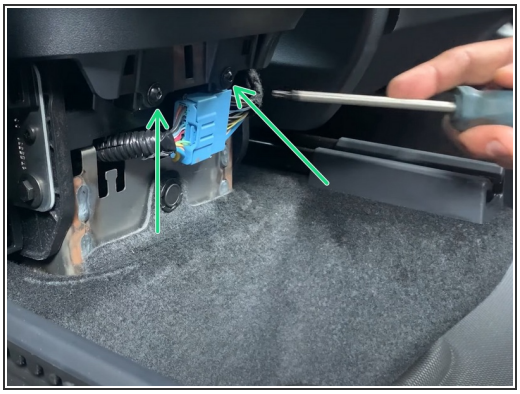
- **! IMPORTANT:** Ensure the GO device cable is not pinched.
- Refasten the two T20 TORX screws.
- Reinstall the center panel by lining up the clips and firmly pressing them into place.

© 2024 - Uncontrolled If Printed