ECON Spargo

Written By: Alkesh Dhak




© 2024 - Uncontrolled If Printed


— Requirements

A 1-meter DB9 M-F Null Modem cable is required.

This cable is not available from Geotab and must be supplied by the installer or reseller.

— Installation

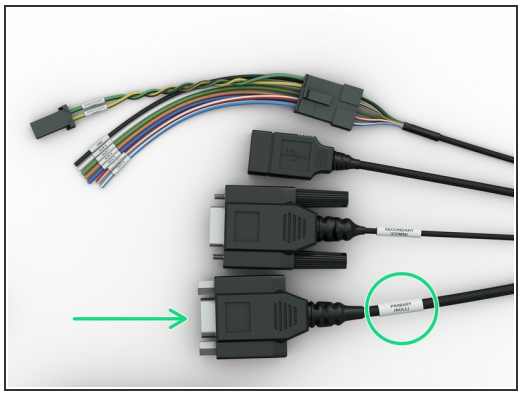

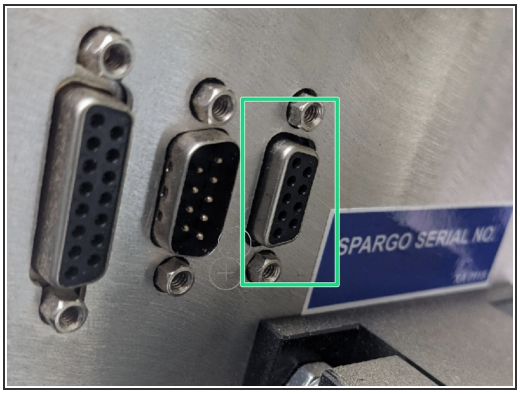



- The IOX-WRKS primary port connects to the female DB9 serial port on the back of the ECON Spargo using the DB9 M-F Null Modem cable.

Ensure the IOX-WRKS has the correct controller configuration loaded before proceeding to verification / simulation mode.

© 2024 - Uncontrolled If Printed

— Simulation Mode

ⓘ The ECON Spargo's port settings are factory set to stream data.

- Start the vehicle.
- Using the controls on the ECON Spargo, set the desired rates.
- Place the controller in operations mode.
- After the verification is complete, return the controller back to its original settings and shut off the vehicle.

© 2024 - Uncontrolled If Printed