HRN GS16K2

This guide will take you step by step through the installation of a Go device using the HRN GS16K2 - Universal Harness Kit.

Written By: Matthew Reilly



© 2026 - Uncontrolled If Printed

RECOMMENDED TOOLS & CONSUMABLES:

- 1/4" Metric Socket Set with Ratchet or Driver (1)
- Multi-Bit Screwdriver with Assorted Bits (1)
- Flush Cutter (1)
- Cable Ties (1)


HARDWARE & ACCESSORIES:

- HRN-GS16K2 Universal Harness Kit (1)


This document was generated on 2026-04-27 05:36:25 AM (MST).


© 2026 - Uncontrolled If Printed

— T-harness Installation

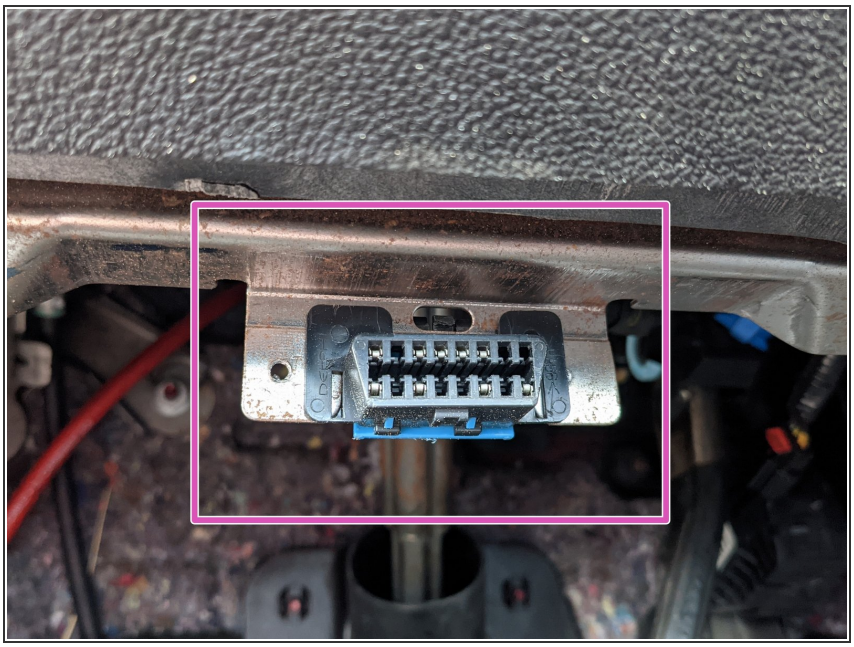

- Locate & remove the OEM OBDII connector from its OEM location
- Identify the adapter required for installation from the parts included in the kit.
  - *See here for general identification*

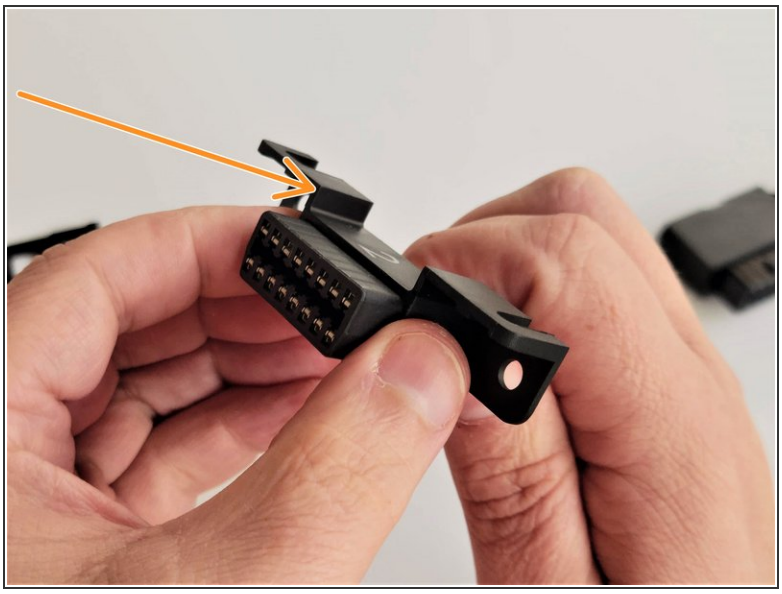


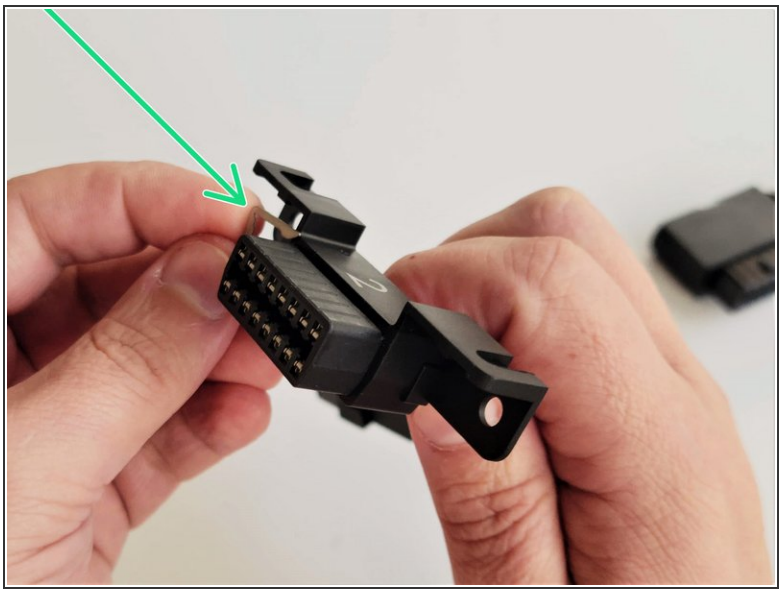


Video example for this step

- Install the adapter onto the connector housing
  - *In most cases the groove should be visible once the adapter is completely seated.*
- Slide the metal clips into the groove to retain the assembly
  - *If the groove is not visible the adapter is likely installed backwards.*


© 2026 - Uncontrolled If Printed

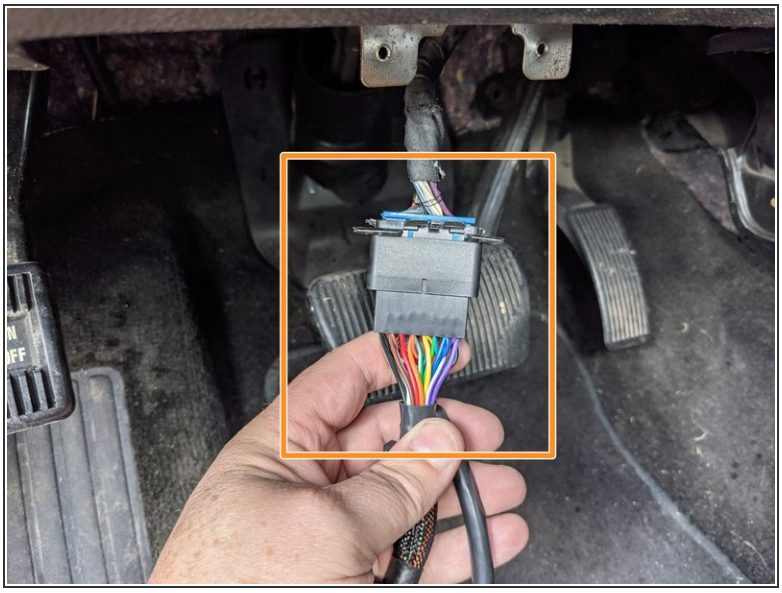

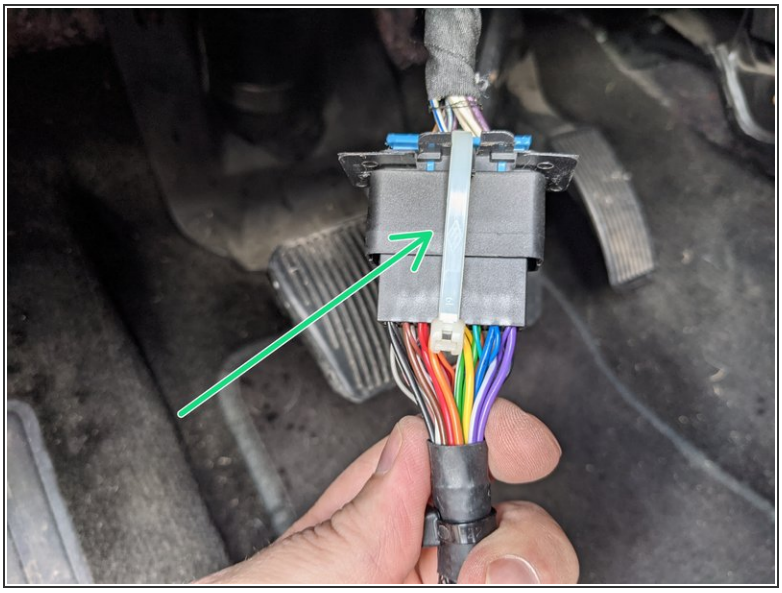

- Plug the female connector from the T-harness into the OEM OBDII connector
- Secure connection with a cable tie

⚠ ***Trim excess cable tie flush***

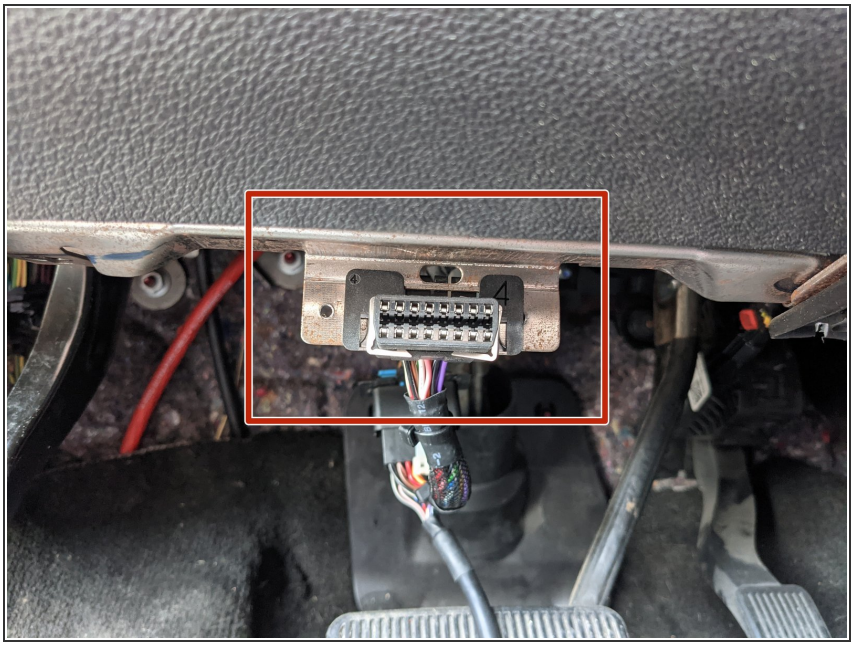

- Install the prepared T-harness connector from the first steps into the OEM location

⚠ ***Ensure cable does not interfere with any moving parts***

⚠ ***Secure harness as needed with cable ties***

© 2026 - Uncontrolled If Printed