

# GEOTAB®

## HRN-GS16K22: 2013 - Present DAF CF/LF

Vehicle-specific installation steps for DAF CF/LF (2013 - Present)

Written By: Greg Foley



## — DAF CF/LF vehicle-specific installation steps




- The vehicle's OBD-Port is located at the bottom of the dashboard in the passenger's footwell behind a plastic cover labelled "OBD"




- Unclip and remove the cover from the fuse-box




- Use a size T20 Torx-driver to remove the five screws, then unclip and remove the bottom panel of the dashboard

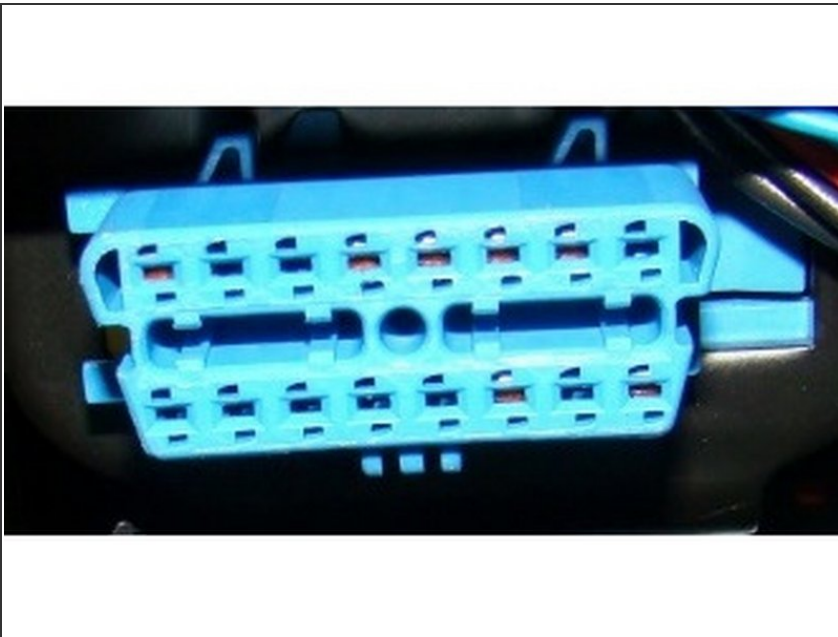


- Carefully unclip and remove the OBD-Port

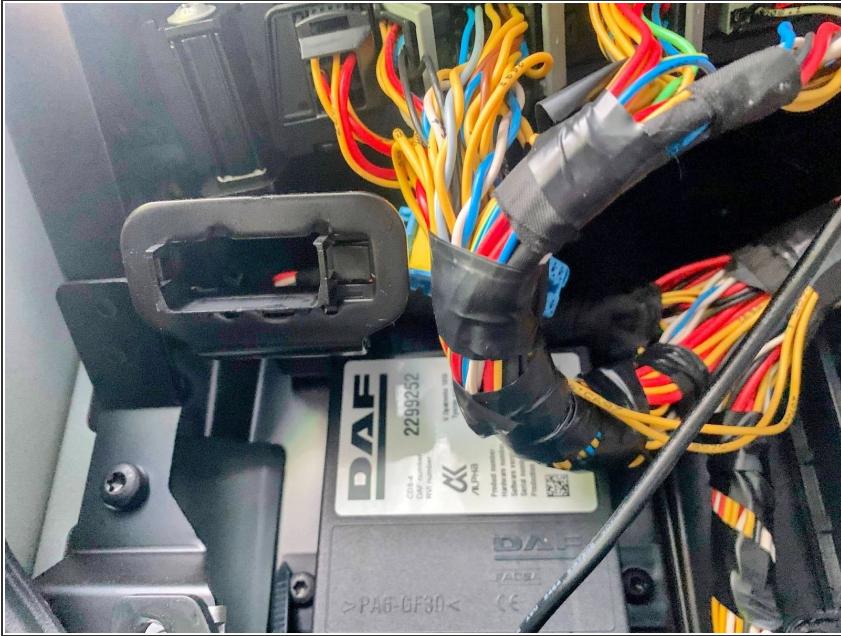


- Clip ADAPTOR 11 of the Geotab harness into the vehicle's mounting bracket

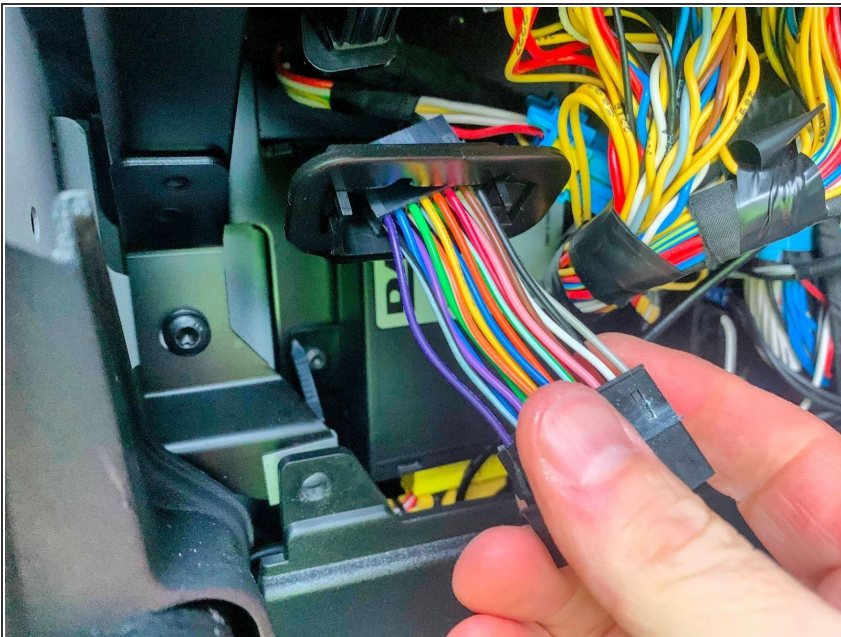

- Insert the core connector from the T-harness and clip it into place.
- Connect the small connector from the Core, into the mating part from the T-harness

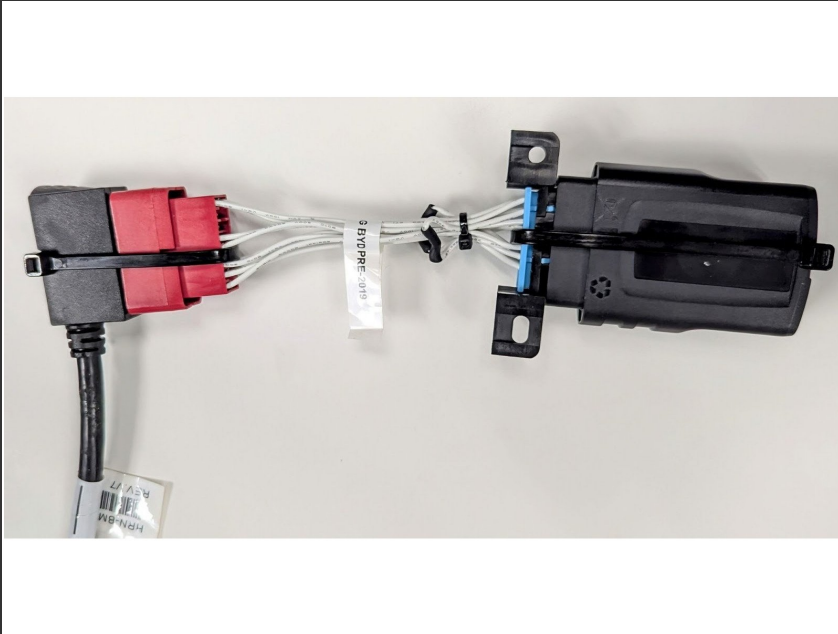


- Plug the GO device into the HRN-CG13S1, and then into the T-harness, securing both connections with cableties as shown

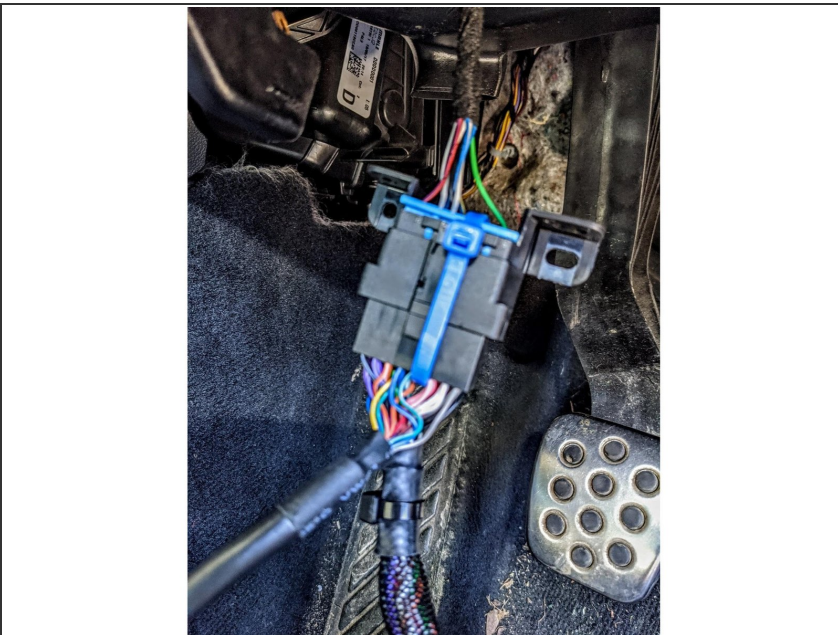

- Plug the vehicle's OBD-Port into the "long" connector of the Geotab harness and secure with a cabletie, as shown.



- Secure the Geotab unit to a suitable bracket inside the dashboard, using at least 2 cable-ties.
- ⚠ Ensure that the harness does not obstruct any moving parts or equipment
- ☑ Finally, replace all panels, screws and clips in the reverse order they were removed

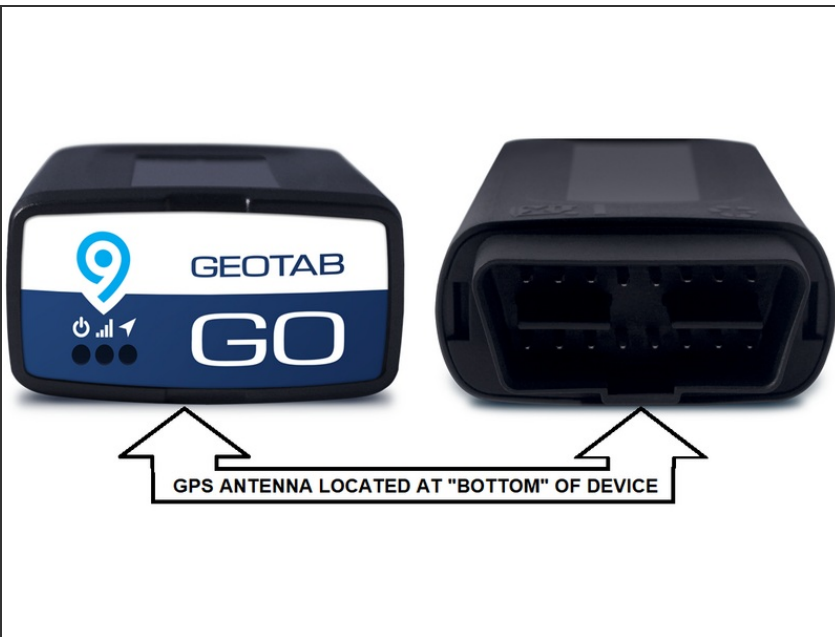

- ⓘ The GPS-antenna is located at the “underside” of the Geotab device. Take care when securing the device into the vehicle, that this side is facing away from any metal surface
- ☑ Finally, replace all panels, screws and clips in the reverse order they were removed