



HRN-CW03K3: 2021 – Present Renault Trucks D-series

Installation steps for 2021 – Present Renault Trucks D-series

Written By: Jason Fox



**RECOMMENDED TOOLS & CONSUMABLES:**

- [Multi-Bit Screwdriver with Assorted Bits](#) (1)
- [Panel Removal Tool](#) (1)
- [Tongue and Groove Pliers](#) (1)
- [Flush Cutter](#) (1)
- [Professional grade wire crimpers & cutters](#) (1)
- [Heat Gun](#) (1)



HARDWARE & ACCESSORIES:

- [GO9](#) (1)
- [IOX-CLAMP](#) (1)
- [HRN-CW03K3 3 Wire Harness w/ Fuse Kit](#) (1)
- [SPR-INSTALLBAG Mounting Bracket](#) (1)
- [Micro2 Fuse Taps - Add-A-Circuit](#) (1)


— 2021 – Present Renault Trucks D-series installation steps



- The fuse box is located on the passenger side.
- Unlock the cover with a flat screwdriver and set the cover aside.
- Remove the screws from the middle interior panel as shown.



- Use a panel removal tool to detach the middle interior panel.
- Remove all screws from the top panel.
- Remove the top panel and set it aside to access the CAN wires.

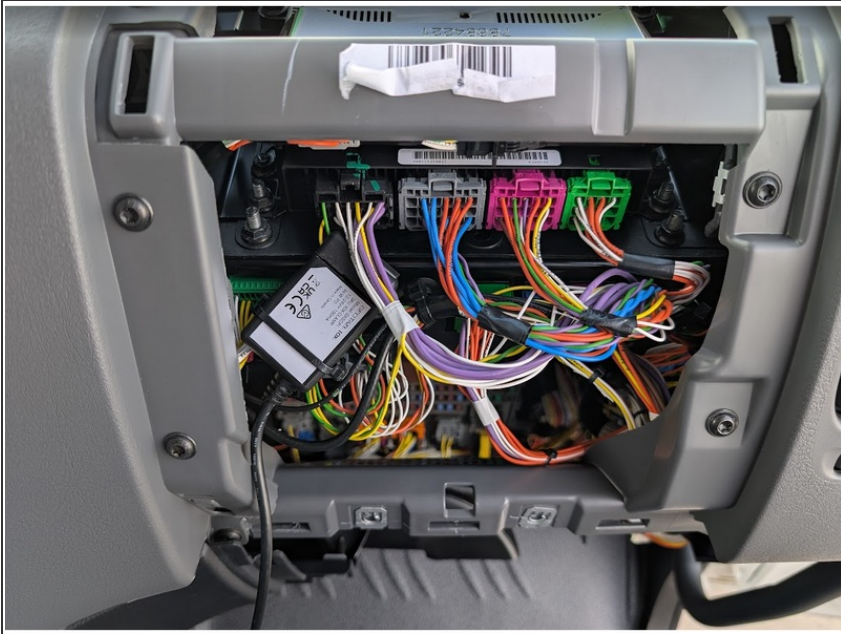


- Connect the IOX-Clamp to the Yellow (Pin 3) and Green (Pin 1) wires of the EBS ECU black connector (labeled A21.X1).



- Connect the IOX-Clamp to the GO device and secure with cable ties.

⚠ **IMPORTANT:** Do not over-tighten cable ties to avoid damaging the IOX connector.

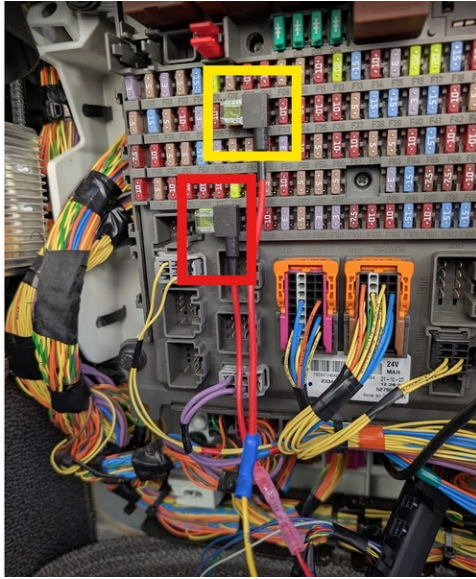

- Connect the HRN-CW03K3 to the fuse taps as follows:
 - Ignition Power: Fuse F32 (Yellow Square).
 - Continuous Power: Fuse F95 (Red Square).
- Ground: Use the nut shown in the photo.

⚠ **IMPORTANT:** Place the original fuse on the hot side of the fuse tap. Insert a 5A fuse in the second slot.



- Clean the EBS ECU surface with an alcohol-based cleaning solution.
 - Apply the double-sided tape from the SPR-INSTALLBAG onto the mounting bracket and GO device.
 - Mount the SPR-INSTALLBAG firmly on the EBS ECU. Secure the GO device and HRN-CW03K3 harness connection with cable ties.
- ⚠ **IMPORTANT:** The GPS antenna is on the underside of the Geotab device. Ensure this side faces away from any metal surfaces when mounting.



- Connect the white connectors of the HRN-CW03K3 to each other.