



HRN-GS16K2-LD: 2025 – Present Kia EV4

Installation steps for 2025 – Present Kia EV4

Written By: Jason Fox



**RECOMMENDED TOOLS & CONSUMABLES:**

- [Multi-Bit Screwdriver with Assorted Bits](#) (1)
- [Flush Cutter](#) (1)
- [Panel Removal Tool](#) (1)
- [Cable Ties](#) (1)



HARDWARE & ACCESSORIES:

- [GO9](#) (1)
- [HRN-GS16K2-HD 16-Pin Universal Heavy Duty OBD-II T-Harness kit](#) (1)
- [HRN-BS16S5](#) (1)

— 2025 – Present Kia EV4 installation steps



- Locate the OBD-Port below the steering wheel in the driver's footwell.
- Unclip and remove the panel from the side of the dashboard.




- Remove the Phillips screw under the steering wheel as shown.
- Carefully unclip the interior panel.
 - ☒ Take care: the hood-latch release on the panel may detach.



- Use panel removal tool to remove the center console cover from both driver and passenger sides.
- Unscrew the center console on both sides.
- Slide the front seats as far forward as possible and adjust them to their highest position. This will assist with console removal in a later step.




- Remove the rear console cover.
- Disconnect the extension connector.

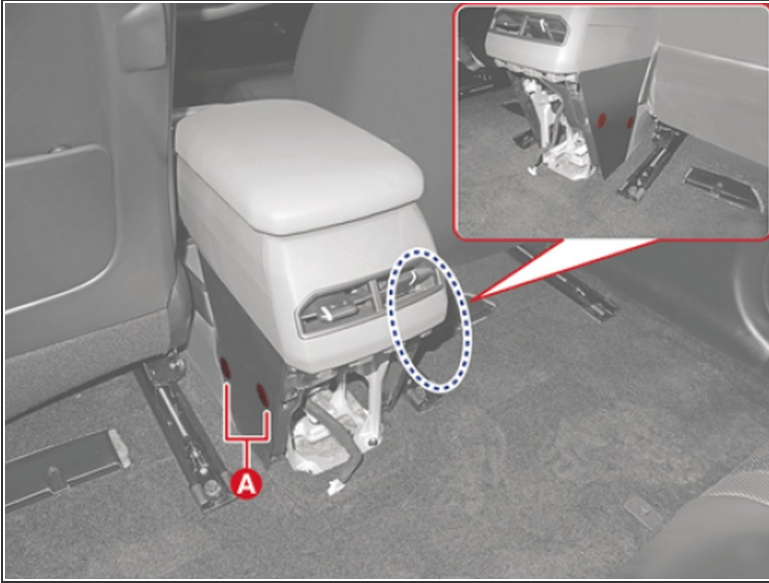



- Open the console caps and remove the four bolts.




- Unscrew the two screws with a Phillips screwdriver.
- Detach the armrest from its original position.
- Remove the two additional screws as shown.

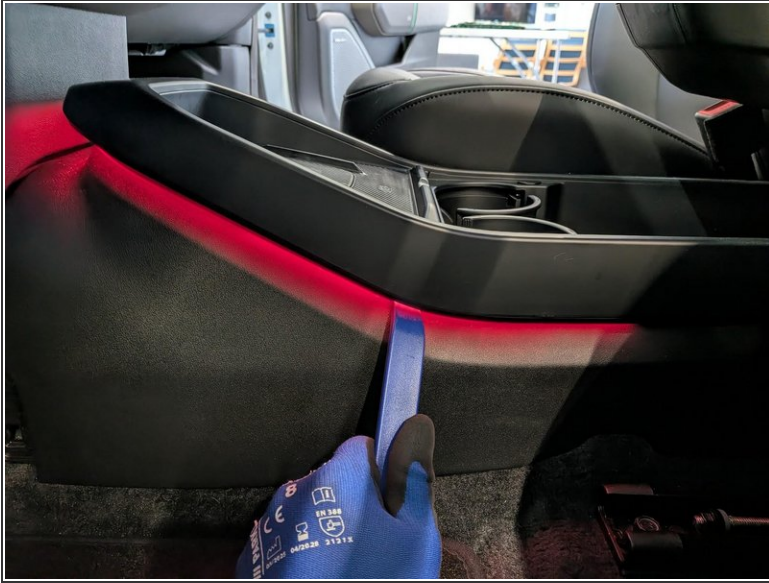


- Use a trim-panel removal tool to detach the upper center-console cover.
- Disconnect the upper center-console cover assembly connector.

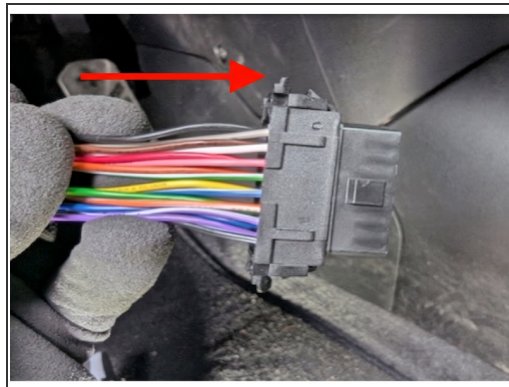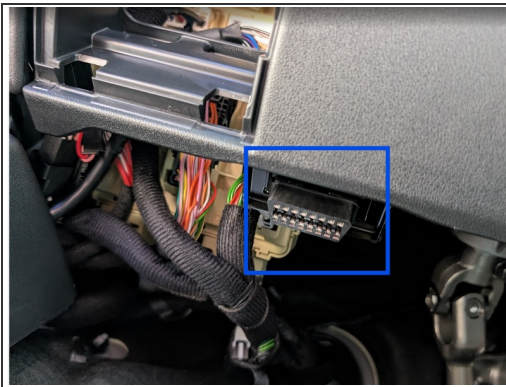


- Detach the OBD II port from its original mounting position.
- Select adaptor 3 from the harness kit and clip it into place as shown.
- Clip the short section into place on the main harness, and secure with cable tie.

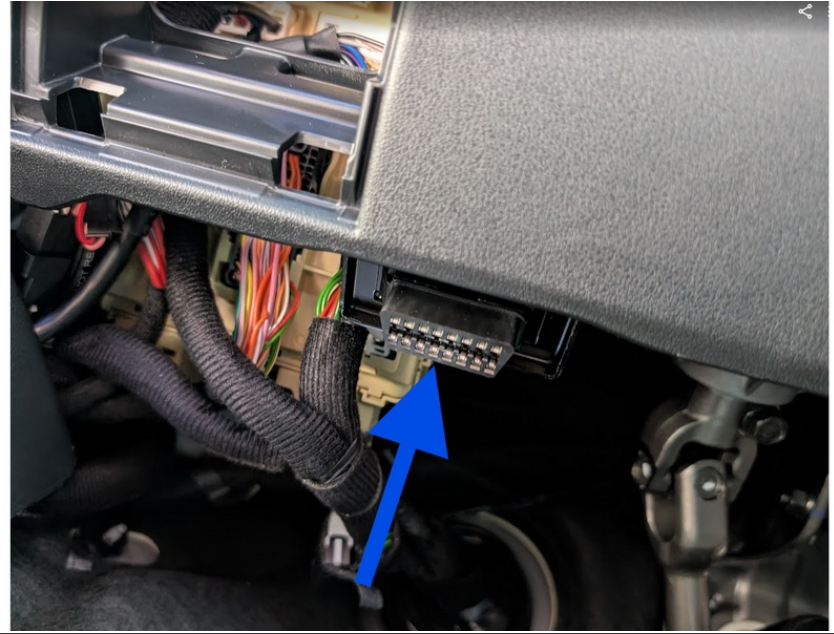


- Clip the short section of the harness into place in the vehicle.

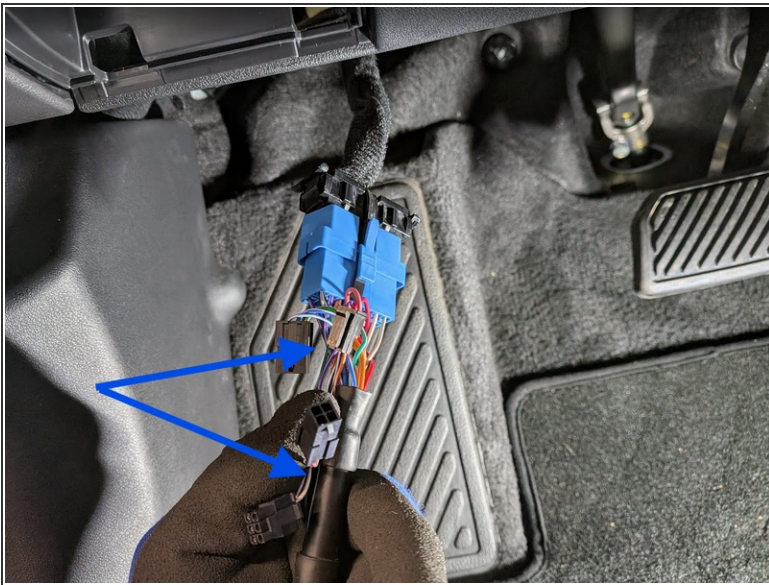


- ❗ Disconnect all Molex connectors on the Geotab heavy-duty harness as shown.
- Plug the vehicle OBD port into the harness and secure the connection with a cable tie.
- Connect the HRN-GS16K2-HD harness to the HRN-BS16S5 extension harness and secure the connection with cable ties.

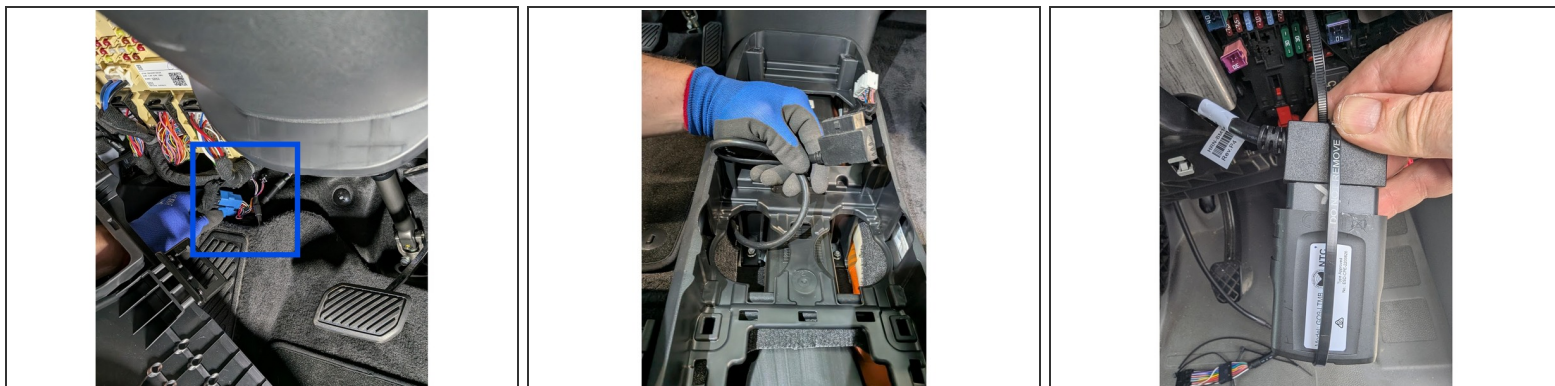

- Carefully route the harnesses below the carpet to the cupholder area in the center console.
- Plug the Geotab device into the harness and secure it with a cable tie as shown.

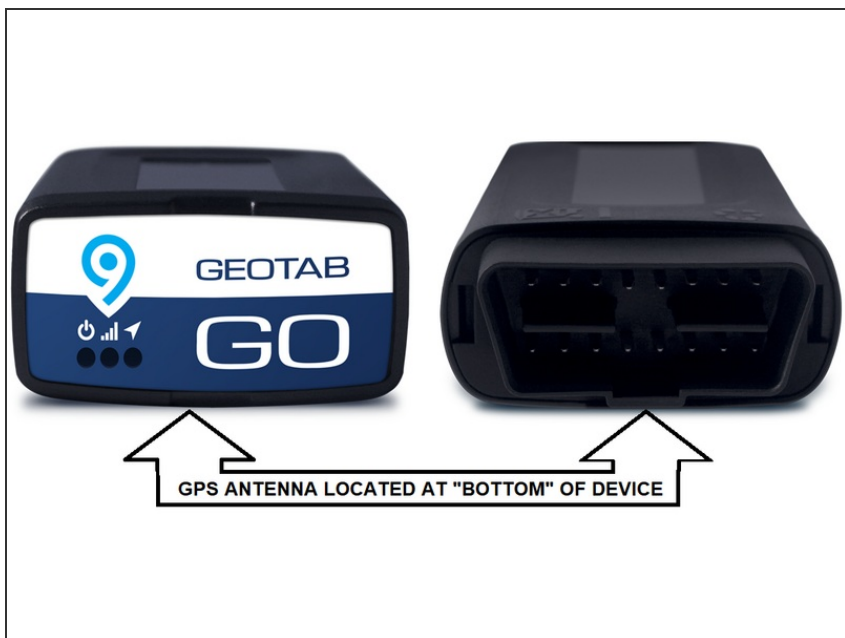

- ❗ The GPS-antenna is located at the underside of the Geotab device.
- ! IMPORTANT: Ensure when securing the device into the vehicle, that this side is facing away from any metal surfaces.

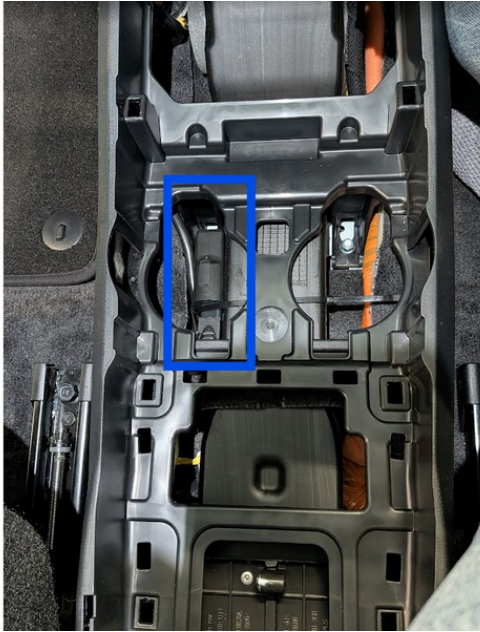

- Mount the GO device to a suitable bracket and secure it with cable ties. Leave enough clearance for the cupholders to return to their original position.

- Once all three LEDs turn solid and you hear 10 quick beeps, secure the device using the provided cable tie. Ensure there is always a 20cm separation between the driver and the device. This applies to all users of the vehicle.
- The device is considered installed when the Green and Blue LEDs turn solid.