



HRN-GS16K2-LD: VW eTransporter (RHD) 2025 - Present

Installation steps for VW eTransporter (RHD) 2017 - Present

Written By: Dozuki System




— VW eTransporter (RHD) 2025 - Present installation steps



- Locate the OBD-Port below the steering wheel in the driver's footwell.




- Unclip and remove the panel from the side of the dashboard.

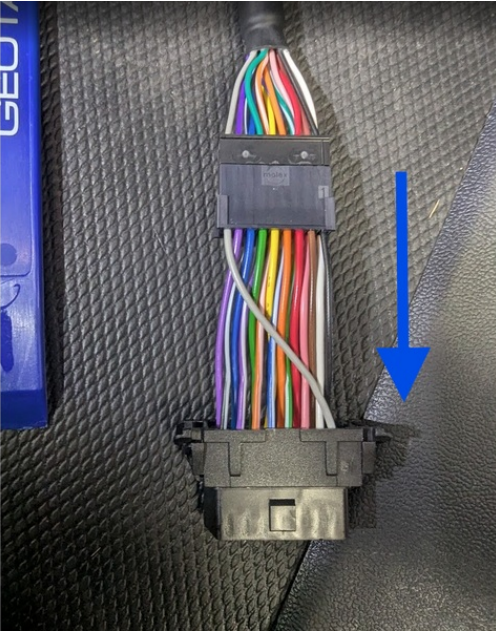


- Select adaptor 8 from the harness kit and clip it into place as shown



- Clip the short section of the harness into place in the vehicle

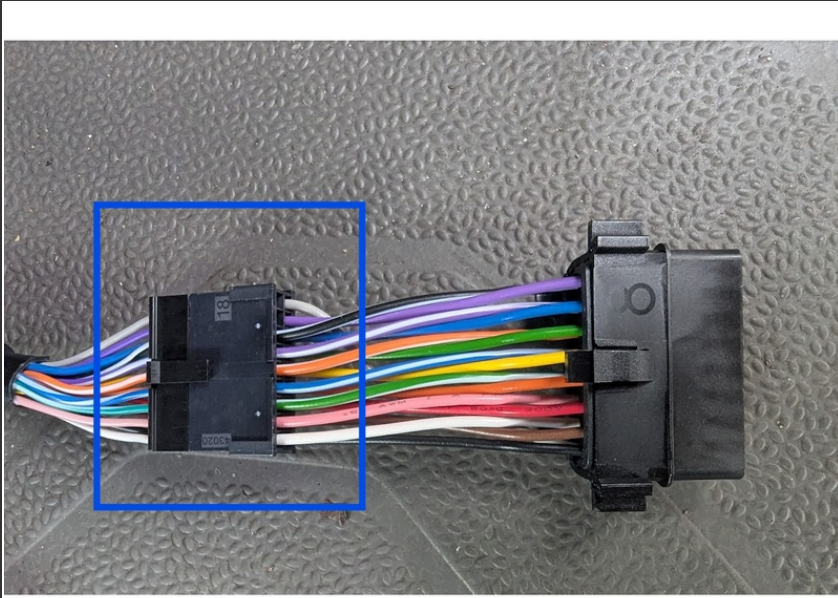


- Clip the short section into place on the main harness

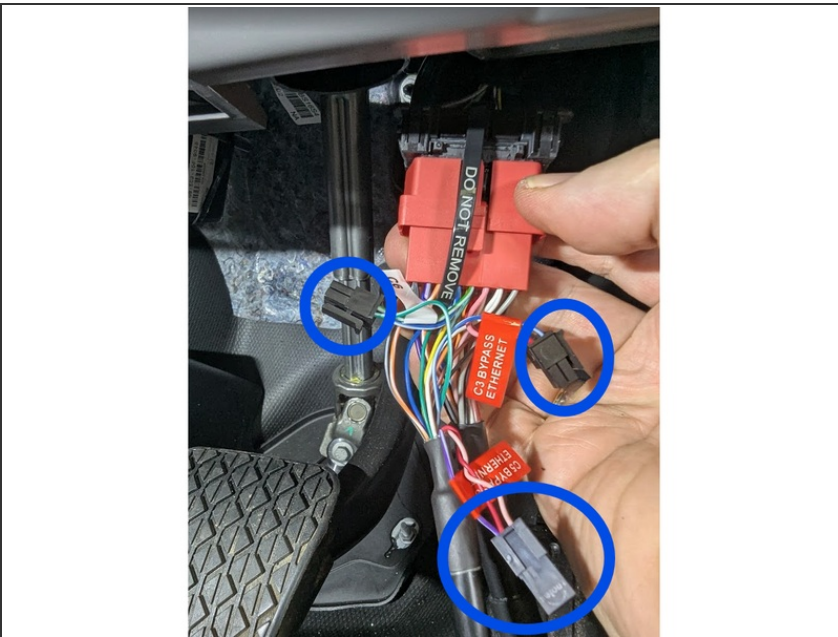

- Plug the vehicle OBD-port into the harness and secure with a cable tie.
- ⚠ **Warning:** Separate the Ethernet Bypass Molex connectors from one another.



- Plug the Geotab device into the harness, and secure with a cable tie as shown

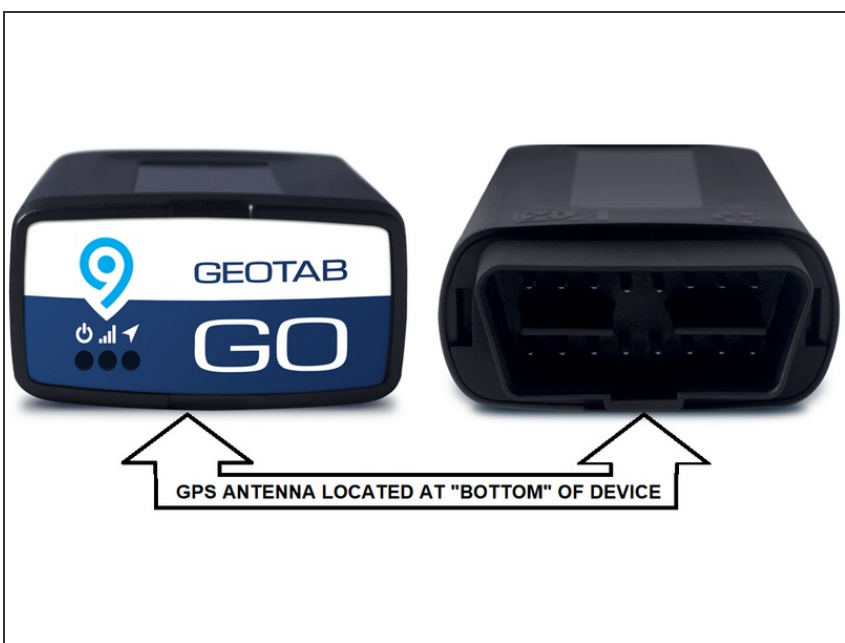

- ① The GPS-antenna is located at the underside of the Geotab device.
- ! IMPORTANT: Ensure when securing the device into the vehicle, that this side is facing away from any metal surfaces.
- ☑ Replace all panels, screws, and clips in the reverse order they were removed.



- Secure the Geotab device to the bracket, using at least two cable ties.
- ⚠ Ensure that the harness does not obstruct any moving parts or equipment.

- Once all three LEDs turn solid and you hear 10 quick beeps, secure the device using the provided cable tie. Ensure there is always a 20cm separation between the driver and the device. This applies to all users of the vehicle.
- * NOTE : The device is considered installed when the Green and Blue LEDs turn solid.