



2025 - Present Skoda vehicles

Installation guide: 2025 – Present Skoda Vehicles.

Written By: Sebastian Arbelaez





RECOMMENDED TOOLS & CONSUMABLES:

- Flush Cutter (1)
- Cable Ties (1)
- Panel Removal Tool (1)




HARDWARE & ACCESSORIES:

- GO9 (1)
- HRN-GS16K2-LD Universal LD Harness Kit GO9 (1)

— Installation steps




- Locate the OBD-Port below the steering wheel in the driver's footwell.

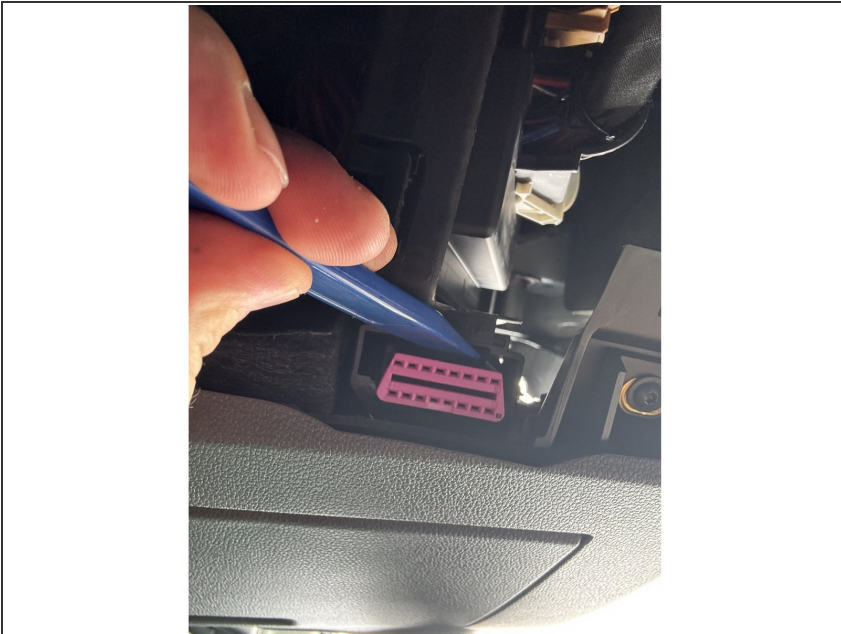

- Use a suitable tool to unclip the OBD-Port from its mounting bracket



- Pull the middle panel on the A-pillar using a panel removal tool.

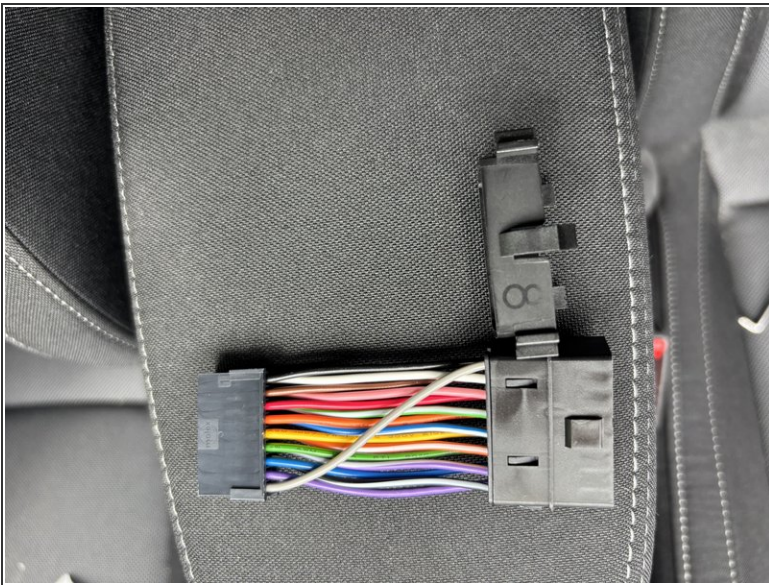

- Use the adaptors **8** to mount our T harness appropriately at the origin of the OBD port.
- Insert the adapter number **8** into the OBD bracket. Push the harness with the molex connector end through the front of the Adapter, until it locks and secure the molex using a cable tie.



- Route the harness up to the A-pillar middle panel side.
 - Secure the device to the harness with included cable tie.
- ⚠ ***Trim excess cable tie flush.***
- ⓘ Every device has a black serialized cable tie included & should be used in this step.