



Atego Gen 2

Written By: Jason Fox



— Atego Gen 2



- You will need to source pins to complete this installation. Several sourcing options below.
- Mercedes Part number: [A9909820826](#)
- [Junior Power Timer 964286-2](#)
- [Digikey](#)
- [Farnell.com](#)
- [RS-Online](#)
- [Mouser](#)




- Access the fuse-panel located on the passenger side.
- Unlock the quick-release fasteners on the plastic trim panels



- Use a Torx driver to remove the two screws, then unclip and remove the upper dashboard panel.

— Prepare HRN-CW03K3

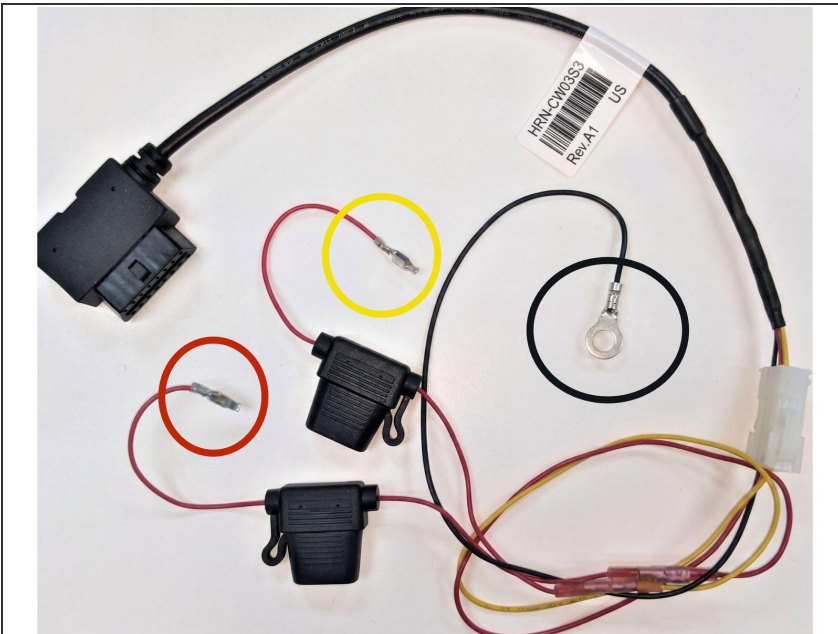


- Prepare the HRN-CW03K3-A harness:
- Install a 5 amp fuse and pin/terminal on the RED (live) wire.
- Install a 5 amp fuse and pin/terminal on the YELLOW (ignition) wire.
- Install a ring terminal on the BLACK (ground) wire.




- Using a digital multimeter, locate the following sources:
- 12V / 24V constant power: a true battery source that is live at all times.
- 12V / 24V switched ignition: +12/24V with the key in ON and Run positions, and 0V in Off.




- Unclip and remove the white connector (A8X6). Connect the RED (live) and YELLOW (ignition) wires to their respective sources.

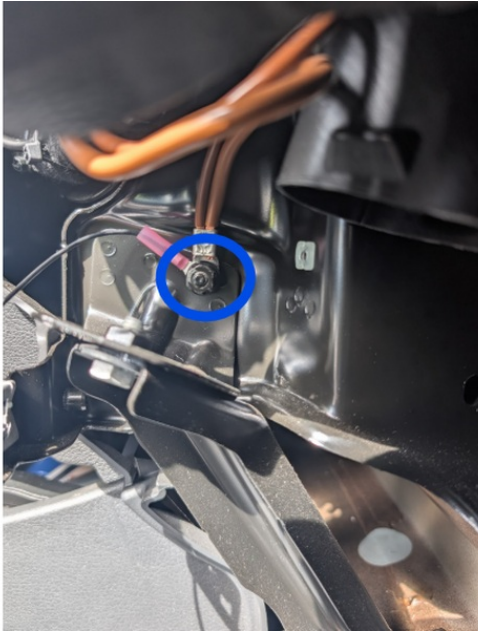


- Attach the HRN-CW03K3-A BLACK (ground) wire to the screw shown, using the ring terminal.

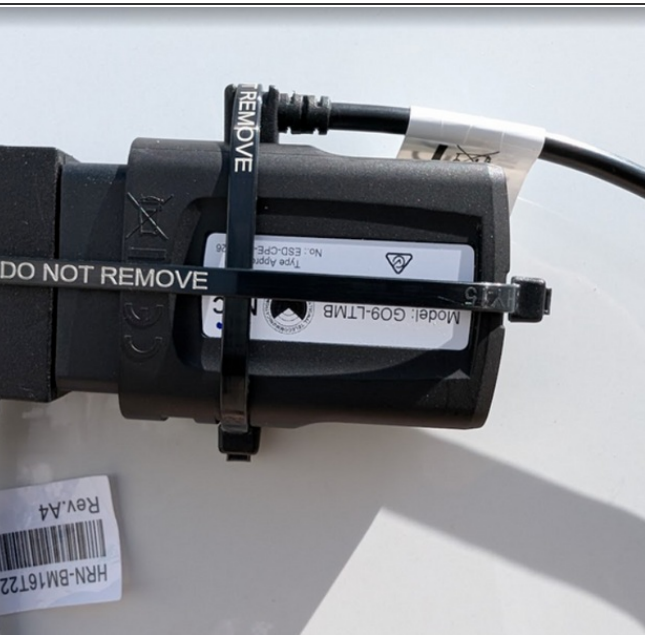

- Connect the GO device to the HRN-CW03K3-A harness and IOX-Clamp. Secure both connections with cable ties.
- Do not over-tighten cable ties.

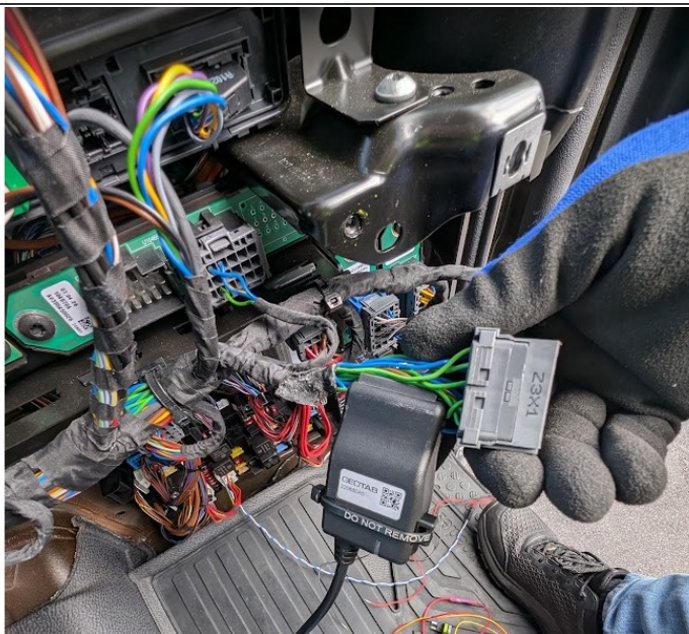


- Locate the gray connector labeled Z3X1 at the top center of the fuse panel. It contains multiple twisted pairs of blue and green wires. Attach the IOX-Clamp to any of these blue-and-green wire pairs.

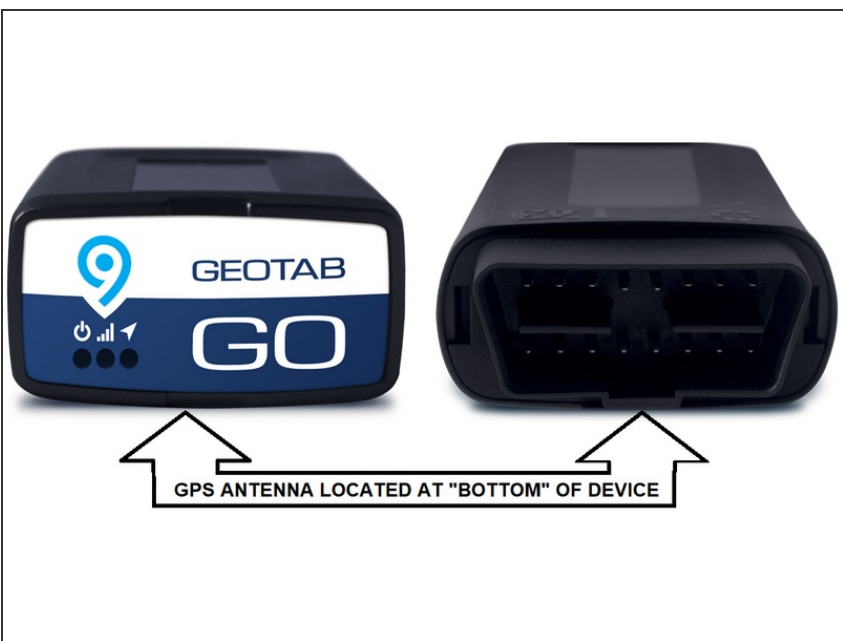

- The GPS antenna is on the underside of the Geotab device.
- Important: When securing the device in the vehicle, ensure this side faces away from metal surfaces.



- Firmly mount the GO device to a suitable bracket.
- Ensure there is always a 20cm separation between the driver and the device. This applies to all users of the vehicle.

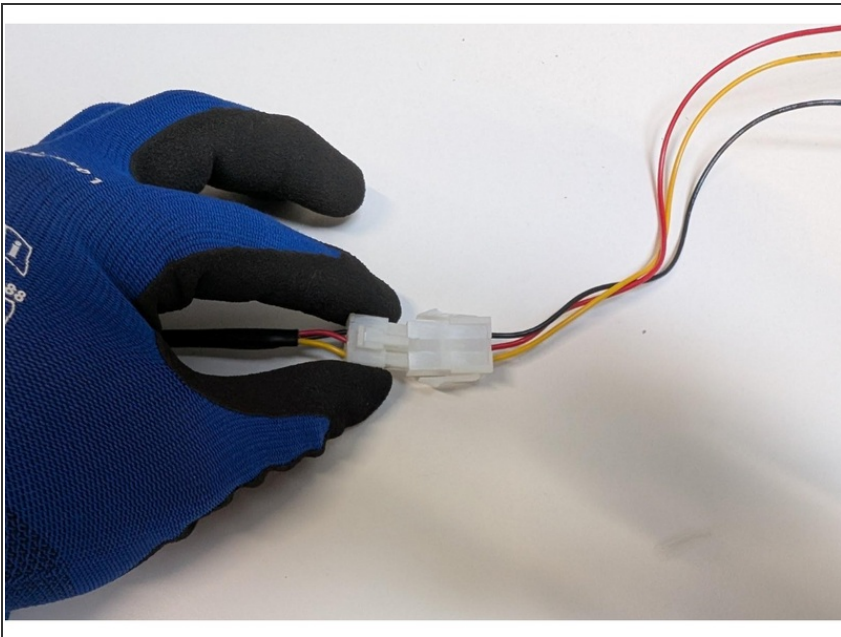

- Connect the white connectors of the HRN-CW03K3-A harness to each other.



- Use cable ties to secure loose parts and wires, leave the space clean, and close everything up.