Connect IOX to GO Device and Verify LED

Written By: Alkesh Dhak




© 2025 - Uncontrolled If Printed

— Connect IOX to GO Device



- Remove the rubber cover on the GO device to expose the IOX port.
- Plug the IOX cable into the GO device.

⚠ **Important: you must plug IOX devices into the GO device BEFORE powering up the GO device.**

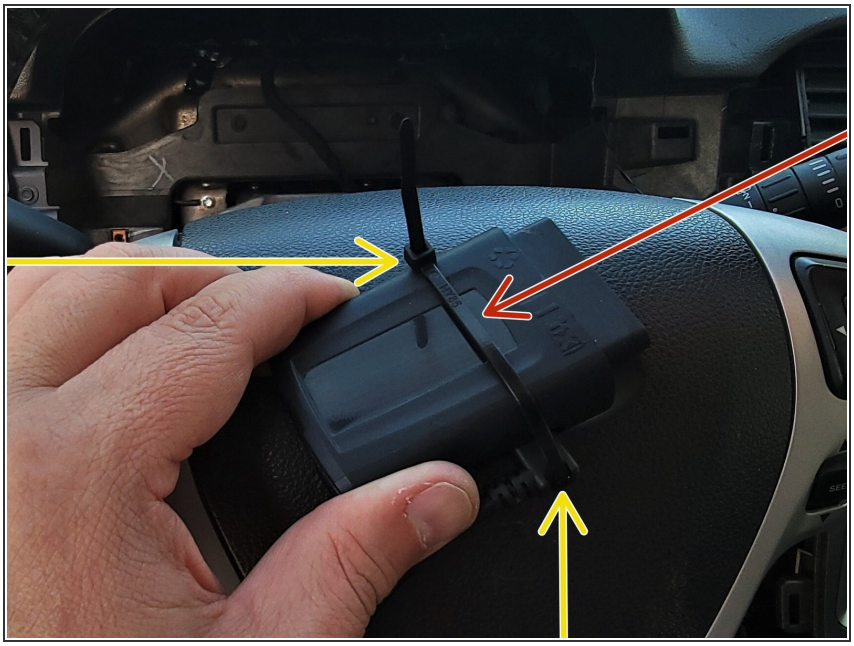

- Secure the connection using a cable tie.
- Ensure the cable tie is firmly situated in the grooves, both on the plug and the GO device, to prevent tampering.

⚠ **DO NOT OVER-TIGHTEN! The connector on the device can be damaged if over-tightened.**

- Trim any excess cable tie.

© 2025 - Uncontrolled If Printed



- Plug the GO device into the T-Harness.

— Verify LED and Secure Device



- Turn on the vehicle ignition.
- Verify the LED pattern.


ⓘ The device emits ***2 quick beeps*** every 60 seconds during setup. When setup is complete, all three LEDs turn solid and the device emits ***10 quick beeps.***

© 2025 - Uncontrolled If Printed



- Secure the device to the harness using the included cable tie.
- Leaving some slack, secure the IOX cable to the diagnostic harness using a cable tie.
- Trim any excess cable tie, both on the GO device & harness, and on the IOX & harness cables.

© 2025 - Uncontrolled If Printed

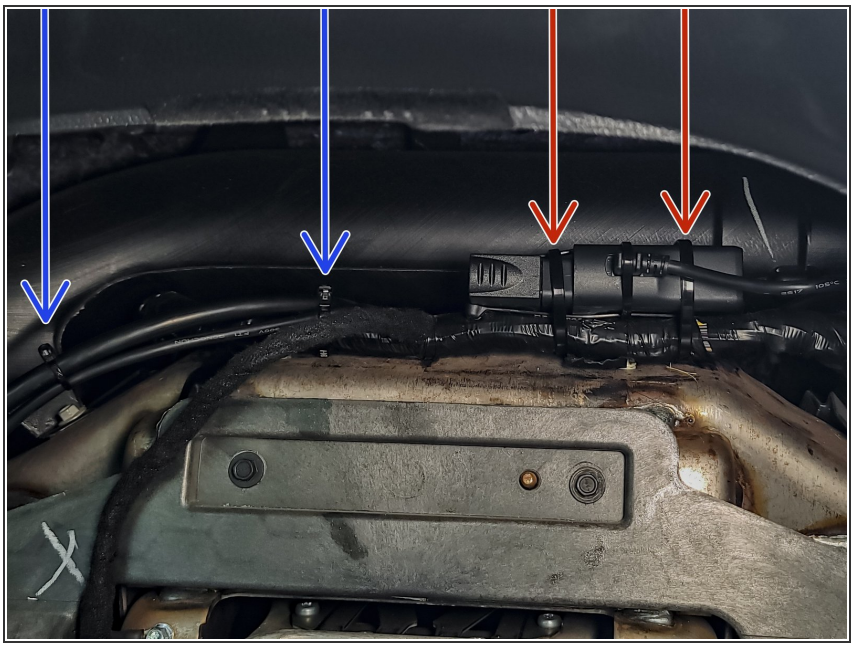

- Route the device and harness to the mounting location as needed. The mounting location should have as clear a line of sight to the sky as possible (for cellular/GPS connectivity). Lines of sight through plastics, glass, and composites are generally acceptable.

  ⚠ ***Ensure cable does not interfere with any moving parts.***

  ⚠ ***Secure harness as needed with cable ties.***

- Secure the device using 2 cable ties.

  ⚠ ***To ensure reporting quality, the device must be secured with no free movement!***

  ⚠ ***Device must NOT be secured such that the bottom side is in direct contact with metal!***

© 2025 - Uncontrolled If Printed