2014 - 2019 Ford Transit

Installation guide for 2014 - 2019 Ford Transits.

Written By: Alkesh Dhak



© 2024 - Uncontrolled If Printed

TOOLS:

- Panel Removal Tool (1)
- Flush cutter (1)
- Cable Ties (1)

PARTS:

- GO9 (1)
- HRN-GS16K2 Universal Harness Kit (1)

© 2024 - Uncontrolled If Printed

— Warnings and Considerations

⚠ **WARNING!** Only use Geotab telematics devices with Geotab-approved harnesses acquired from Geotab-authorized channels. Use of non-Geotab harnesses from unauthorized channels can cause serious safety risks, including fire, and can lead to serious personal injury and/or damage to the vehicle.

⚠ **IMPORTANT:** Always use a vehicle-specific harness when offered by Geotab or the vehicle manufacturer to avoid possible GO device damage. Some vehicles have multiple diagnostic connectors to choose from when installing a GO device.

ⓘ For more information on Geotab harnesses and adapters, see Harness Identification and Application & Harness Assessment Cheat Sheet GUIDE V2.0

If a longer length is required to facilitate installation, connect a straight harness to a T-harness. Ensure that the total harness length does not exceed 2 meters (or 6.5 feet). Any two harnesses that exceed 2 meters may compromise the integrity of the data and cause issues with the vehicle's Engine Control Unit (ECU).

ⓘ For more details on compliance information and applicable products, contact your Authorized Reseller.

© 2024 - Uncontrolled If Printed

— Preparing For Installation

⚠ Some installations are not straightforward and must be completed by an Authorized Installer to ensure a secure installation.

⚠ Ensure to use many cable ties to secure both the device and harness to the vehicle. An unsecure device installation can result in poor electric and/or data connections that can lead to short circuits and fires or cause malfunctions of vehicle controls that can result in serious personal injury or significant damage to your vehicle.

ⓘ Some examples requiring professional installation from an Authorized Installer are:

- The OBD port location is such that the device could protrude or interfere when entering or exiting the vehicle, or located where it can be inadvertently kicked or bumped during vehicle operation. The device isn't fully secured and so may be able to vibrate loose or get kicked or knocked. An electrical harness or additional wiring is required.
- Vehicle mounting modifications are required to secure the device i.e. removing of panels, or the OBD connector has been deformed/damaged or there is any physical damage visible to the electrical wiring.
- The device does not power on and beep six times when first installed.
- The installer questions their ability to complete a secure installation according to these instructions.

⚠ Do not attempt to install, reconfigure or remove any product from a vehicle while the vehicle is in motion or otherwise in operation. All installation, configuration or removal must be done only in stationary vehicles which are securely parked.


⚠ Attempting to service devices while the vehicle is in motion could result in malfunctions or accidents, leading to death or serious personal injury.

© 2024 - Uncontrolled If Printed




- Before installing, you should record the following:
  - GO device serial number
    - Found above barcode on device label
  - Odometer
  - Fleet Alias/Number/ID
  - VIN (vehicle identification number)

— 2014 - 2019 Ford Transit

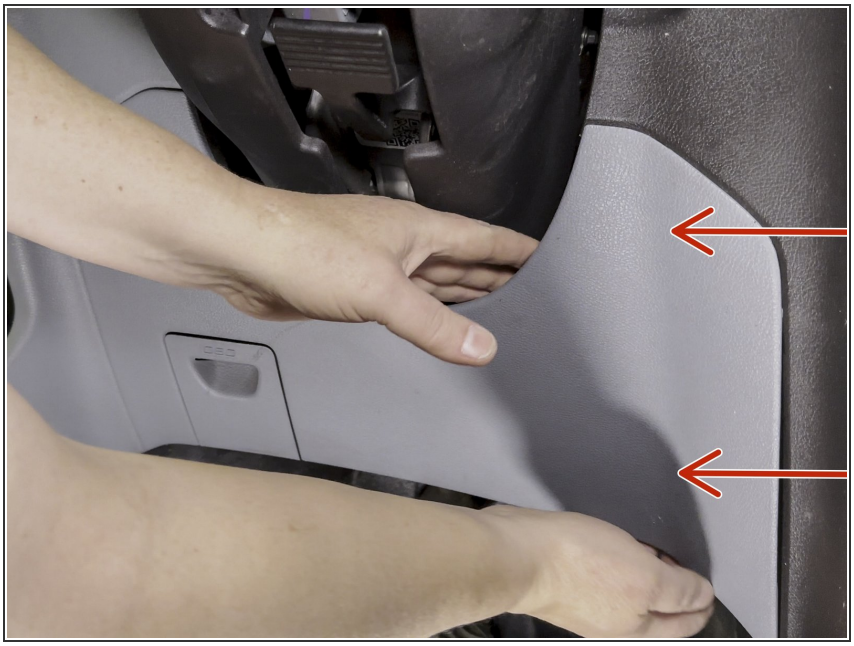

- Using a panel removal tool, remove the knee bolster.
  - Prying around the panel seam will release the retaining clips.


© 2024 - Uncontrolled If Printed

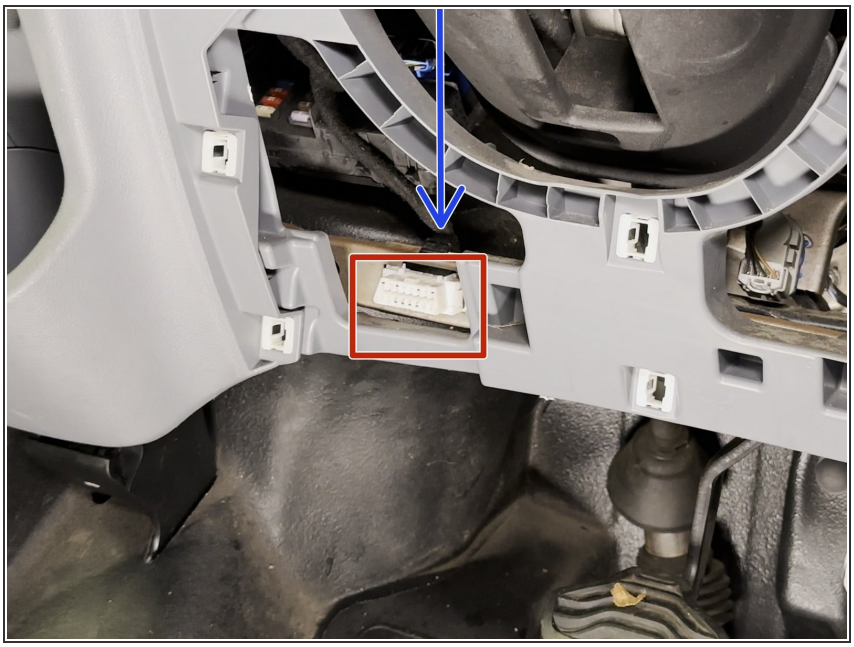


- Locate & remove the OEM OBDII connector from its OEM location.
- Release this clip that retains the OBDII harness.

© 2024 - Uncontrolled If Printed

— HRN-GS16K2 Assembly

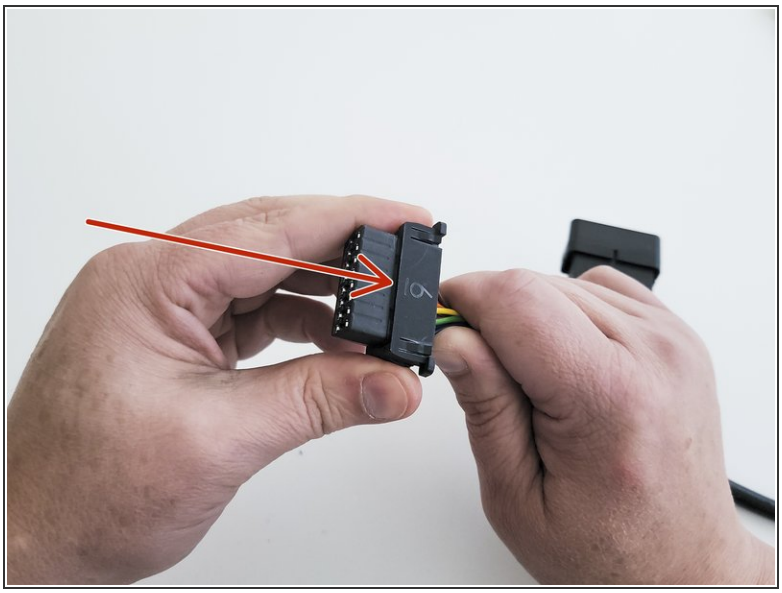

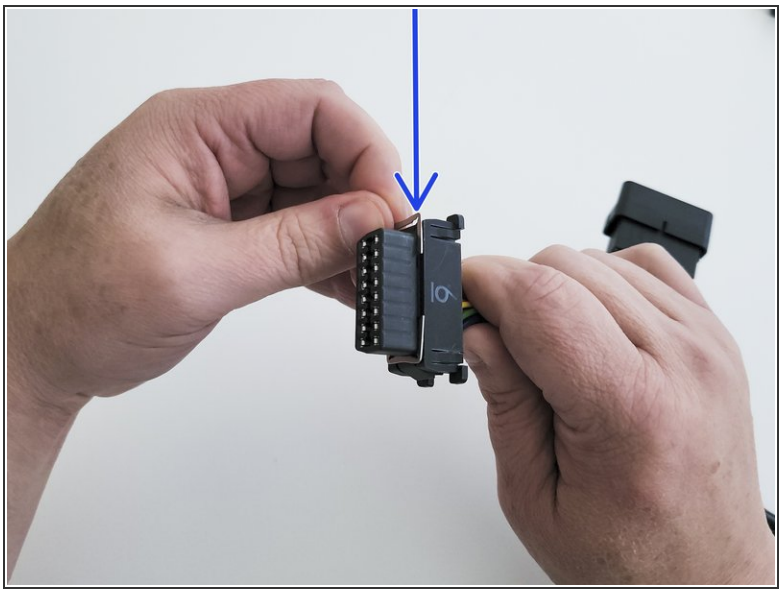


Video example for this step

- Install **adapter #6** onto the connector housing.
  - *In most cases the groove should be visible once the adapter is completely seated.*
- Slide the metal clips into the groove to retain the assembly
  - *If the groove is not visible the adapter is likely installed backwards.*


© 2024 - Uncontrolled If Printed

— HRN-GS16K2 Installation

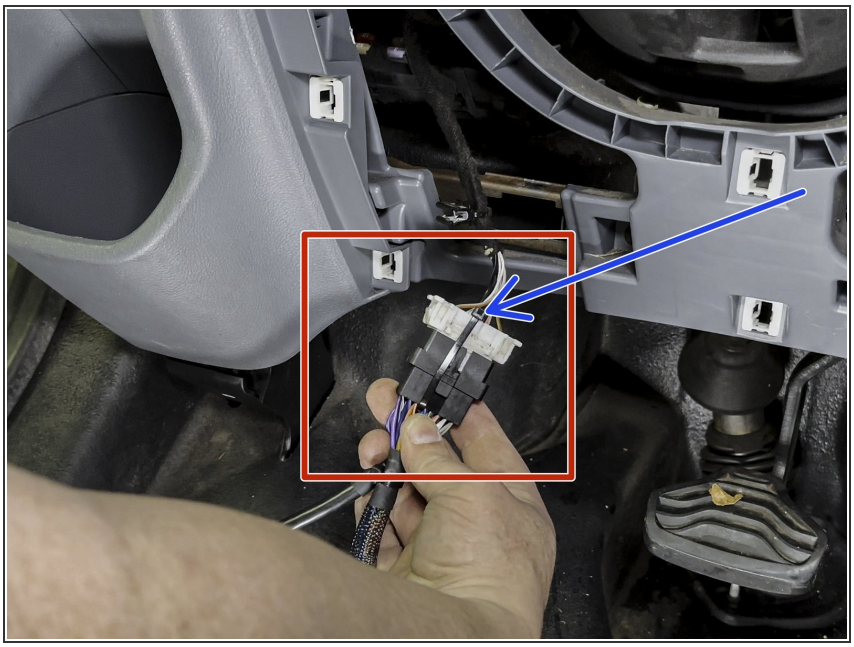

- Plug the female connector from the T-harness into the OEM OBDII connector.
- Secure connection with a cable tie.

⚠ ***Trim excess cable tie flush!***

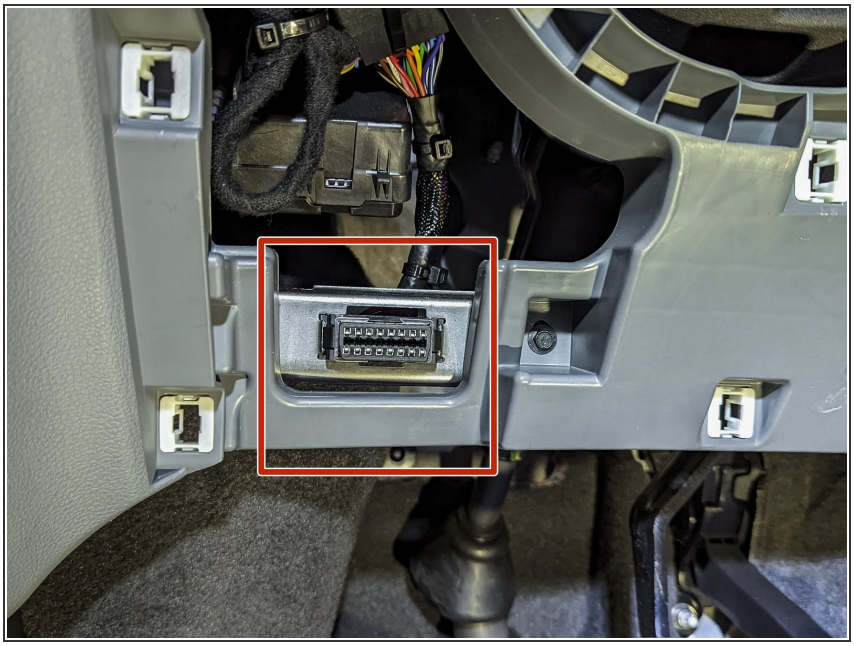

- Install the prepared T-harness connector from the first steps above, into the OEM location.

⚠ ***Ensure cable does not interfere with any moving parts!***

⚠ ***Secure harness as needed with cable ties!***

© 2024 - Uncontrolled If Printed

— GO Device Installation




- Plug the GO device into remaining end of the harness.
- Secure the device to the harness with included cable tie.

⚠ ***Trim excess cable tie flush!***

ⓘ Every device has a black serialized cable tie included & should be used in this step.

— Secure Device Example 1

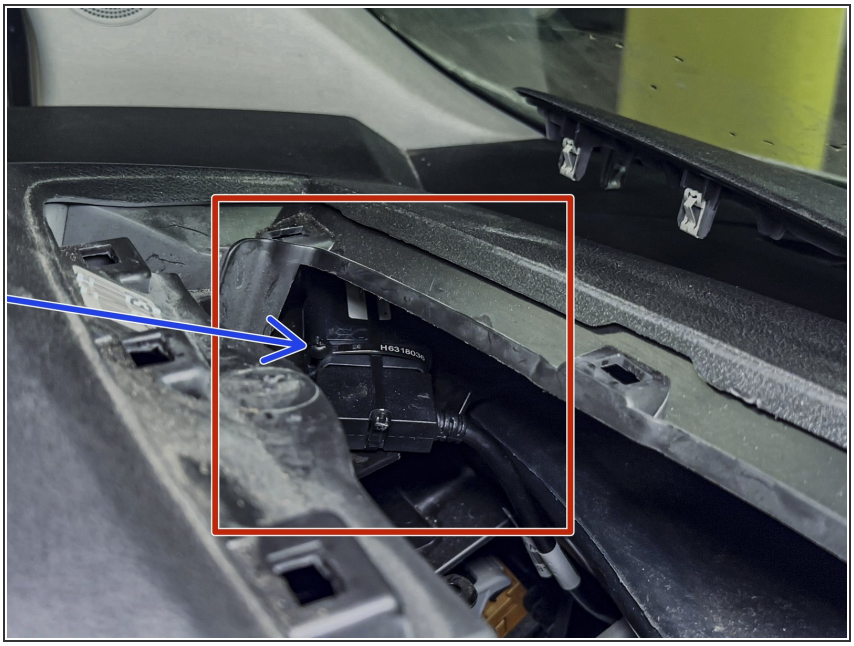

ⓘ Route device and harness to mounting location as needed.

⚠ ***Ensure cable does not interfere with any moving parts & secure harness as needed with cable ties.***

- Secure device using cable ties.
  - Point to secure device using cable tie.

⚠ ***To ensure reporting quality the device must be secured with no free movement!***

⚠ ***Device must not be secured with bottom side facing in direct contact of metal!***

© 2024 - Uncontrolled If Printed

— Secure Device Example 2



ⓘ Route device and harness to mounting location as needed.

⚠ ***Ensure cable does not interfere with any moving parts & secure harness as needed with cable ties.***

- Secure device using **2** cable ties.
  - ⓘ This dash support, located to the right of the steering column, is an acceptable location to secure the device.

⚠ ***To ensure reporting quality the device must be secured with no free movement!***

⚠ ***Device must not be secured with bottom side facing in direct contact of metal!***

— Attention

ⓘ If installing an **IOX** accessory please continue using the correct guide from here.

© 2024 - Uncontrolled If Printed



⚠ ***Start Vehicle.***

- Verify LED pattern.
- The device emits ***2 quick beeps*** every 60 seconds during set-up. Once all three LEDs turn solid you will hear ***10 quick beeps.***

— Verify Installation

⚠ All in-vehicle devices and related cabling must be securely fastened and kept clear of all vehicle controls, airbags, including gas, brake and clutch pedals.

⚠ This requires the use of a cable tie when securing the device or any extension harness to the OBD connector, securing both sides of the harness. If you do not use a cable tie, vibration in the vehicle can lead to a loose connection which could cause the vehicle's engine computer to fail, causing potential loss of vehicle control and serious injury.

⚠ Inspect devices and cabling regularly to ensure all devices and cabling continue to be securely attached.

⚠ If at any point after an in-vehicle device is installed a warning light illuminates on the vehicle dash or the vehicle stalls or has a marked drop in performance, shut off the engine, remove the device, and contact your reseller. Continuing to operate a vehicle with these symptoms can cause loss of vehicle control, and serious injury.


— MyInstall (Public)

Navigate to one of the following:


- *MyInstall (Public)*
- *MyInstall (Fed Gov)*

Note that the following steps are for the public version of MyInstall.

- *If you have an installer MyAdmin account, use this link.*
- *This link is also accessible via the MyInstall Public page.*

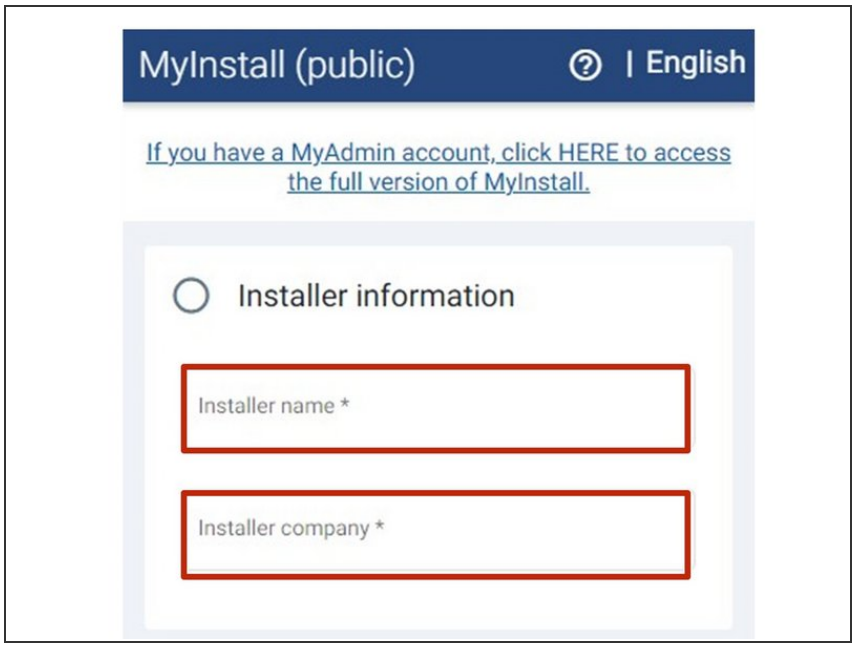


- Enter the installer information.

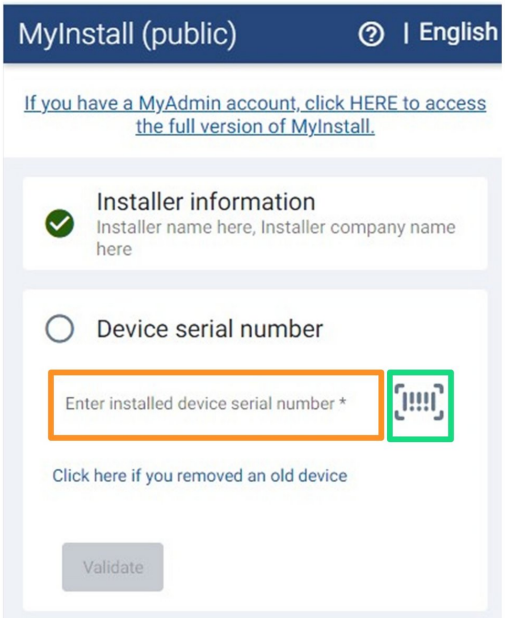


- Enter the device serial number.


ⓘ If possible, use the barcode scan feature.

© 2024 - Uncontrolled If Printed

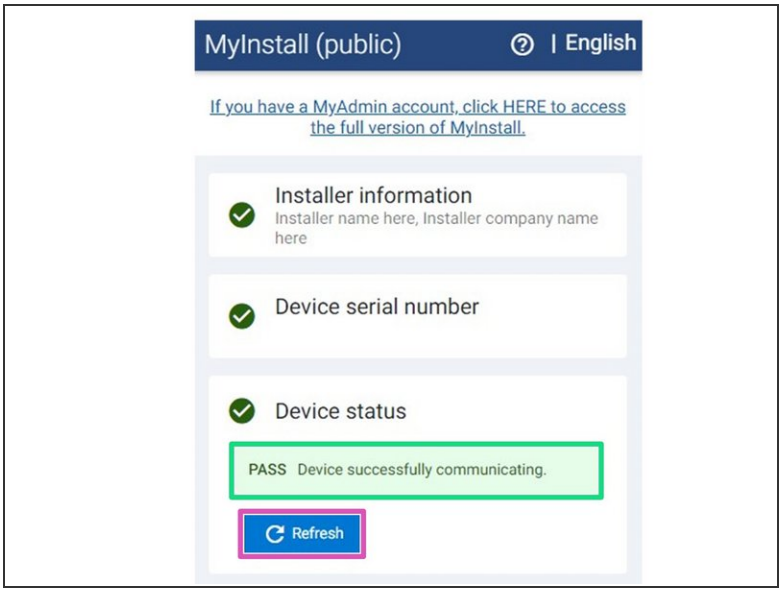


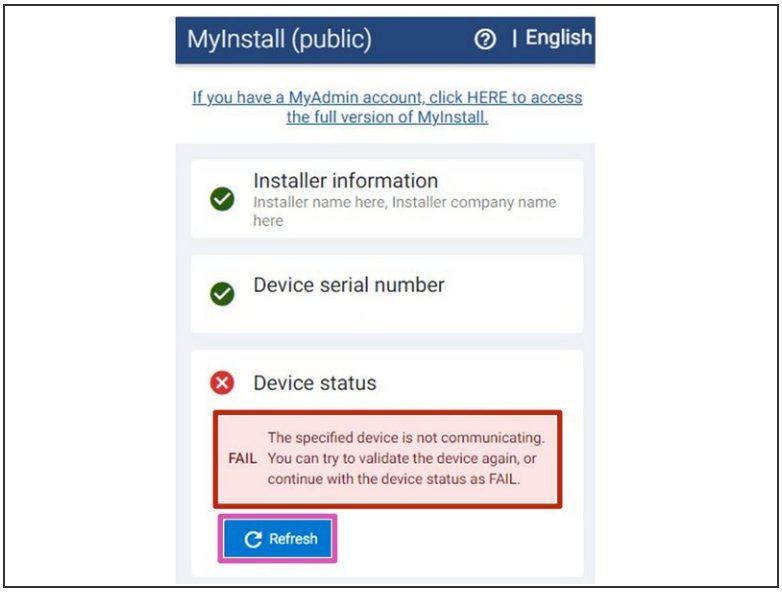


- Turn on the vehicle and wait for the device status to ***PASS***.
- ⓘ Some Hybrids and EV's may require a short drive
- If the device status shows as ***FAILED***, verify the LED status and turn the vehicle engine off and on again.
- Press ***Refresh*** to check the status again.
- ⓘ Refer to *this link* for detailed instructions.

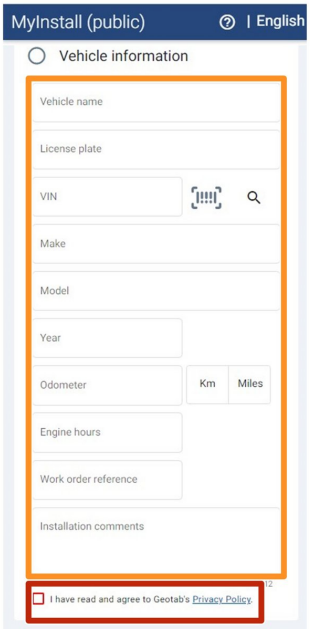

- Enter all applicable vehicle information.
- Read and acknowledge Geotab's Privacy policy.

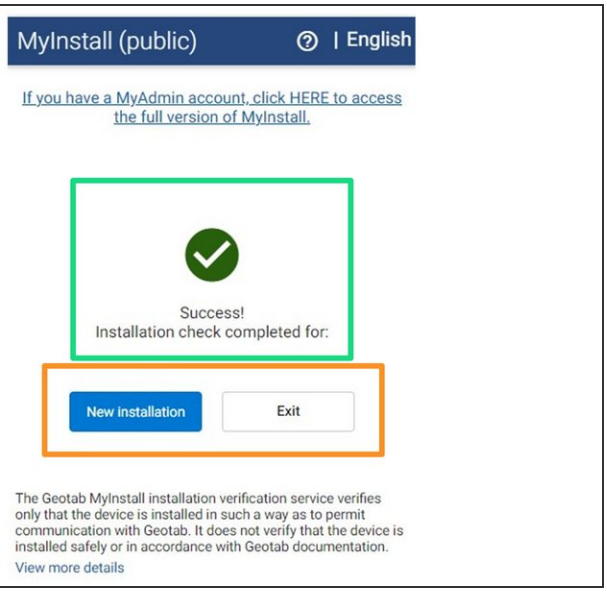

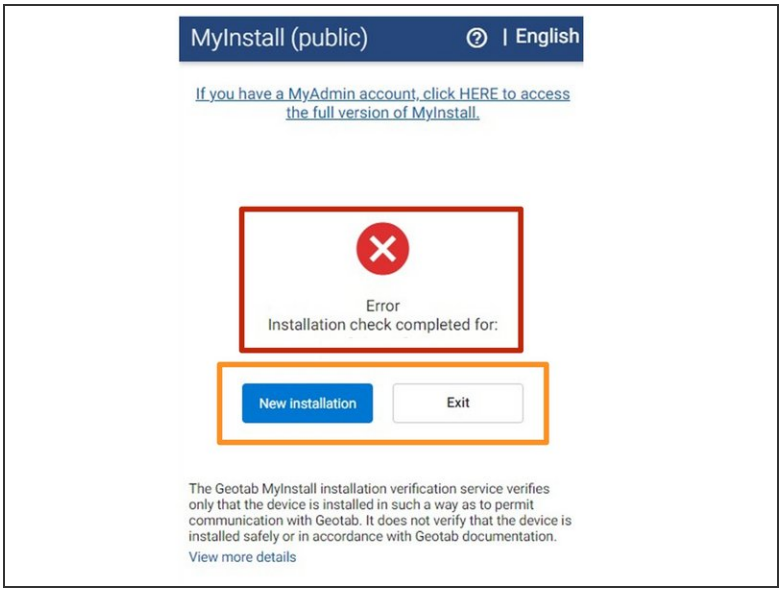

- If the installation check finishes without errors, a ***Success!*** message appears.
- Press **New installation** to check another installation, or press **Exit** when done.
- If the installation check encounters any errors, an ***Error*** message appears.
- Select **New installation** to check another installation or press **Exit** when done.

© 2024 - Uncontrolled If Printed

— Important Safety Information and Limitations of Use

ⓘ For the latest version of the Limitations of Use, please visit: http://goo.gl/k6Fp0w

⚠ Your in-vehicle devices must be kept clear of debris, water and other environmental contaminants. Failure to do so may result in units malfunctioning or short-circuiting, which can lead to a fire hazard and cause loss or serious injury.

ⓘ Do not attempt to remove the devices from the vehicle in which they are originally installed for installation in another vehicle.

- Not all vehicles share compatibility, and doing so may result in unexpected interactions with your vehicle, including sudden loss of power or shutdown of the vehicle's engine while in operation or cause your vehicle to operate poorly or erratically and cause serious injury and/or vehicle damage.

ⓘ This product does not contain any user-serviceable parts. Configuration, servicing, and repairs must only be made by an authorized reseller or installer. Unauthorized servicing of these products will void your product warranty.

ⓘ The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

- Hereby, Geotab (Address: 2440 Winston Park Drive, Oakville, Ontario L6H 7V2, Canada, Phone number: 1 (877) 436-8221) declares that the radio equipment type 'telematics device' is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available here.

⚠ **WARNING:** Cancer and Reproductive Harm

© 2024 - Uncontrolled If Printed