

G2 Face Mount Header Installation

Written By: Todd Lucas

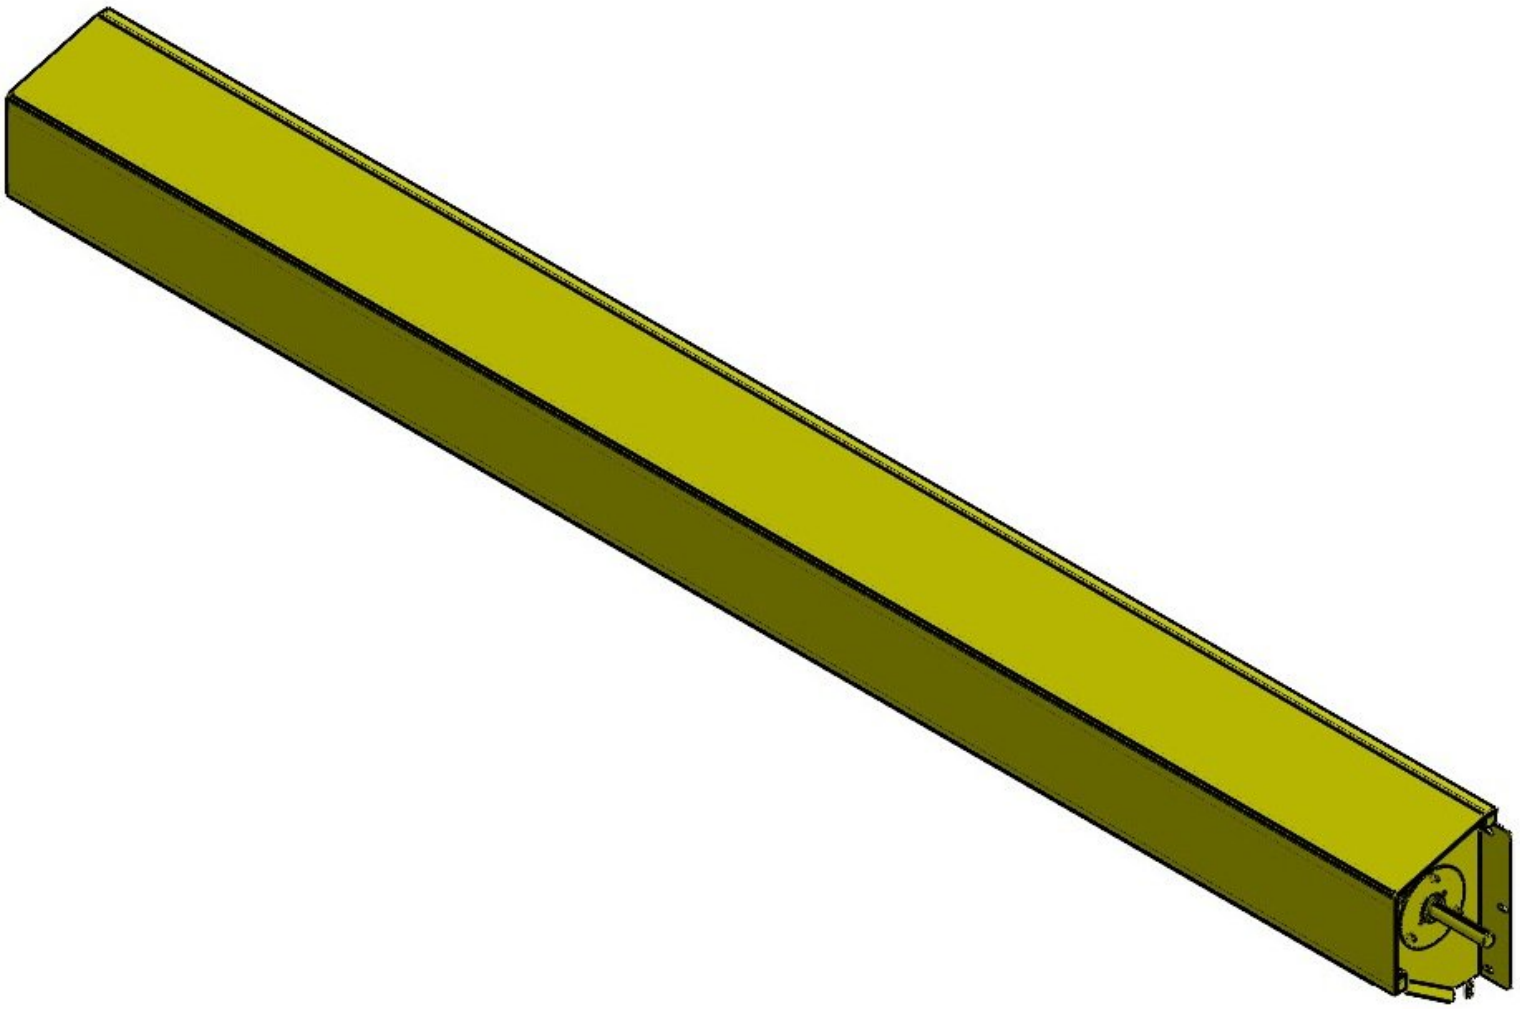

Step 1 — Raise and Attach Roll Header Assembly

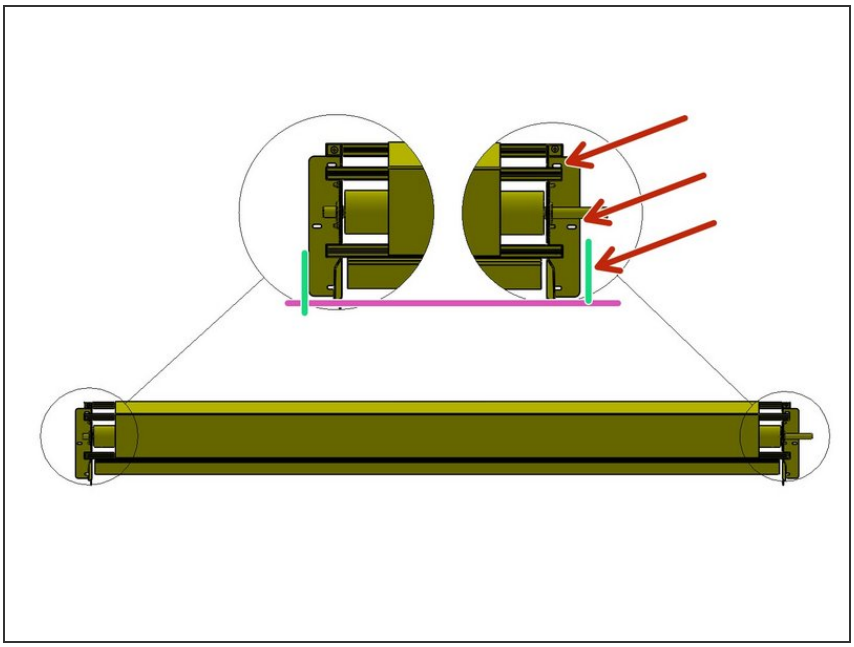

- Using two (2) people, and two ladders at minimum, raise the Roll Header Assembly to fit between, and above, your markings on the wall.
- Trace the insides of the Header Bracket's three (3) mounting slots onto the wall surface.
- ⓘ Be sure that the Mounting Bracket's bottom edge is on the height line, and that the outer edge is on your vertical/width line.
- Predrill pilot holes for the mounting hardware at the centers of the traced locations. Using adequate mounting screws or bolts (depending on your building/surface material) to attach the Roll Header Bracket to each side of the opening.
- Raise the Roll Header Assembly into place on the wall, and loosely secure with three (3) sets of mounting hardware per side using screws or bolts that are adequate to your building/surface material.
- Check the Header Assembly for level, and fully tighten all six sets of hardware.
- At this point leave the Roll Assembly tied off and held in place as it comes.

© 2026