

Breakdown Frame -Screen Assembly

Written By: Todd Lucas

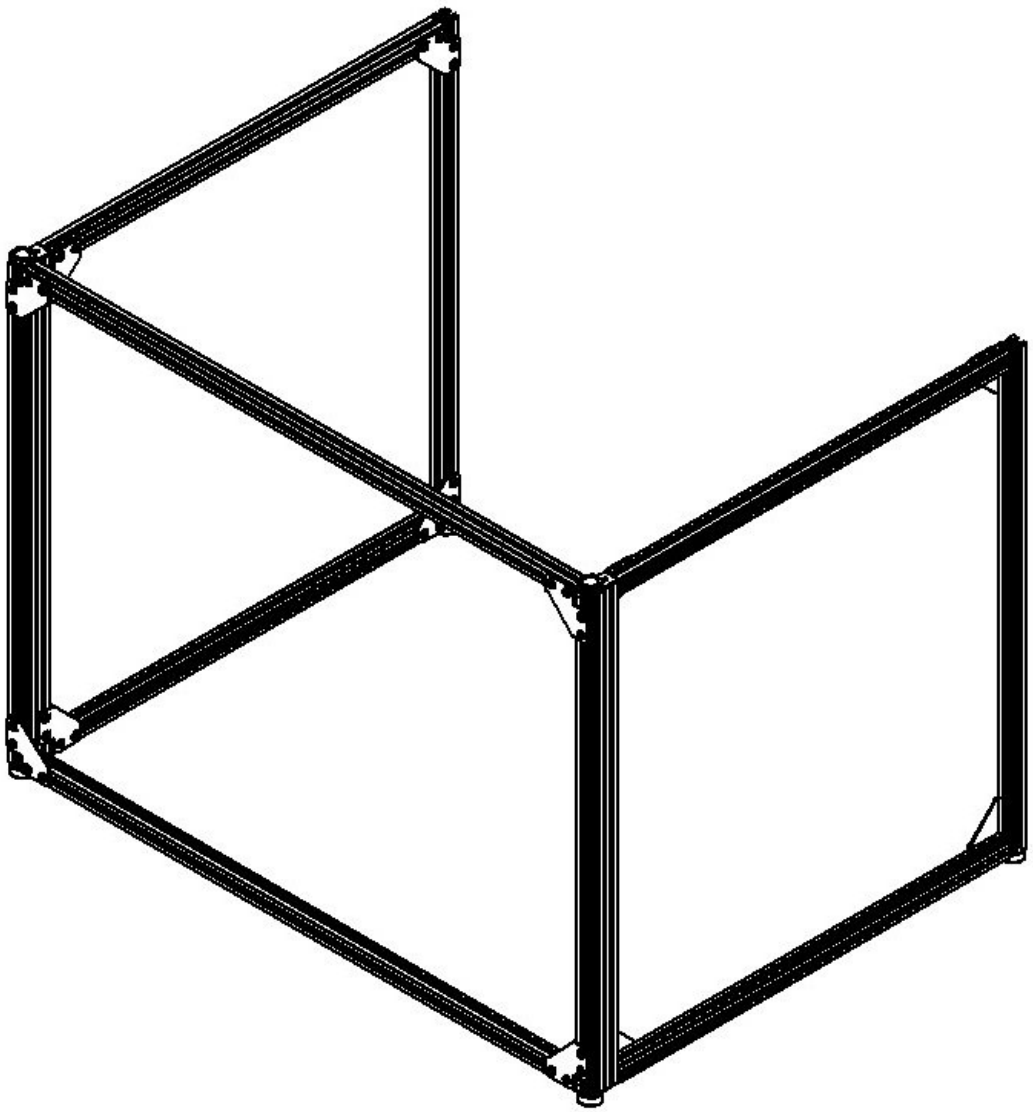


Step 1 — Overview - Breakdown Frame Assembly

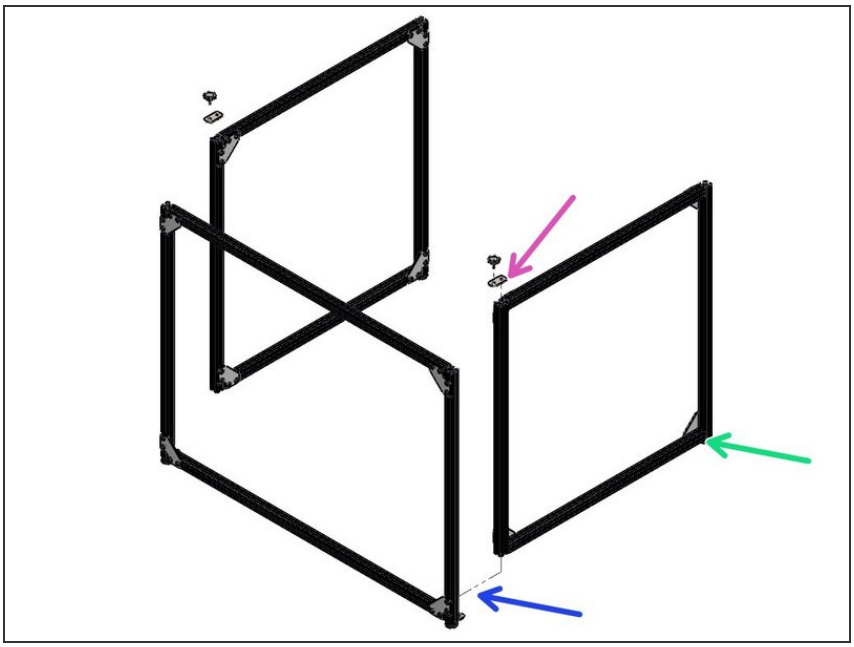


- At the Bottom, Slide a Side Panel Post onto the Front Panel's Peg.
- At the Top, use a Thumb Screw and a Connecting Plate to fix the Side Panels to the Front Panel.
- Level the Screen Unit.

Step 2 — Bottom - Side and Front Panel Assembly

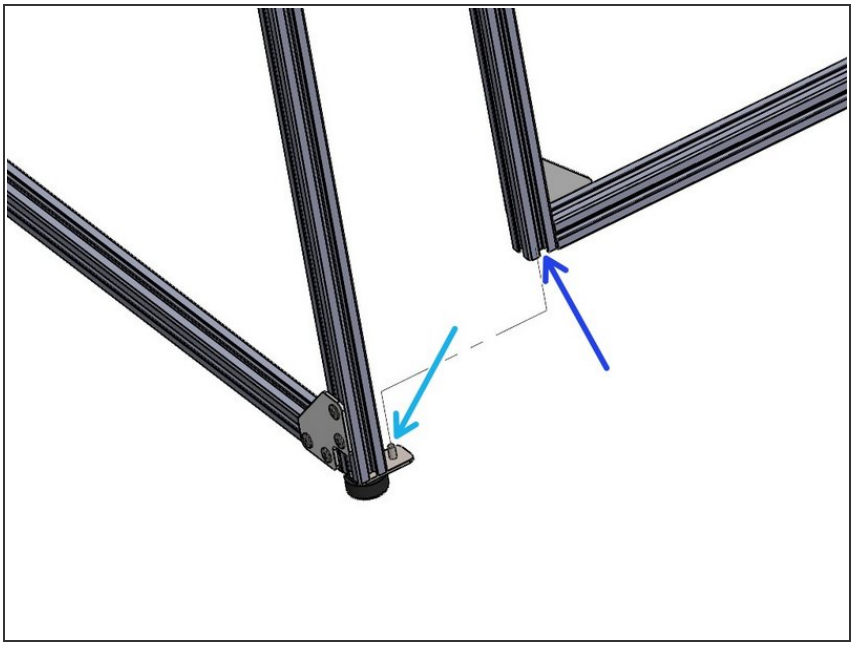


- Slide the Hole in the Side Panel Post onto
- the Front Panel's (factory Installed) Peg.

Step 3 — Top - Side and Front Panel Assembly

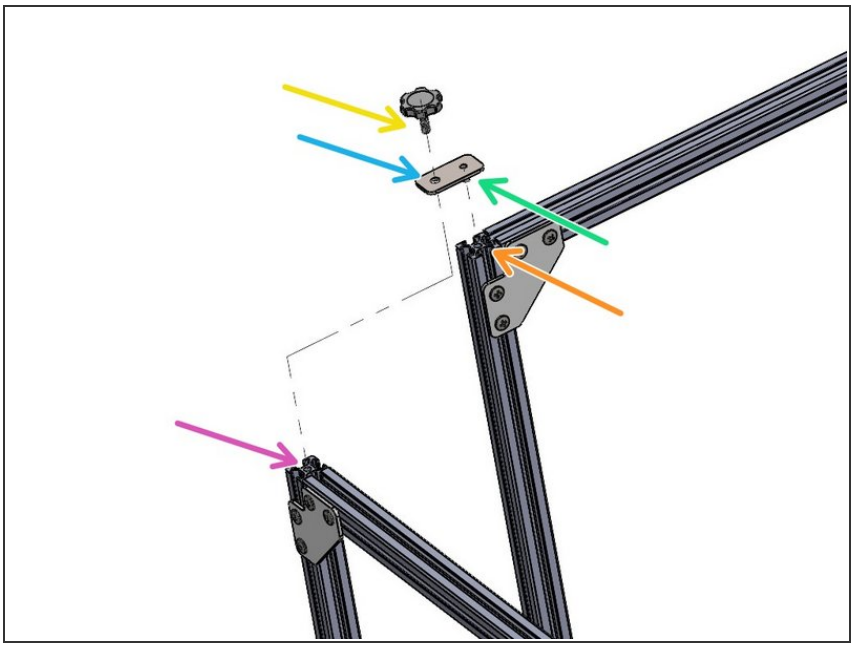

- Slide the Peg of the Connecting Plate
  - into the Side Panel's Post.
- Slide the Thumb Screw
  - through the Hole in the Connecting Plate
  - then thread it into the Front Panel Post.

Step 4 — Level the Unit

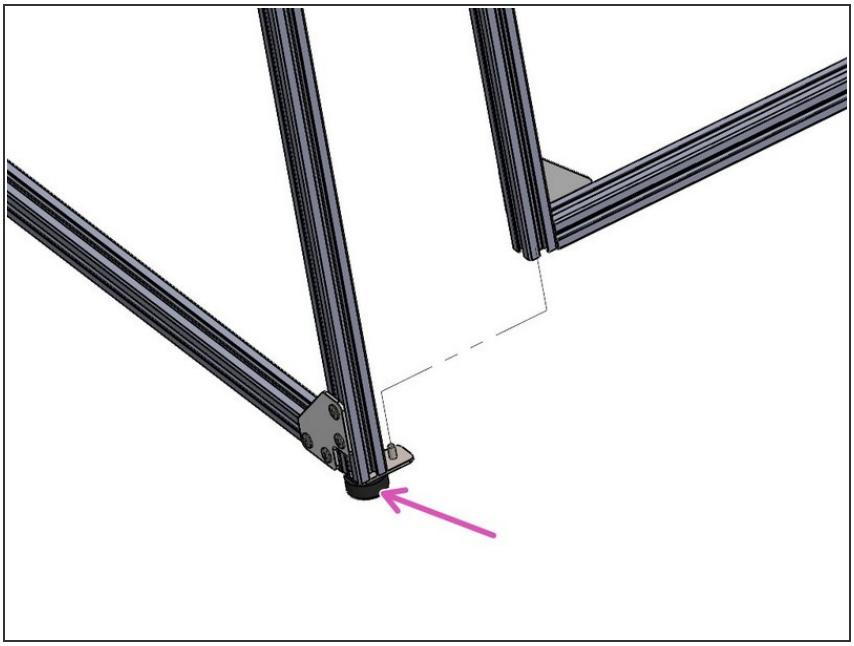

- Level the Unit by adjusting the threaded Leveling Feet.