

X091 Break-Away Track Installation

Written By: Todd Lucas

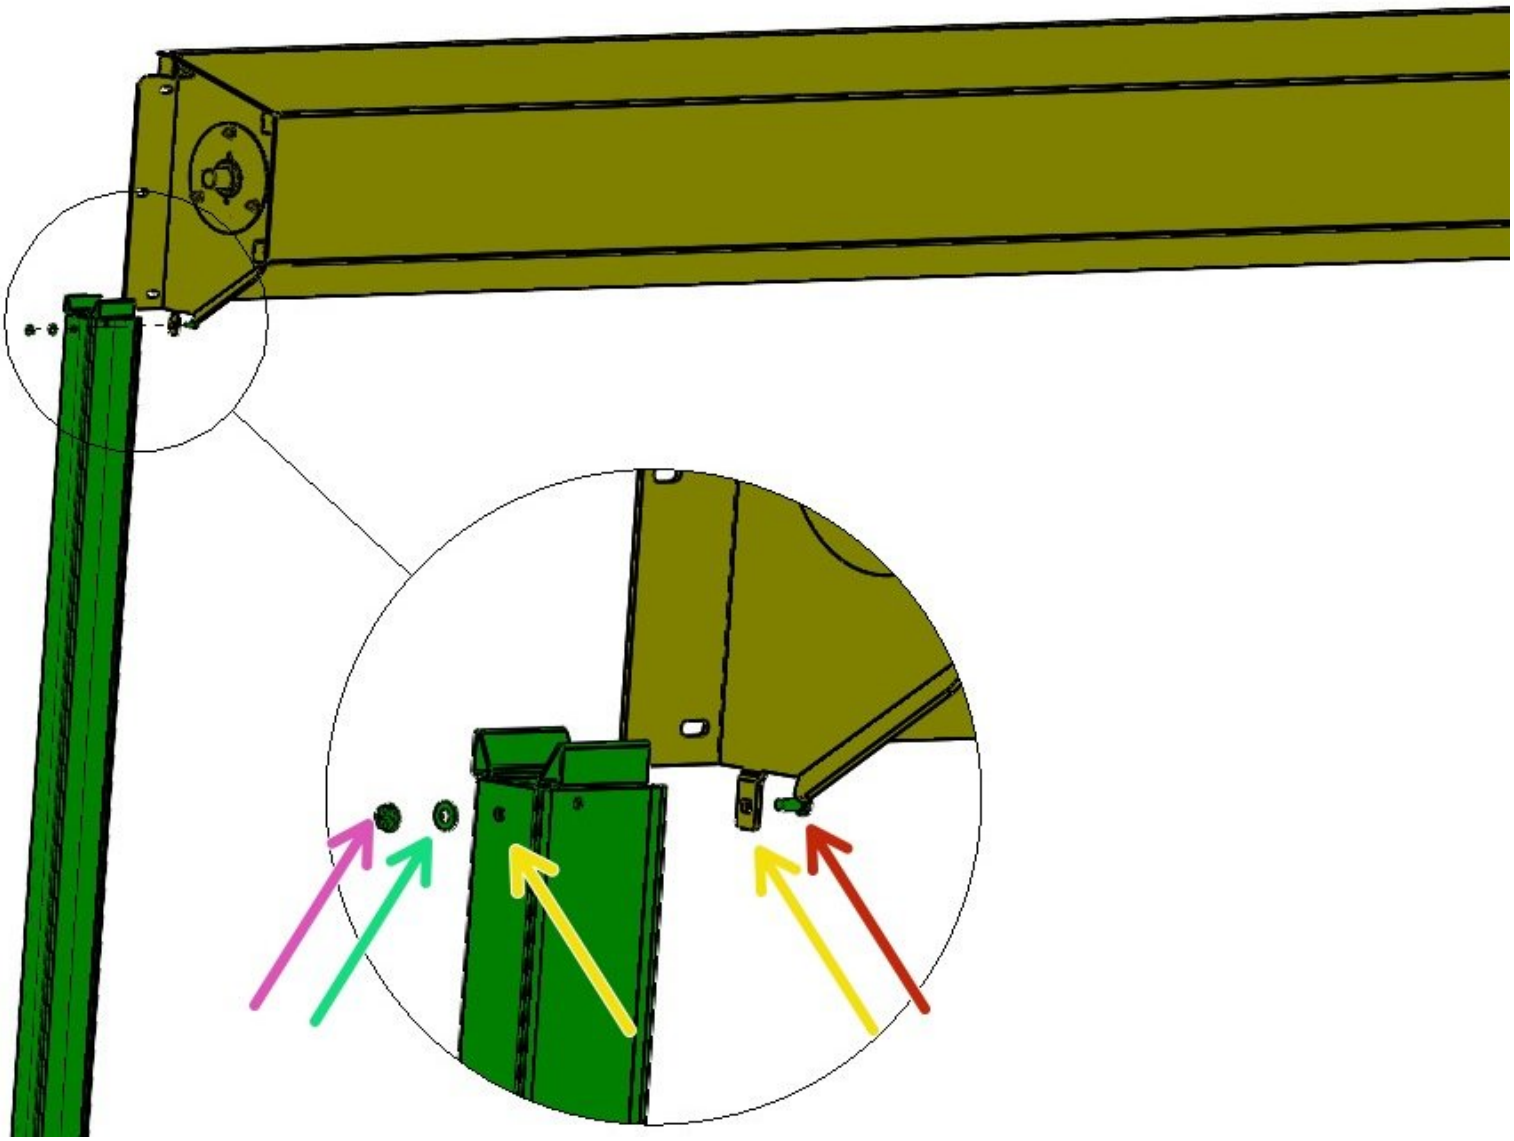


Step 1 — Hang the Track Assemblies

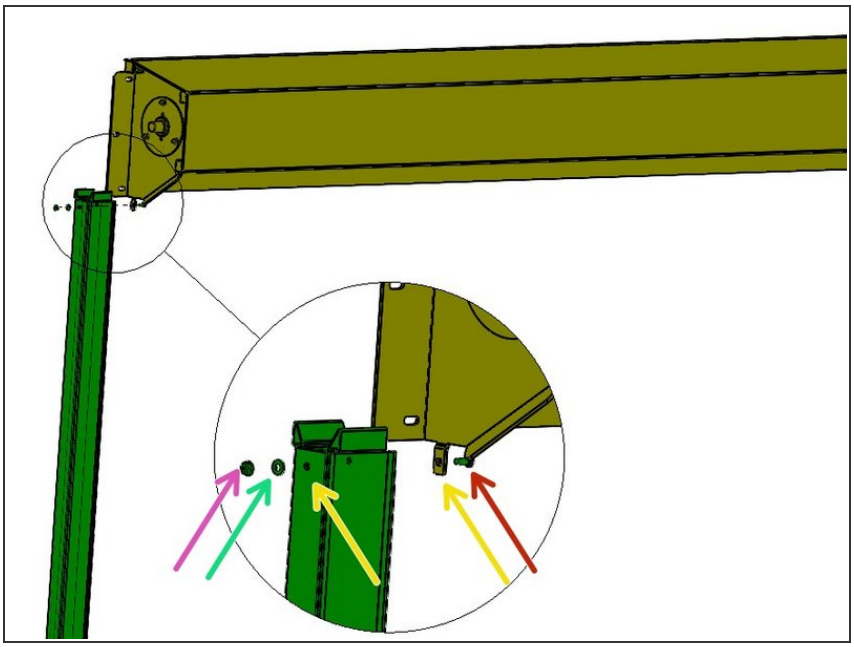

- The Track assembly mounts to the outside of the tab of the Header Assembly Mounting Bracket.
- Insert the Carriage Bolt through the Header Bracket Tab from the inside.
- Move the Track to the Outside of the Header Bracket, then push the Bolt fully through the Square hole in the Tab and the Track.
- Slide the Washer onto the Bolt from the outside of the Track.
- Then snug the Hex Nut on the Bolt.

Step 2 — Track Angle Support Installation

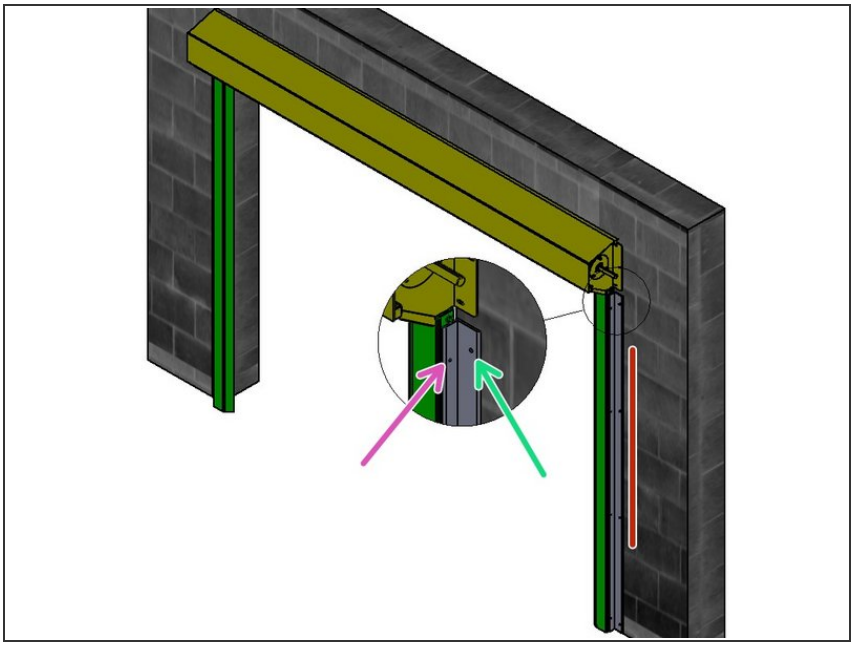

- Drill (4) .28 Holes 1.48" from Longer Face of the Metal Angle.
- Transfer and drill the Hole locations onto the Back Face of the Track.
- Loosely fasten the Angle to the Track.
- Plumb the Track.
- Secure the Angle to the Mounting Surface with appropriate Hardware.