

G2 Face Mount Chain Hoist Installation

X077

Written By: Todd Lucas

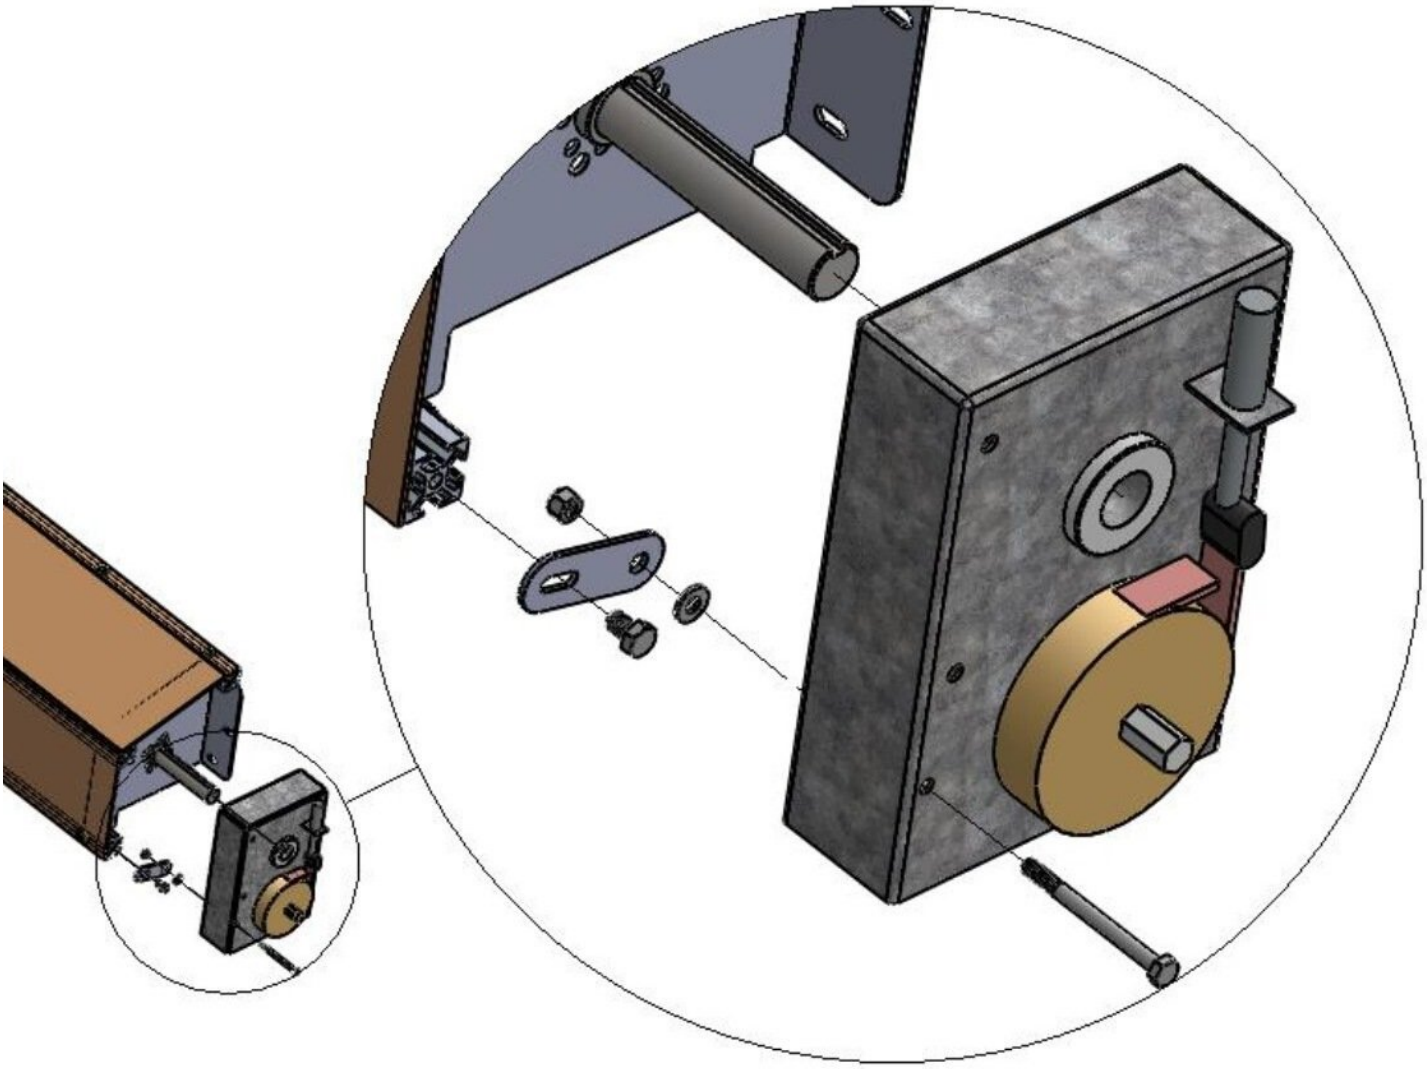

Step 1 — Assemble/Install Chain Hoist

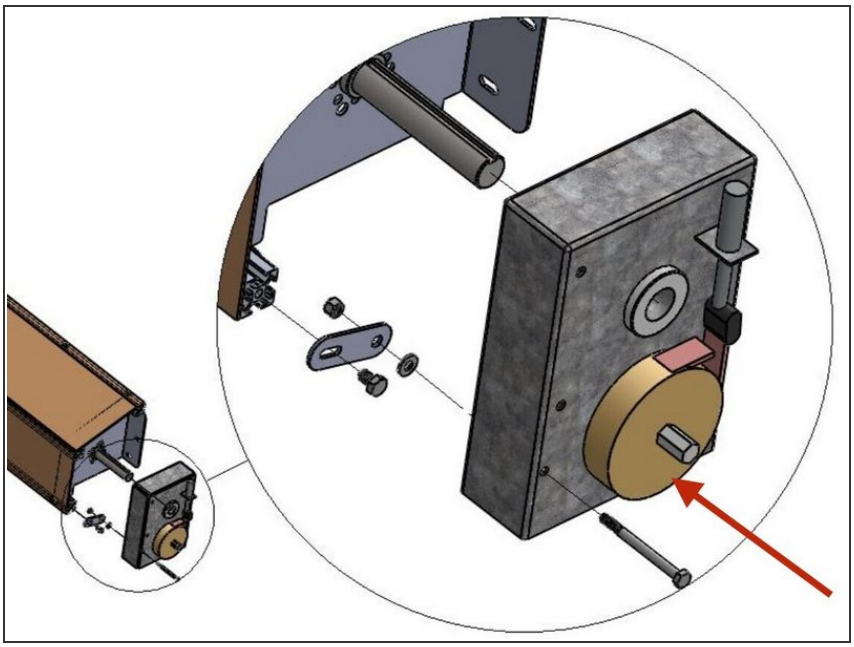

- Insert the Long Bolt through the bottom front hole in the Hoist through the Mounting Bracket hole.
- Loosely secure this with the Lock Washer and Nut.
- Slide the Hoist Assembly onto the Drive Shaft with the Shaft Key.
- Install a Hex Bolt through the Mounting Bracket Slot into the end of the Door's Bottom Spreader Bar.
- Fully Tighten the Lock Washer and Nut.

⚠ **Be sure the Brake is oriented facing towards the right side of the hoist regardless of which side the Chain Hoist is mounted to. The Brake will be facing away from the Header Box on right hand installation, and the Brake will be facing towards the Header Box on left hand installation.**