


Mount G1 STD Roll Header Assembly

Written By: Todd Lucas

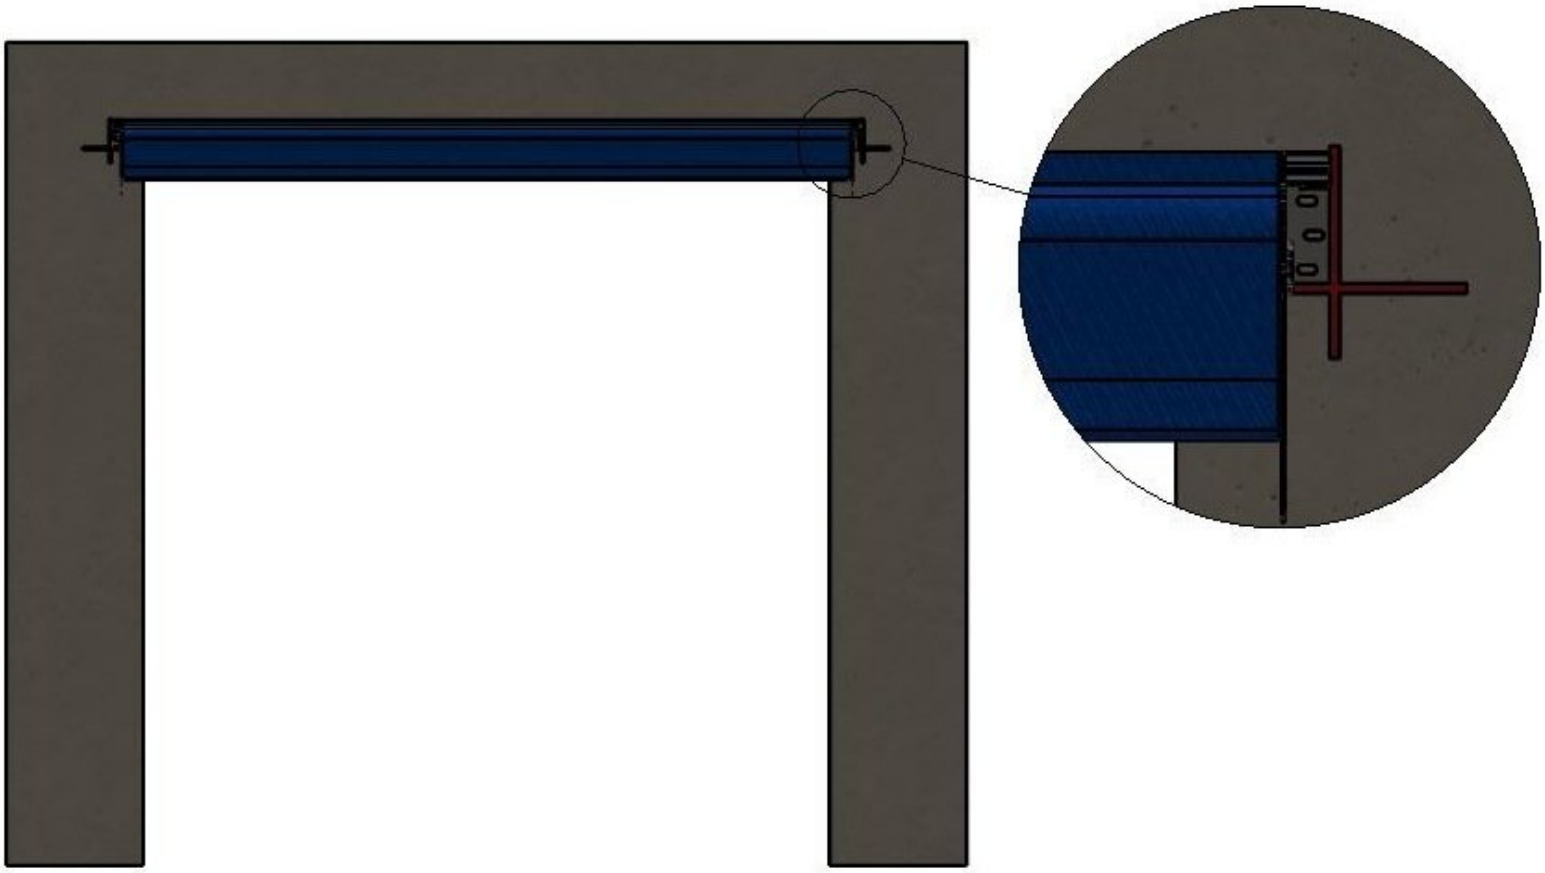

Step 1 — Mount the Door Header

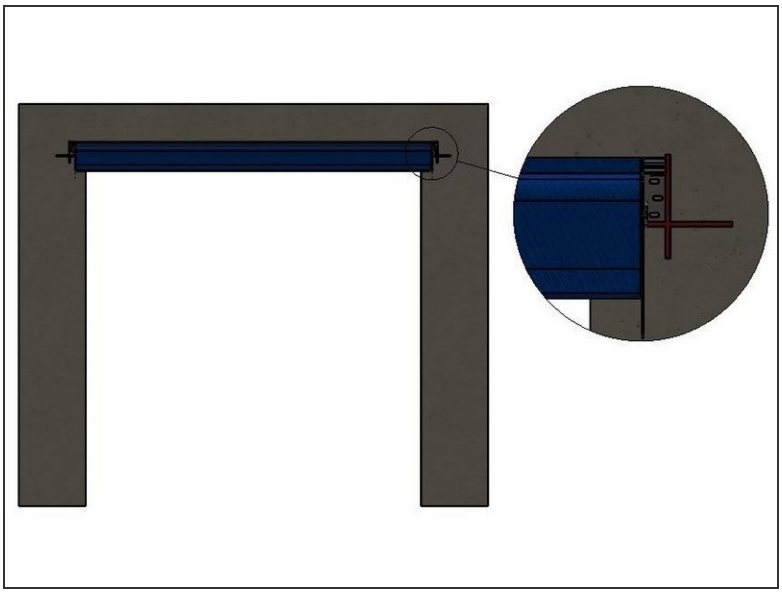

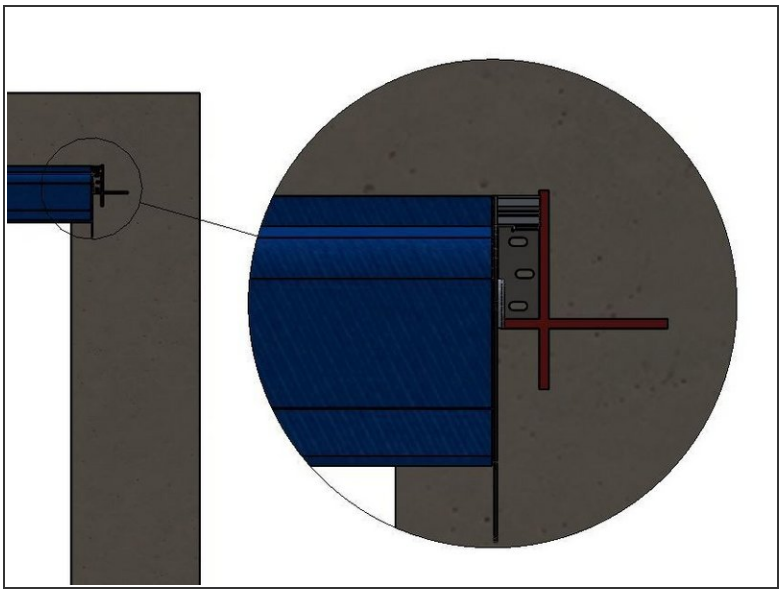

⚠ Use two (2) people, and two ladders (at minimum).

- Raise the Roll Header Assembly into place on the wall.
- The Bottom and Outside edges of the Header Bracket Mounting Flanges should fit inside of Marks on the Mounting Surface.
- Transfer the (3) Slot locations, per side, onto the Mounting Surface.
- Prepare the locations for Hardware appropriate to the building material.
- Loosely secure with three (3) sets of mounting hardware per side.
- Level the Header Assembly, and fully tighten all six sets of hardware.

ⓘ At this point leave the Door/Web Roll tied off and held in place as it comes.

© 2026